

S90 Portable Terminal User Manual

V1.00.01



PAX Technology, Inc.

All Rights Reserved.



Preface

BroadPOS Terminal for S90 V1.00.01 User Manual Version: V20120308 Document No: BT–S90-UM Status: [] Draft [★] Release [] Modify Copyright © 2013, PAX Technology, Inc. All rights reserved

The Programs (which include both the software and documentation) contain proprietary information; they are provided under a license agreement containing restrictions on use and disclosure and are also protected by copyright, patent, and other intellectual and industrial property laws. Reverse engineering, disassembly, or decompile of the Programs, except to the extent required to obtain interoperability with other independently created software or as specified by law, is prohibited.

The information contained in this document is subject to change without notice. If you find any problems in the documentation, please report them to us in writing. This document is not warranted to be error-free. Except as may be expressly permitted in your license agreement for these Programs, no part of these Programs may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose.

Security Notice: No part of this publication may be copied, distributed, stored in a retrieval system, translated into any human or computer language, transmitted, in any form or by any means, without the prior written consent of PAX Technology, Inc.

PAX is a registered trademark of PAX Corporation and/or its affiliates. Other names may be trademarks of their respective owners.

Technical Support

If you encounter a problem while installing, registering or operating this product, please make sure that you have read the documentation. If you cannot resolve the Issue, please contact us.

PAX support operates 24 hours a day, 7 days a week. Your level of access to this Service is governed by the support plan arrangements made between PAX and your Organization. Please consult this support plan for further information about your entitlements, including the hours when telephone support is available to you. Technical Support Contact Information:

Phone: 904-900-3741

Email: <u>support@pax.us</u>

URL: http://www.pax.us/



TABLE OF CONTENTS

TABLE OF	CONTENTS	I
REVISION HI	STORY	v
1. GENER	AL INFORMATION	1
1.1 TH	HE PURPOSE OF THIS DOCUMENT	1
	OCUMENT CONVENTION	
1.3 D	ocument Structure	3
1.4 A	uthorized Use Permission	4
	OCUMENT REFERENCE	
	0 POS TERMINAL OVERVIEW	
	OS TERMINAL SCREENS	
2.2 PC	OS TERMINAL COMMUNICATION OPTIONS	7
2.3 PC	OS TERMINAL KEYPAD LAYOUT	
2.3.1	Key Definitions	
2.3.2	Key Assignments	
2.3.3	Keypad Layout	
	O LOAD APPLICATION	
	O DO TRANSACTION	
4.1 Ci	REDIT TRANSACTION	
4.1.1	Credit Sale	
	ple of Credit sale receipt	
4.1.2	Credit Return	
•	ble of Credit Return receipt	
4.1.3	Credit Auth	
	ole of Credit Auth receipt	
4.1.4	Credit PostAuth Die of Credit PostAuth receipt	
4.1.5	Credit Forced	
	ble of Credit Forced receipt	
4.1.6	Credit Void Sale	
	ble of Credit Void Sale receipt	
4.1.7	Credit Void Return	
Samp	ble of Credit Void Return receipt	
4.1.8	Credit Void Post-Auth	
Samp	ole of Credit Void Post-Auth receipt	
4.1.9	Credit Void Forced	39
	ble of Void Forced receipt	
	EBIT TRANSACTION	42
		42
	ple of Debit sale receipt	
4.2.2	Debit Return	
	ble of Debit Return receipt	
	ST TRANSACTION	
4.3.1	EBT Sale	
4.3.2	ble of EBT sale receipt EBT Return	
	ble of Debit Return receipt	
4.3.3	EBT Balance Inquiry	
	ble of EBT Balance Inquiry receipt	
	IFT TRANSACTION	
4.4.1	Gift Sale	
	ble of GIFT sale receipt	
4.4.2	Gift Return	
Samp	ble of Gift Return receipt	
4.4.3	Gift Add Value	64

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be



	Sa	nple of Gift Add Value receipt	
	4.4.4	Gift Issue	67
	Sa	nple of Gift Issue receipt	69
	4.4.5		
	Sa	nple of Gift Void receipt	
	4.4.6	- 3	
	Sa	nple of Gift Balance Inquiry receipt	
	4.5	CASH TRANSACTION	75
	4.5.1		
	Sa	nple of Cash sale receipt	77
	4.5.2		
	Sa	nple of Cash Return receipt	
	4.5.3		
	Sa	nple of Cash Void Sale receipt	
	4.5.4		
		nple of Cash Void Return receipt	
	4.6	COMMERCIAL CARDS	
5.	FUNG	TION OPTION	
	5.1	Report	89
	5.2	Ватсн	89
	5.2.1	Batch Close	89
	5.2.2	Force Batch	92
	5.3	Review	94
	5.4	Find	95
	5.5	COUNTER TIP	96
	Sam	le of Counter Tip receipt	97
	5.6	TIP ADJUST	98
	5.6.1		
	5.7	REPRINT	.101
6.	•••	REPRINT	
6.	•••		103
6.	MEN	U OPTION	103 103
6.	MEN 6.1	U OPTION Accessing the Main Menu Main Menu Options	103 103 104
6.	MEN 6.1 6.2	U OPTION Accessing the Main Menu Main Menu Options Reports	103 103 104 105
6.	MEN 6.1 6.2 6.3 <i>6.3.1</i>	U OPTION Accessing the Main Menu Main Menu Options Reports Default Report	103 103 104 105 <i>106</i>
6.	MEN 6.1 6.2 6.3 <i>6.3.1</i> <i>6.3.2</i>	U OPTION Accessing the Main Menu Main Menu Options Reports Default Report Current Report	103 103 104 105 <i>106</i> 107
6.	MEN 6.1 6.2 6.3 6.3.1 6.3.2 6.3.3	U OPTION Accessing the Main Menu Main Menu Options Reports Default Report Current Report History Report	103 103 104 105 106 107 114
6.	MEN 6.1 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4	U OPTION Accessing THE MAIN MENU MAIN MENU OPTIONS REPORTS Default Report Current Report History Report Display Transactions	103 104 105 106 107 114 117
6.	MEN 6.1 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4 6.3.5	U OPTION	103 104 105 106 107 114 117 119
6.	MEN 6.1 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4 6.3.5 6.3.6	U OPTION Accessing THE MAIN MENU MAIN MENU OPTIONS REPORTS Default Report Current Report History Report Display Transactions Tip Report File System Report	103 104 105 106 107 114 117 119 122
6.	MEN 6.1 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4 6.3.5 6.3.6 6.4	U OPTION Accessing the Main Menu Main Menu Options Reports Default Report Current Report History Report Display Transactions Tip Report File System Report Merchant Settings	103 104 105 106 107 114 117 119 122 123
6.	MEN 6.1 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4 6.3.5 6.3.6 6.4 6.4.1	U OPTION Accessing the Main Menu Main Menu Options Reports Default Report Current Report History Report Display Transactions Tip Report File System Report MERCHANT SETTINGS Authorizations	103 104 105 106 107 114 117 119 122 123 124
6.	MEN 6.1 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4 6.3.5 6.3.6 6.4 6.4.1 6.4	U OPTION Accessing the Main Menu Main Menu Options. Reports Default Report Current Report History Report Display Transactions Tip Report File System Report MERCHANT SETTINGS Authorizations	103 104 105 106 107 114 117 119 122 123 124 .124
6.	MEN 6.1 6.2 6.3 6.3.2 6.3.3 6.3.4 6.3.5 6.3.6 6.4 6.4.1 6.4 6.4	U OPTION Accessing THE MAIN MENU MAIN MENU OPTIONS. REPORTS	103 104 105 106 107 114 117 122 123 124 .124 .126
6.	MEN 6.1 6.2 6.3 6.3.2 6.3.3 6.3.4 6.3.5 6.3.6 6.4 6.4.1 6.4 6.4 6.4 6.4 6.4	U OPTION Accessing THE MAIN MENU MAIN MENU OPTIONS. REPORTS Default Report Current Report History Report Display Transactions Tip Report File System Report MERCHANT SETTINGS Authorizations	103 104 105 106 107 114 117 122 123 124 .124 .126 .127
6.	MEN 6.1 6.2 6.3 6.3.2 6.3.3 6.3.4 6.3.5 6.3.6 6.4 6.4.1 6.4 6.4 6.4 6.4 6.4 6.4 6.4 6.4	U OPTION Accessing THE MAIN MENU MAIN MENU OPTIONS. REPORTS	 103 104 105 106 107 114 117 119 122 123 124 .124 .126 .127 128
6.	MEN 6.1 6.2 6.3 6.3.2 6.3.3 6.3.4 6.3.5 6.3.6 6.4 6.4.1 6.4 6.4 6.4 6.4 6.4 6.4 6.4 6.4	U OPTION. Accessing THE MAIN MENU MAIN MENU OPTIONS. REPORTS Default Report Current Report History Report Display Transactions Tip Report File System Report MERCHANT SETTINGS Authorizations. 1.1 Trans. Types 1.2 Card Types 1.3 Debit Prompt Security Settings	 103 104 105 106 107 114 117 119 122 123 124 .124 .126 .127 128 .128
6.	MEN 6.1 6.2 6.3 6.3.2 6.3.3 6.3.4 6.3.5 6.3.6 6.4 6.4.1 6.4 6.4 6.4 6.4 6.4 6.4 6.4 6.4	U OPTION. Accessing THE MAIN MENU MAIN MENU OPTIONS. REPORTS Default Report Current Report History Report Display Transactions Tip Report File System Report MERCHANT SETTINGS Authorizations. 1.1 Trans. Types 1.2 Card Types 1.3 Debit Prompt Security Settings .2.1 User Password.	 103 104 105 106 107 114 117 119 122 123 124 .124 .126 .127 128 .130
6.	MEN 6.1 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4 6.3.5 6.3.6 6.4 6.4.1 6.4 6.4 6.4 6.4 6.4 6.4 6.4 6.4	U OPTION	 103 104 105 106 107 114 117 119 122 123 124 .124 .126 .127 128 .130 .132
6.	MEN 6.1 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4 6.3.5 6.3.6 6.4 6.4.1 6.4 6.4 6.4 6.4 6.4 6.4 6.4 6.4	U OPTION	 103 104 105 106 107 114 117 119 122 123 124 .124 .126 .127 128 .130 .132 .133
6.	MEN 6.1 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4 6.3.5 6.3.6 6.4 6.4.1 6.4 6.4 6.4 6.4 6.4 6.4 6.4 6.4	U OPTION Accessing THE MAIN MENU MAIN MENU OPTIONS. RePORTS Default Report Current Report History Report Display Transactions Tip Report File System Report MERCHANT SETTINGS Authorizations. 1.1 Trans. Types 1.2 Card Types 1.3 Debit Prompt Security Settings .2.1 User Password .2.2 Batch .2.3 Security Card .2.4 Card Manual Entry Edit Header/Trailer	 103 104 105 106 107 114 117 119 122 123 124 .126 .127 128 .130 .132 .133 134
6.	MEN 6.1 6.2 6.3 6.3.1 6.3.2 6.3.3 6.3.4 6.3.5 6.3.6 6.4 6.4 6.4 6.4 6.4 6.4 6.4 6	U OPTION	 103 104 105 106 107 114 117 119 122 123 124 .124 .126 .127 128 .130 .132 .133 134 135
6.	MEN 6.1 6.2 6.3 6.3.2 6.3.3 6.3.4 6.3.5 6.3.6 6.4 6.4.1 6.4 6.4 6.4 6.4 6.4 6.4 6.4 6.4	U OPTION	103 103 104 105 106 107 114 117 119 122 123 124 .124 .126 .127 128 .130 .132 .133 134 135 137
6.	MEN 6.1 6.2 6.3 6.3.2 6.3.3 6.3.4 6.3.5 6.3.6 6.4 6.4.1 6.4 6.4 6.4.2 6.4 6.4.2 6.4 6.4 6.4 6.4 6.4 6.4 6.4 6.4	U OPTION ACCESSING THE MAIN MENU MAIN MENU OPTIONS. REPORTS Default Report Current Report History Report Display Transactions Tip Report File System Report MERCHANT SETTINGS Authorizations 1.1 Trans. Types 1.2 Card Types 1.3 Debit Prompt Security Settings 2.2 Batch 2.3 Security Card 2.4 Card Manual Entry Edit Header/Trailer Set Batch Time Additional Prompts Set Batch Time	103 104 105 106 107 114 117 119 122 123 124 .123 .124 .125 .128 .130 .132 .133 .134 135 .137
6.	MEN 6.1 6.2 6.3 6.3.2 6.3.3 6.3.4 6.3.5 6.3.6 6.4 6.4.1 6.4 6.4 6.4 6.4 6.4 6.4 6.4 6.4	U OPTION	103 104 105 106 107 114 117 119 122 123 124 .124 .124 .126 .127 128 .130 .131 133 134 135 137 .139 .141
6.	MEN 6.1 6.2 6.3 6.3.2 6.3.3 6.3.4 6.3.5 6.3.6 6.4 6.4.1 6.4 6.4 6.4 6.4 6.4 6.4 6.4 6.4	U OPTION	103 104 105 106 107 114 117 119 122 123 124 .124 .126 .127 128 .120 .131 .132 .133 134 135 137 .139 .141
6.	MEN 6.1 6.2 6.3 6.3.2 6.3.3 6.3.4 6.3.5 6.3.6 6.4 6.4.1 6.4 6.4 6.4 6.4 6.4 6.4 6.4 6.4	U OPTION	103 104 105 106 107 114 117 119 122 123 124 .125 .126 .127 128 .120 .123 .124 .125 .130 .131 134 135 .137 .139 .141 .142

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not beduplicated, published, or disclosed without PAX prior written permission.ii



6.4.7	Clerk/Server Name	145
6.5 O	PERATION SETTINGS	146
6.5.1	No Paper Mode	147
6.5.2	Buzzer Setup	148
6.5.3	Operation Mode	149
6.5.4	Battery Saver	150
6.5.5	Disclaimer Setup	151
6.5.6	Halo Setup	152
6.5.7	Print Setup	154
6.5.8	Receipt Print	158
6.5.9	Peripherals	160
6.6 H	OST SETTINGS	161
6.6.1	Host Paramerters	162
6.6.2	Host Phones	163
6.6.2		
6.6.2		
6.6.3	Print EDC Setup	
6.6.4	Host URL Params	
6.6.5	AutoDial Setup	
	STEM SETTINGS	
6.7.1	Date/Time Setup	
6.7.2	Batch Number	
6.7.3	Working Mode	
6.7.3		
6.7.3		
6.7.3 <i>6.7.4</i>		
6.7.4 6.7.5	Pre-Dial Call	
	Database 1 Void191	191
	.2 Post Auth	193
	.3 Clear Database	
	.4 Clear Reversal	
6.7.6 P	in Pad Settings	196
6.7.7 K	eys Injection	
6.7.8 A	pplication Management	
6.7.8	1 Activate	
6.7.8	.2 App Update	
	.3 Configuration	
	.4 Terminal SN	
	.5 App Info	
	Iain Communication	
	ackup Communication	
	laximum Tries	
	onnect Timeout	
	eceive Timeout	
	ial Parameters	
	/ireless Parameters	211
	.1 APN 211	212
	.2 User Name	
	.4 Provision	
	/iFi Parameters	
	.1 Security	
	.2 Password	
	- RECEIPTS	
	dit Card Receipts Template	
	pit Card Receipts Template	

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not beduplicated, published, or disclosed without PAX prior written permission.iii



A.3 EBT Card Receipts Template	224
A.4 Gift Card Receipts Template	227
A.5 Cash Receipts Template	230
APPENDIX B - TROUBLESHOOTING	232
B.1 General Troubleshooting	232
B.2 Communication Errors	237
B.3 Printer Troubleshooting	238
B.4 GPRS Troubleshooting	239
B.5 Download Troubleshooting	240
APPENDIX C – GLOSSARY	



Revision History

Date	Version	Ву	Description of Change	Contact
1/7/2013	1.00.01	B. McDonald	Re-Release	



1. General Information

Note

This section explains the general information of this document and try to give you an overview of this document.

1.1 The Purpose of This Document

This document provides the detailed description for all user functions, which can be performed on the POS terminal. Please note, that some features are dependent upon the host supporting them; as a result, not all features are available on all applications. The document is intended for use by the Software Engineers developing and maintaining the Payment Application design for the US Payment Card Industry, also for use by customer and Independent Sells Organization (ISO). The document should be maintained along with the application itself.

It is required that this document is stored in a safe place for future reference and modifications.



1.2 Document Convention

- *Warning* Failure to follow specific procedures and practices may result in personal injury.
- *Caution* Failure to follow specific procedures and practices may result in damage to the POS terminal device or other equipment.
- *Note* Helpful hints and other important information about the use of the POS terminal device.
- CHART FOR STEP # Due to keyboard differences, actions will differ with from one POS terminal model to another. Make sure to match the action with the correct model of the POS terminal being used.

- Denotes a definition or explanation about the User Function in the step/action table that follows.



- Denotes an example of when, why and what condition the User Function should be performed.

P- Denotes a warning note about the User that the operation would cause serious consequent problem.



1.3 Document Structure

This document first introduces general information of BroadPOS Terminal Application for S90; secondly, it focuses on BroadPOS Terminal Application for S90 – USPOSCore; thirdly, it introduces the glossary.

This manual contains the following sections:

Chapter 1, General Information Chapter 2, PAX S90 POS Terminal Overview Chapter 3, How to Load Application Chapter 4, How to Do Transaction Chapter 5, Function Option Chapter 6, Menu Option Appendix A: Receipts Appendix B: Troubleshooting Appendix C: Glossary



1.4 Authorized Use Permission

Unless explicitly stated otherwise all content included on this document, such as but not limited to text, images, logos, and slogans, is the property of PAX and is protected by U.S. and international copyright laws.

Any other use, including the reproduction, modification, display or distribution, of the content on this system is strictly prohibited. No portion of this system may be reproduced, duplicated, copied, sold, resold, or otherwise exploited for any purpose.



1.5 Document Reference

NO.	Title	Date	Version
1			
2			
3			



2. PAX S90 POS Terminal Overview

2.1 POS Terminal Screens

The Screen representations shown in this manual are general screens. The following is an example of the idle and Main Menu screens for each of the different LCD Display types.

A standard screen and font format should accommodate 21 characters per line and up to 5 lines of text.


Screen Display

Idle Prompt Screen:

CREDIT

SALE

INPUT ACCOUNT

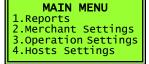

Main Menu Screen:

Function Menu Screen:





2.2 POS Terminal Communication Options

The following chart summarizes the information regarding the different POS terminal model communication options.

Model	Land Line	GPRS	CDMA	ETHERNET	WI-FI
S90	\checkmark	\checkmark	\checkmark		



2.3 POS Terminal Keypad Layout

All POS terminals have a number of keys in common. These keys are the same and perform the same function regardless of the POS Terminal model. Other keys are unique to either one model or a series of models.

2.3.1 Key Definitions

Note All POS terminals have a number of keys in common. These keys are the same and perform the same function regardless of the POS Terminal model. Other keys are unique to either one model or a series of models.

Key	FUNCTION				
ON / OFF	Powers the terminal On & Off.				
	ATM1	Not used.			
	ATM2	Not used.			
Shortcut	АТМЗ	In main screen - cycles through the different EDC types, Credit,			
Shoricut	ATIVIS	Debit Cash, etc			
	ATM4	In main screen scre	In main screen scroll through available transaction types: <sale>,</sale>		
		<return>, <voi< td=""><td>D>, <auth> and <forced>, etc</forced></auth></td></voi<></return>	D>, <auth> and <forced>, etc</forced></auth>		
ALPHA	When enteri	ng data, changes the	e number to one of the alpha characters on the		
	key.				
Up/Down	In main scre	en scroll through ava	ailable transaction types: <sale>, <return>,</return></sale>		
Arrow Keys	<void>, <auth> and <forced>, etc.</forced></auth></void>				
			down through the menu choices.		
FUNC	<func> key is used in key combinations, i.e. <func>+<enter></enter></func></func>				
			enter the FUNCTION MENU.		
MENU		e main application m			
0-9 Number			s, dates and any numeric value.		
Keys			accesses the alpha characters.		
CANCEL		cel an operation in p	-		
CLEAR	Erases the information when entering an amount or an account number or PIN.				
	Erases char	acter under the curso	or when editing parameters, header and trailer.		
ENTER	In main screen - cycles through the different EDC types, Credit, Debit Cash, etc.				
Accepts entered information. Executes the current function.		ecutes the current function.			
	FUNC+ CLE	AR	BATCH		
	FUNC+ CAN	NCEL	CURRENT REPORT		
FUNC+	FUNC+ UP	ARROW	REVIEW BATCH		
HOT KEYS	FUNC+ DO	WN ARROW	FIND TRANSACTION		
	FUNC+ ENT	ER	LAST RECEIPT		
	FUNC+ ALF	'HA	Tip MENU (RESTAURANT ONLY)		



2.3.2 Key Assignments

Note

Use the table below to identify the keys on your POS Terminal model.

	S90
ON/OFF	\checkmark
FUNC	\checkmark
# 0-9	\checkmark
Alpha	\checkmark
Menu	\checkmark
Cancel	\checkmark
Clear	\checkmark
Enter	\checkmark
Shortcut	\checkmark

2.3.3 Keypad Layout

Note Below are examples of the keypad layout of the S90 POS terminals.



NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be duplicated, published, or disclosed without PAX prior written permission. 9



3. How to Load Application

Note

This section explains the instructions for loading the applications as well as its parameters to the terminal.

Rebuild file system is recommended before loading new applications.

For Details of how to load application, please refer to BroadPOS Users Guide.

4. How to Do Transaction

Note

This section explains the various instructions required for processing the different types of transactions.

Note: Exact transaction types are subject to Host Specific features.

4.1 Credit Transaction

4.1.1 Credit Sale

Note

A Credit Card Sale can be performed either by swiping or by manually entering the account number and expiration date embossed on the front of the card. Bank rates should be checked before manually entering transactions.

X-Credit card holder; Y-Merchant of shop

STEP	ACTION	DISPLAY
1.	Be sure the terminal is at the Idle Prompt	INPUT ACCOUNT CREDIT SALE
2.	Swipe the credit card,	
	Or manually key in the account number and expiration	on date.
2.1	If the security for <u>Card Manually Entry</u> is on, the terminal will prompt for the manager password. When prompted, enter the password and then press [ENTER].	ENTER PASSWORD:

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be 10 duplicated, published, or disclosed without PAX prior written permission.

Example: X goes to Y's shop to buy a cellphone. After X finishes his Ε shopping, he goes to Y to pay for the cellphone. X delivers his credit card to Y, and Y processes a Credit Sale transaction on the S90 POS terminal. When the transaction is complete, Y returns the credit card to X. X takes the card and cellphone, then goes home.



2.2	Manually keying the full account number then press [ENTER] . The account number must be between 13-16 digits.	CREDIT SALE 5555
2.3	Enter the four-digit expiration date in MMYY format then press [ENTER] .	Exp. Date: MMYY
3.	If the card was swiped and it was the type of card that can be used for either a Credit or Debit transaction, the user is given the chance to choose between Credit and Debit . This is a feature of the <u>Debit Prompt</u> function. Press [1] for a Credit transaction or [2] for a Debit transaction.	CREDIT/DEBIT? I.CREDIT 2.DEBIT
4.	This is a feature of the <u>Secure Card</u> . When prompted, enter the corresponding digits then press [ENTER] .	Last 4 Digits:
5.	Input the dollar amount of the transaction then press [ENTER]	CREDIT SALE AMOUNT 0.00
6.	This is a feature of the <u>Invoice Mode</u> . When prompted, enter the invoice No. then press [ENTER].	ENTER INVOICE #:
7.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:
8.	This is a feature of the <u>Table Mode</u> . When prompted, enter the table number then press [ENTER].	ENTER TABLE NO:
9.	This is a feature of the <u>Guest No. Mode</u> . When prompted, enter the number of guests then press [ENTER] .	NUMBER OF GUESTS

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be duplicated, published, or disclosed without PAX prior written permission.



10.	This is a feature of the <u>Tip Option</u> . Input the amount for tip on the Keypad then press [ENTER].	Enter TIP1: AMOUNT 0.00
11.	If the account number was manually entered, the term is present. Depending on the user's response the ter V-code and other AVS settings. * Dependent upon <u>Fraud Control settings</u> .	
12.	Press [1] if the card is present. <u>OR</u> Press [2] if the card is not present.	IS CARD PRESENT? I. Yes 2. No
13.	Enter the V-code from the back of the credit card then press [ENTER] .	ENTER CVV2:
14. E	Enter the street address then press [ENTER] . i.e.: If billing address is 123 Main St., enter 123.	Street Address:
15. E	Enter the ZIP Code then press [ENTER] . i.e.: If billing address ZIP code is 12345-0123., enter 12345.	Enter Zip Code:
16.	This is a feature of the <u>Commercial Cards</u> . Enter the additional information for commercial card then press [ENTER] .	Cust. Code?
17.	When prompted, enter the TAX Amount then press [ENTER] .	TAX Amount AMOUNT 0.00



18.	The terminal contacts the Host Processor for an approval and prints one receipt. <u>OR</u> Approve this transaction offline and prints one receipt.	
19.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key
20.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
21.	Stop.	

CARD TYPE	CVC Code	CVV Code	CID Code
VISA		\checkmark	
MasterCard	\checkmark		
AMEX			\checkmark
Discover			\checkmark



Sample of Credit sale receipt

Note

Please review the following samples of credit card sale receipts. Notice the differences between the Merchant's copy and the Customer's copy.

1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US		
02/03/2011 Sale:	11:11:19	
Transaction # Card Type: Account: ****** Entry: Invoice # Amount:	1 Visa ****6789 Swiped 1 \$119.00	
Auth.Code: 123456 Response: Approved		
I AGREE TO PAY ABOVE TOTAL AMOUNT ACCORDING TO CARD ISSURE AGREEMENT (MERCHANT AGREEMENT IF CREDIT VOUCHER)		
XCARDHOLDER NAME		
MERCHANT COPY THANK YOU! Please visit us Again soon!		

1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US СОРҮ 02/03/2011 11:11:19 Sale: Transaction # 1 Card Type: Entry: Swiped \$119.00 Amount: Auth.Code: 123456 Response: Approved CUSTOMER COPY THANK YOU! Please visit us Again soon!



4.1.2 Credit Return

Note

A Credit RETURN is the reversal of an approved and settled transaction. A RETURN issues credit to the customer's credit card. If the transaction has not already been settled, a VOID should be processed.

Example: X bought a cellphone from Y's shop in the previous day. But Е he found that cellphone does not work well. So he went ot Y's shop to return the cellphone and wanted Y to return his money. Y has done a batch close so he cannot void that transaction, he should do a Credit Return to return money to X's Credit card account. X deliver his credit card to Y. Y process a Credit Return transaction. Then, X gives the cellphone back to Y and Y give the credit card to X.

X-Credit card holder; Y-Merchant of shop •

STEP	Αстіон	DISPLAY
1.	From the Idle prompt use the [UP/DOWN] or [SHORTCUT] button until RETURN displays.	INPUT ACCOUNT CREDIT RETURN
2.	Swipe the credit card or key in the account number manually.	and expiration date
3.	If the security for <u>Card Manually Entry</u> is on, the terminal will prompt for the manager password. When prompted, enter the password and then press [ENTER].	ENTER PASSWORD:
4.	Manually keying the full account number then press [ENTER] . The account number must be between 13-16 digits.	CREDIT RETURN 5555
5.	Enter the four-digit expiration date in MMYY format then press [ENTER] .	Exp. Date: MMYY
6.	This is a feature of the <u>Secure Card</u> . When prompted, enter the corresponding digits then press [ENTER].	Last 4 Digits:



7.	Input the amount of the Return then Press [ENTER]. * If the original transaction included a tip amount then the total amount should be entered as the return amount.	CREDIT RETURN AMOUNT 0.00
8.	This is a feature of the <u>Invoice Mode</u> . When prompted, enter the invoice No. then press [ENTER].	ENTER INVOICE #:
9.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:
10.	This is a feature of the <u>Table Mode</u> . When prompted, enter the table number then press [ENTER].	ENTER TABLE NO:
11.	This is a feature of the <u>Guest No. Mode</u> . When prompted, enter the number of guests then press [ENTER].	NUMBER OF GUESTS
12.	This is a feature of the <u>Commercial Cards</u> . Enter the additional information for commercial card then press [ENTER] .	Cust. Code?
13.	When prompted, enter the TAX Amount then press [ENTER] .	TAX Amount AMOUNT 0.00
14.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key
15.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
16.	Stop.	

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be duplicated, published, or disclosed without PAX prior written permission. 16



Sample of Credit Return receipt





4.1.3 Credit Auth

Note

An Auth transaction represents a pre-authorization that does not charge the credit card. It *reserves* the requested amount and places a hold on the customer's open-to-buy. To charge the card after a AUTH a POSTAUTH transaction must be completed.

Example: X will have a travel to Hawaii and he needs to book room in advance. He made a phone call to H hotel. The hotel clerk told X that he should authorize a certain money to the hotel in advance. X gave credit card information to the hotel clerk. The clerk do Credit Pre-Auth with the S90 POS terminal. X has booked a room in the hotel and prepared to go on his travel.

• X-Credit card holder

STEP	Αстіон	DISPLAY
1.	From the Idle prompt press [UP/DOWN] or [SHORTCUT] button until AUTH displays.	INPUT ACCOUNT CREDIT AUTH
2.	Swipe the credit card or key in the account number and expiration date manually.	
3.	If the security for <u>Card Manually Entry</u> is on, the terminal will prompt for the manager password. When prompted, enter the password and then press [ENTER].	ENTER PASSWORD:
4.	Manually keying the full account number then press [ENTER] . The account number must be between 13-16 digits.	CREDIT AUTH 5555
5.	Enter the four-digit expiration date in MMYY format then press [ENTER] .	Exp. Date: MMYY
6.	This is a feature of the <u>Secure Card</u> . When prompted, enter the corresponding digits then press [ENTER] .	Last 4 Digits:



7.	Input the dollar amount of the transaction then press [ENTER]	CREDIT AUTH AMOUNT 0.00
8.	This is a feature of the <u>Invoice Mode</u> . When prompted, enter the invoice No. then press [ENTER].	ENTER INVOICE #:
9.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:
10.	This is a feature of the <u>Table Mode</u> . When prompted, enter the table number then press [ENTER].	ENTER TABLE NO:
11.	This is a feature of the <u>Guest No. Mode</u> . When prompted, enter the number of guests then press [ENTER].	NUMBER OF GUESTS
12.	If the account number was manually entered, the terminal will ask if the card is present. Depending on the user's response the terminal will prompt for V-code and other AVS settings. * Dependent upon Fraud Control settings.	
13.	Press [1] if the card is present. <u>OR</u> Press [2] if the card is not present.	IS CARD PRESENT? I. Yes 2. No
14.	Enter the V-code from the back of the credit card then press [ENTER] .	ENTER CVV2:
15. E	Enter the street address then press [ENTER] . i.e.: If billing address is 123 Main St., enter 123.	Street Address:

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not beduplicated, published, or disclosed without PAX prior written permission.19



16.	Enter the ZIP Code then press [ENTER] . i.e.: If billing address ZIP code is 12345-0123., enter 12345.	Enter Zip Code:
17.	The terminal will contact the Host Processor for an a receipt.	pproval and print one
18.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key
19.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
20.	Stop.	



Sample of Credit Auth receipt

Note

Please review the following sample of a Credit Auth receipt.

1-800-	555-1234	1-800-555-1234		
Mercha	ant Name	Merc	chant Name	
123 M	AIN ST.	123	MAIN ST.	
ANYTOWN	, NY 11111	ANYTO	WN, NY 11111	
WWW.	PAX.US	WWW.PAX.US		
			СОРҮ	
02/03/2011	11:11:19			
Pre-Auth		02/03/2011	11:11:19	
		Pre-Auth	1	
Transaction #	8			
Card Type:	VISA	Transaction #	8	
Account:	**********6789	Card Type:	VISA	
Entry:	Swiped	Account:	***********6789	
Amount:	\$119.00	Entry:	Swiped	
	1	Amount:	\$119.00	
Auth.Code:	123456		• • • • • •	
	Approved	Auth.Code:	123456	
Response:	Approved			
		Response:	Approved	
	ANT COPY			
	IK YOU!			
Please visit us		MERC	CHANT COPY	
Again soon!		THANK YOU!		
		Please visit us		
		Aga	ain soon!	



4.1.4 Credit PostAuth

Note

When authorization has previously been obtained via a AUTH transaction, a PostAuth can be performed to complete the transaction and receive payment.

Example: X is on a travel to Hawaii and he has booked a room in a Е hotel of Haiwaii. He arrived the hotel where he had booked a room. X gives his personal information to clerk and gives his Credit card to clerk. The clerk does a Credit Post-Auth on the S90 POS terminal. After the transaction, the clerk gives the key to X and leads X to his room.

X-Credit card holder

Step	Αςτιον	DISPLAY
1.	From the Idle prompt use [UP/DOWN] or [SHORTCUT] button until POSTAUTH displays.	INPUT ACCOUNT CREDIT POSTAUTH
2.	Swipe the credit card or key in the account number a manually.	and expiration date
3.	If the security for <u>Card Manually Entry</u> is on, the terminal will prompt for the manager password. When prompted, enter the password and then press [ENTER].	ENTER PASSWORD:
4.	Manually keying the full account number then press [ENTER] . The account number must be between 13-16 digits.	CREDIT POSTAUTH 5555
5.	Enter the four-digit expiration date in MMYY format then press [ENTER] .	Exp. Date: MMYY
6.	This is a feature of the <u>Secure Card</u> . When prompted, enter the corresponding digits then press [ENTER] .	Last 4 Digits:



7.	Input the transaction # to be completed.	Enter Trans #:
8.	The terminal searches the database for an AUTH transaction that matches the criteria. Once found, confirm this transaction and press [ENTER]. If the terminal does not find the transaction, it displays "TRANS NOT FOUND!" and backs to idle screen.	
9.	Input the dollar amount of the transaction then press [ENTER]	CREDIT POSTAUTH AMOUNT 0.00
10.	This is a feature of the <u>Invoice Mode</u> . When prompted, enter the invoice No. then press [ENTER].	ENTER INVOICE #:
11.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:
12.	This is a feature of the <u>Tip Option</u> . Input the amount for tip on the Keypad then press [ENTER].	Enter TIP1: AMOUNT 0.00
13.	This is a feature of the <u>Card Present Mode</u> . Press [1] if the card is present. <u>OR</u> Press [2] if the card is not present.	IS CARD PRESENT? I. Yes 2. No
14.	This is a feature of the <u>Commercial Cards</u> . Enter the additional information for commercial card then press [ENTER] .	Cust. Code?



15.	When prompted, enter the TAX Amount then press [ENTER] .	TAX Amount AMOUNT 0.00
16.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key
17.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
18.	Stop.	



Sample of Credit PostAuth receipt

Note

Please review the following samples of Credit PostAuth receipts.

1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US		1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US		
			СОРҮ	
02/03/2011	11:11:19			
Post-Auth		02/03/2011	11:11:19	
		Post-Aut	:h	
Transaction #	8			
Card Type:	VISA	Transaction #	8	
	***********6789	Card Type:	VISA	
Entry:	Swiped	Account:	***********6789	
-	-	Entry:	Swiped	
Amount:	\$119.00	-	±	
		Amount:	\$119.00	
Auth.Code:	123456			
Response:	Approved	Auth.Code:	123456	
-		Response:	Approved	
I AGREE TO PAY ABOVE TOTAL AMOUNT ACCORDING		CUSTOMER COPY THANK YOU!		
TO CARD ISSURE AGREEMENT		Please visit us		
(MERCHANT A	GREEMENT IF	Again soon!		
CREDIT N				
CREDII	/OUCHER)			
XCARDHOLI				
MERCHAN	NT COPY			
THANK YOU!				
Please visit us				
Again soon!				
rigarii				



4.1.5 Credit Forced

Note

When authorization has previously been obtained via a AUTH transaction or via Voice Authorization, a Forced Sale must be performed to complete the transaction and receive payment.

Example: X will have a travel to Hawaii and he needs to book room in advance. He has done a Voice Authorization and got an auth code. When he arrives at the hotel, he gives the card and auth code to clerk. The clerk does a Credit Forced transaction. After the transaction, the clerk gives the key to X and leads X to his room.

• X-Credit card holder

STEP	Αстіон	DISPLAY	
1.	From the Idle prompt use [UP/DOWN] or [SHORTCUT] button until FORCED displays.	INPUT ACCOUNT CREDIT FORCED	
2.	Swipe the credit card or key in the account number a manually.	and expiration date	
3.	If the security for <u>Card Manually Entry</u> is on, the terminal will prompt for the manager password. When prompted, enter the password and then press [ENTER].	ENTER PASSWORD:	
4.	Manually keying the full account number then press [ENTER] . The account number must be between 13-16 digits.	CREDIT FORCED 5555	
5.	Enter the four-digit expiration date in MMYY format then press [ENTER] .	Exp. Date: MMYY	
6.	This is a feature of the <u>Secure Card</u> . When prompted, enter the corresponding digits then press [ENTER] .	Last 4 Digits:	



7.	Input the dollar amount of the transaction then press [ENTER]	CREDIT FORCED AMOUNT 0.00
8.	Input the authorization number previously obtained then press [ENTER] .	ENTER AUTH #:
9.	This is a feature of the <u>Invoice Mode</u> . When prompted, enter the invoice No. then press [ENTER].	ENTER INVOICE #:
10.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:
11.	This is a feature of the <u>Tip Option</u> . Input the amount for tip on the Keypad then press [ENTER].	Enter TIPI: AMOUNT 0.00
12.	This is a feature of the <u>Card Present Mode</u> . Press [1] if the card is present. <u>OR</u> Press [2] if the card is not present.	IS CARD PRESENT? I. Yes 2. No
13.	This is a feature of the <u>Commercial Cards</u> . Enter the additional information for commercial card then press [ENTER] .	Cust. Code?
14.	When prompted, enter the TAX Amount then press [ENTER] .	TAX Amount AMOUNT 0.00



15.	Depending upon the Processor, the terminal may or may not contact the Credit Host. The first receipt will be printed.		
16.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL] .	TEAR SLIP> Press any Key	
17.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO	
18.	Stop.		



Sample of Credit Forced receipt

Note

Please review the following samples of Credit Forced receipts.

1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US			1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US C O P Y	
02/03/2011 Forced ← Transaction # Card Type: Account: Entry: Amount: Auth.Code: Response:	11:11:19 8 VISA *********6789 Swiped \$119.00 123456 Approved	Depending upon the Host, this might say "Ticket only".	02/03/2011 Forced Transaction # Card Type: Account: Entry: Amount: Auth.Code:	11:11:19 8 VISA ********6789 Swiped \$119.00 123456
I AGREE TO PAY ABOVE TOTAL AMOUNT ACCORDING TO CARD ISSURE AGREEMENT (MERCHANT AGREEMENT IF CREDIT VOUCHER)			Response: CUSTC THAN Please	Approved MER COPY NK YOU! e visit us .n soon!
CARDHO MERCH THA Please	DLDER NAME HANT COPY NK YOU! > visit us In soon!			



4.1.6 Credit Void Sale

Note

- To void a sale is to nullify an approved transaction, one that has already been authorized but not settled. However, if the transaction has already been settled, a RETURN must be processed. A VOID does not remove the hold on the customer's open-to-buy.
- **Example:** X bought a cellphone from Y's shop in the morning. But he Е found that cellphone does not work well. So he went to Y's shop to return the cellphone and wanted Y to return his money in the afternoon. He should do a Credit Void Sale to void the previous transaction. Y process a Credit Void Sale transaction. Then, X gives the cellphone back to Y and Y give the credit card to X.
 - X-Credit card holder; Y-Merchant of shop

Step	Αстіон	DISPLAY	
1.	From the Idle prompt use the [UP/DOWN] or [SHORTCUT] button until V/SALE displays.	INPUT ACCOUNT CREDIT V/SALE	
1.1	If Void Sale is password protected, the terminal will prompt for the manager password. When prompted, enter the password and then press [ENTER].	ENTER PASSWORD:	
2.	Swipe the credit card or key in the account number and expiration date manually.		
2.1	If the security for <u>Card Manually Entry</u> is on, the terminal will prompt for the manager password. When prompted, enter the password and then press [ENTER]. If Step 1.1 appeared, there will be no this step.	ENTER PASSWORD:	
2.2	Manually keying the full account number then press [ENTER] . The account number must be between 13-16 digits.	CREDIT V/SALE 5555	
2.3	Enter the four-digit expiration date in MMYY format then press [ENTER] .	Exp. Date: MMYY	



2.4	This is a feature of the <u>Secure Card</u> . When prompted, enter the corresponding digits then press [ENTER] .	Last 4 Digits:
3.	Input the transaction # to be voided.	Enter Trans #:
4.	The terminal searches the database for a Sale transa criteria. Once found, confirm the transaction and pres If the terminal does not find the transaction, it display FOUND! " and backs to idle screen.	ss [ENTER] .
5.	View the transaction on the display to verify it is the correct transaction then Press [ENTER]	#0001 SALE AMT: 2.00 ***********4996
6.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:
7.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key
8.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
9.	Stop.	



Sample of Credit Void Sale receipt

Note Please review the following samples of void sale receipts.

		1	
1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US		Me 12 ANYT	000-555-1234 rchant Name 3 MAIN ST. OWN, NY 11111 IWW.PAX.US C O P Y
02/03/2011 Void Sale	11:11:19	00/02/0011	11:11:19
VOIG Sal		02/03/2011 Void Sa	
D 1 1		void sa	Te
Record #	6		
Card Type:	VISA	Record #	6
Account:	**********6789	Card Type:	VISA
Entry:	Swiped	Account:	**********6789
		Entry:	Swiped
Amount:	\$119.00		
		Amount:	\$119.00
Auth.Code:	123456		
Response:	Approved	Auth.Code:	123456
		Response:	Approved
MERCH THA Please	DLDER NAME HANT COPY NK YOU! > visit us in soon!	I Ple	STOMER COPY CHANK YOU! ase visit us gain soon!



4.1.7 **Credit Void Return**

Note

A RETURN transaction processed in error can be VOIDED if the RETURN has not been batched out. This will nullify the RETURN previously done in the same batch.

Example: X bought a cellphone from Y's shop in the previous day. But Е he found that cellphone does not work well. So he went ot Y's shop to return the cellphone and wanted Y to return his money. He should do a Credit Return to return money to X's Credit card account. X delivers his credit card to Y. Y process a Credit Return transaction. But X changes his mind that he wants the cellphone. So X gives his card to Y and Y does a Credit Void Return on S90 POS terminal. Y returns the credit card to X. X takes the card and cellphone, then goes home.

X-Credit card holder; Y-Merchant of shop

STEP	Αстіон	DISPLAY
1.	From the Idle prompt use the [UP/DOWN] or [SHORTCUT] button until V/RTRN displays.	INPUT ACCOUNT CREDIT V/RTRN
1.1	If Void Return is password protected, the terminal will prompt for the manager password. When prompted, enter the password and then press [ENTER].	ENTER PASSWORD:
2.	Swipe the credit card or key in the account number a manually.	and expiration date
2.1	If the security for <u>Card Manually Entry</u> is on, the terminal will prompt for the manager password. When prompted, enter the password and then press [ENTER].	ENTER PASSWORD:
	If Step 1.1 appeared, there will be no this step.	
2.2	Manually keying the full account number then press [ENTER] . The account number must be between 13-16 digits.	CREDIT V/RTRN 5555



2.3	Enter the four-digit expiration date in MMYY format then press [ENTER] .	Exp. Date: MMYY	
2.4	This is a feature of the <u>Secure Card</u> . When prompted, enter the corresponding digits then press [ENTER] .	Last 4 Digits:	
3.	Input the transaction # to be voided.	Enter Trans #:	
4.	The terminal searches the database for a Return transaction that matches the criteria. Once found, confirm the transaction and press [ENTER]. If the terminal does not find the transaction, it displays "TRANS NOT FOUND!" and backs to idle screen.		
5.	View the transaction on the display to verify it is the correct transaction then Press [ENTER]	#0001 RTRN AMT: 2.00 **********4996	
6.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:	
7.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key	
8.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO	
9.	Stop.		



Sample of Credit Void Return receipt

Note

Please review the following samples of receipts for a void return.

1- Me 1 ANYT	800-555-1234 erchant Name 23 MAIN ST. COWN, NY 11111 WWW.PAX.US	1-80(Merc 123 ANYTOW WWW	D-555-1234 hant Name MAIN ST. N, NY 11111 N, PAX.US O P Y
02/03/2011	11:11:19		
Void Re		02/03/2011 Void Ref	11:11:19 Tund
Transaction	# З		
Card Type:	VISA	Transaction #	
Account:	***********6789	Card Type:	VISA
Entry:	Swiped		***********6789
		Entry:	Swiped
Amount:	\$119.00		
		Amount:	\$119.00
Auth.Code:	123456		
Response:	APPROVE OFFLINE	Auth.Code:	123456
		Response:	APPROVE OFFLINE
CAF ME Ple	RDHOLDER NAME ERCHANT COPY THANK YOU! ease visit us Again soon!	TH <i>P</i> Pleas	OMER COPY ANK YOU! e visit us in soon!



4.1.8 Credit Void Post-Auth

Note

A Post-Auth sale can be VOIDED if the transaction is in the current open batch. A VOID/POST-AUTH does remove any hold on the customer's open-to-buy.

Example: X planned to go to Haiwii to have a trip and he had booked a room at a hotel through Credit Auth. And when he arrived the hotel, he had a Credit Post-Auth transaction to pay for his room. But before he steps in to his room, call comes and he has to go back to US. So he want to cancel the room. He requires the clerk to return the money. Then the clerk does a Credit Void Post-Auth transaction to return the money to X's credit account. Then X goes back to US.

Step	ACTION	DISPLAY
1.	From the Idle prompt use the [UP/DOWN] or [SHORTCUT] button until V/FRCD displays.	INPUT ACCOUNT CREDIT V/POST
1.1	If Void Forced is password protected, the terminal will prompt for the manager password. When prompted, enter the password and then press [ENTER].	ENTER PASSWORD:
2.	Swipe the credit card or key in the account number a manually.	and expiration date
2.1	If the security for <u>Card Manually Entry</u> is on, the terminal will prompt for the manager password. When prompted, enter the password and then press [ENTER]. If Step 1.1 appeared, there will be no this step.	ENTER PASSWORD:
2.2	Manually keying the full account number then press [ENTER] . The account number must be between 13-16 digits.	CREDIT V/POST 5555



2.3	Enter the four-digit expiration date in MMYY format then press [ENTER] .	Exp. Date: MMYY	
2.4	This is a feature of the <u>Secure Card</u> . When prompted, enter the corresponding digits then press [ENTER] .	Last 4 Digits:	
3.	Input the transaction # to be voided.	Enter Trans #:	
4.	The terminal searches the database for a Forced transaction that matches the criteria. Once found, confirm the transaction and press [ENTER]. If the terminal does not find the transaction, it displays "TRANS NOT FOUND!" and backs to idle screen.		
5.	View the transaction on the display to verify it is the correct transaction then Press [ENTER]	#0001 POST AMT: 2.00 **********4996	
6.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:	
7.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key	
8.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO	
9.	Stop.		



11:11:19

***********6789

8

VISA

Swiped \$119.00

> 123456 VOIDED

1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US СОРҮ

Sample of Credit Void Post-Auth receipt

Note Please review the following samples of receipts for a void Post-Auth.

1-800-55	5-1234	1-80	0-555-1234
Merchan			chant Name
123 MAI			MAIN ST.
ANYTOWN,			N, NY 11111
WWW.PA			W.PAX.US
			СОРҮ
02/03/2011	11:11:19		
Void Post-	Auth	02/03/2011	11
		Void Pos	st-Auth
Record #	8		
Card Type:	VISA	Record #	
Account: *	***********6789	Card Type:	
Entry:	Swiped	Account:	* * * * * * * * * *
Amount:	\$119.00	Entry:	
		Amount:	\$1
Auth.Code:	123456		
Response:	VOIDED	Auth.Code:	
-		Response:	
		-	
X			
CARDHOLD	ER NAME		OMER COPY
			ANK YOU!
MERCHAN	T COPY		se visit us
THANK	YOU!	Aga	ain soon!
Please v	isit us		
Again	soon!		



4.1.9 Credit Void Forced

Note

A FORCED sale can be VOIDED if the transaction is in the current open batch. A VOID/FORCED does remove any hold on the customer's open-to-buy.

Example: X planned to go to Haiwii to have a trip and he had booked a room with Voice Auth. And when he arrived the hotel, he had a Credit Forced transaction to pay for his room. But before he steps in to his room, call comes and he has to go back to US. So he want to cancel the room. He requires the clerk to return the money. Then the clerk does a Credit Void Forced transaction to return the money to X's credit account. Then X goes back to US.

STEP	Αςτιον	DISPLAY
1.	From the Idle prompt use the [UP/DOWN] or [SHORTCUT] button until V/FRCD displays.	INPUT ACCOUNT CREDIT V/FRCD
1.1	If Void Forced is password protected, the terminal will prompt for the manager password. When prompted, enter the password and then press [ENTER].	ENTER PASSWORD:
2.	Swipe the credit card or key in the account number a manually.	and expiration date
2.1	If the security for <u>Card Manually Entry</u> is on, the terminal will prompt for the manager password. When prompted, enter the password and then press [ENTER]. If Step 1.1 appeared, there will be no this step.	ENTER PASSWORD:
2.2	Manually keying the full account number then press [ENTER] . The account number must be between 13-16 digits.	CREDIT V/FRCD 5555



2.3	Enter the four-digit expiration date in MMYY format then press [ENTER] .	Exp. Date: MMYY	
2.4	This is a feature of the <u>Secure Card</u> . When prompted, enter the corresponding digits then press [ENTER] .	Last 4 Digits:	
3.	Input the transaction # to be voided.	Enter Trans #:	
4.	The terminal searches the database for a Forced transaction that matches the criteria. Once found, confirm the transaction and press [ENTER]. If the terminal does not find the transaction, it displays "TRANS NOT FOUND!" and backs to idle screen.		
5.	View the transaction on the display to verify it is the correct transaction then Press [ENTER]	#0001 FRCD AMT: 2.00 **********4996	
6.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:	
7.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key	
8.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO	
9.	Stop.		



Sample of Void Forced receipt

Please review the following samples of receipts for a void forced.

Note

1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US	
02/03/2011 Void Forced	11:11:19
Record # Card Type: Account: ***** Entry: Amount:	8 VISA *******6789 Swiped \$119.00
Auth.Code: Response:	123456 VOIDED
XCARDHOLDER N.	 AME
MERCHANT COPY THANK YOU! Please visit us Again soon!	

Mer 123 ANYTO WW	00-555-1234 cchant Name 3 MAIN ST. WN, NY 11111 WW.PAX.US C O P Y
02/03/2011	11:11:19
Void Fo:	rced
Record #	8
Card Type:	VISA
Account:	************6789
Entry:	Swiped
Amount:	\$119.00
Auth.Code:	123456
Response:	VOIDED
TI Plea	TOMER COPY HANK YOU! use visit us gain soon!



4.2 Debit Transaction

4.2.1 Debit Sale

Note

- A Debit Card Sale must be completed by swiping the customer's debit card through the card reader. Manually entered debit transactions are not allowed.
- Example: X goes to Y's shop to buy a cellphone. After X finishes his Е shopping, he goes to Y to pay for the cellphone. X delivers his debit card to Y, and Y processes a Debit Sale transaction on the S90 POS terminal. When the transaction is complete, Y returns the debit card to X. X takes the card and cellphone, then goes home.
 - X-Debit card holder; Y-Merchant of shop

STEP	Αстіон	DISPLAY	
1.	From the idle prompt press the [SHORTCUT] button to scroll through the list of available EDC types to select the DEBIT prompt.	INPUT ACCOUNT DEBIT SALE	
2.	Swipe the debit card. (Debit cards cannot be keyed in main swiped)	nually, they must be	
3.	Input the dollar amount of the transaction then press [ENTER].	DEBIT SALE AMOUNT 0.00	
4.	This is a feature of the <u>Invoice Mode</u> . When prompted, enter the invoice No. then press [ENTER].	ENTER INVOICE #:	
5.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:	
6.	This is a feature of the <u>Table Mode</u> . When prompted, enter the table number then press [ENTER].	ENTER TABLE NO:	

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be



7.	This is a feature of the <u>Guest No. Mode</u> . When prompted, enter the number of guests then press [ENTER].	NUMBER OF GUESTS
8.	This is a feature of the <u>Tip Option</u> . Input the amount for tip on the Keypad then press [ENTER].	Enter TIP1: AMOUNT 0.00
9.	This is a feature of the <u>CashBack Prompt</u> . Input the amount for cash back on the Keypad then press [ENTER].	Cash Back: AMOUNT 0.00
10.	D. Input the PIN on the Keypad then press [ENTER].	
11.	The terminal contacts the Host Processor for an approval and prints one receipt.	
12.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL] .	TEAR SLIP> Press any Key
13.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
14.	Stop	



Sample of Debit sale receipt

Note

Please review the following samples of debit card sale receipts. Notice the differences between the Merchant's copy and the Customer's copy.

1-800-55 Merchant 123 MAI ANYTOWN, N WWW.PA	Name N ST. NY 11111
02/03/2011 DEBIT SALE	11:11:19
Transaction # Account: * Entry: Amount: Tip: Cash Back:	1 ***********6789 Swiped \$100 \$10 \$20
Total:	\$131.50
Reference No:	342199994321
Auth.Code: Response:	123456 Approved

Mercha 123 M ANYTOWN, WWW.	555-1234 ant Name IAIN ST. , NY 11111 PAX.US D P Y
02/03/2011 DEBIT SAI	11:11:19 LE
Transaction # Account: Entry: Amount: Tip: Cash Back:	1 *****6789 Swiped \$100 \$10 \$20
Total:	\$131.50
Reference No: Auth.Code: Response:	342199994321 123456 Approved
THAN Please	MER COPY K YOU! visit us h soon!



4.2.2 Debit Return

Note

A debit transaction cannot be voided but it can be returned. Just like a Debit Sale, the card must be swiped to perform a Debit RETURN.

Example: X bought a cellphone from Y's shop in the previous day. But he found that cellphone does not work well. So he went to Y's shop to return the cellphone and wanted Y to return his money. Y should do a Debit Return to return money to X's debit card account. X deliver his debit card to Y. Y process a Debit Return transaction. Then, X gives the cellphone back to Y and Y gives the debit card to X.

• X-Debit card holder; Y-Merchant of shop

STEP	Αстіон	DISPLAY
1.	From the Idle prompt use the [SHORTCUT] button until DEBIT is displayed, then press [UP/DOWN] or [SHORTCUT] button until RETURN is displayed.	INPUT CCOUNT DEBIT RETURN
2.	Swipe the debit card.	
3.	Input the amount of the Return then press [ENTER] * If the original transaction includes a tip amount then the total amount should be entered as the return amount.	DEBIT RETURN AMOUNT 0.00
4.	This is a feature of the <u>Invoice Mode</u> . When prompted, enter the invoice No. then press [ENTER].	ENTER INVOICE #:
5.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:
6.	This is a feature of the <u>Table Mode</u> . When prompted, enter the table number then press [ENTER].	ENTER TABLE NO:



7.	This is a feature of the <u>Guest No. Mode</u> . When prompted, enter the number of guests then press [ENTER].	
8.	Input the PIN on the Keypad then press [ENTER].	AMT \$2.00 Enter PIN: ****
9.	9. The terminal contacts the Host Processor for an approval and prints one receipt.	
10.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key
11.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
12.	Stop.	



Sample of Debit Return receipt

Note

Please review the following samples of Debit card return receipts.

		1	
1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US		Me 1 ANYT	800-555-1234 erchant Name 23 MAIN ST. FOWN, NY 11111 WWW.PAX.US C O P Y
02/03/2011	11:11:19		
Debit Ref		02/03/2011	11:11:19
	ana	- , , -	Refund
		Debre	Refund
Transaction #	8		
Account: **	********6789	Transaction	# 8
Entry:	Swiped	Account:	***********
Amount:	\$119.00	Entry:	Swiped
initial initia	+==0100	Amount:	\$119.00
		Alloune.	VII
	342199994321		
Auth.Code:	123456		b: 342199994321
Response:	Approved	Auth.Code:	123456
		Response:	Approved
CARDHOLDER NAME MERCHANT COPY THANK YOU! Please visit us Again soon!		Ple	JSTOMER COPY THANK YOU! ease visit us Again soon!



4.3 EBT Transaction

4.3.1 EBT Sale

Note

- EBT or Electronic Benefits Transfer is an electronic system that authorizes the issuant to use their government provided benefits to purchase food items or make use of the Cash Benefits feature. EBT transactions can be swiped or manually entered.
- **Example:** X goes to Y's shop to buy a cellphone. After X finishes his shopping, he goes to Y to pay for the cellphone. X delivers his EBT card to Y, and Y processes a EBT Sale transaction on the S90 POS terminal. When the transaction is complete, Y returns the EBT card to X. X takes the card and cellphone, then goes home.
 - X-EBT card holder; Y-Merchant of shop

STEP	Αстіон	DISPLAY
1.	From the idle prompt press the [SHORTCUT] button to scroll through the list of available EDC types to select the EBT prompt.	INPUT ACCOUNT EBT SALE
2.	Swipe the EBT card, or manually enter the account r	number.
2.1	If the security for <u>Card Manual Entry</u> is on, the terminal will prompt for the manager password. When prompted, enter the password and then press [ENTER].	ENTER PASSWORD:
2.2	Manually keying the full account number then press [ENTER] . The account number must be between 8-19 digits.	EBT SALE 5555
3.	Press [1] for Food Stamp <u>OR</u> Press [2] for Cash Benefit <u>OR</u> Press [3] for Voucher (Manual Entry only)	Select EBT Type: I. FoodStamp 2. CashBenefit 3. Voucher



4.	Input the dollar amount of the transaction then press [ENTER] .		EBT SALE AMOUNT 0.00	
5.	This is a feature of the <u>Invoice Mode</u> . When prompted, enter the invoice No. then press [ENTER].		ENTER INVOICE #:	
6.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].			ENTER CLERK ID:
		If Selected	Then	
7.		Food Stamp	Proceed to #9, the step #12.	en skip to
/.		Cash Benefit	Proceed to #8 & # skip to #12.	#9 & then
		Voucher	Skip to step #10.	
8.	The terminal will now Prompt you to enter a Cash Back amount or press [ENTER] to bypass.		Cash Back: AMOUNT 0.00	
9.	Input the PIN on the Keypad then press [ENTER].		Enter PIN:	
10.	Enter the Voucher number then press [ENTER].			
11.	Enter the Authorization number then press [ENTER]. Enter Auth #:			
12.	The terminal contacts the Host Processor for an approval and prints one receipt.			



13.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL] .	TEAR SLIP> Press any Key
14.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
15.	Stop.	



Sample of EBT sale receipt

Note

Please review the following sample EBT receipts. Notice the differences between the Merchant's copy and the Customer's copy.

1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US		
02/03/2011 EBT Sale Cash Benefi	11:11:19 . t	
Transaction # Account: ** Entry:	1 ********6789 Swiped	
Bse Amt:	\$100	
Cash Back:	\$20	
Total:	\$120.00	
Reference No: Response: Balance:	342199994321 Approved \$20	
MERCHANT COPY THANK YOU! Please visit us Again soon!		

1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US C O P Y		
02/03/2011 EBT Sale Cash Benefi	11:11:19	
Entry:	1 ********************** Swiped	
Bse Amt:	\$100	
Cash Back:	\$20	
Total:	\$120.00	
Reference No: Response:	342199994321 Approved	
CUSTOMER COPY THANK YOU! Please visit us Again soon!		



4.3.2 EBT Return

Note

A EBT RETURN is the reversal of an approved and settled transaction. A RETURN refunds back to the customer's EBT card. EBT return is only for Food Stamp,

Example: X bought some apples from Y's shop. But he found that apples are not good. So he went of Y's shop to return the apples and wanted Y to return his money. Y should do a EBT Return to return money to X's EBT card account. X deliver his EBT card to Y. Y process a EBT Return transaction. Then, X gives the apples back to Y and Y gives the EBT card to X.

• X-EBT card holder; Y-Merchant of shop

STEP	Αстіон	DISPLAY
1.	From the Idle prompt use the [SHORTCUT] button until EBT is displayed, then press [UP/DOWN] or [SHORTCUT] button until RETURN is displayed.	INPUT CCOUNT EBT RETURN
2.	Swipe the EBT card, or manually enter the account	number.
3.	If the security for <u>Card Manual Entry</u> is on, the terminal will prompt for the manager password. When prompted, enter the password and then press [ENTER].	ENTER PASSWORD:
4.	Manually keying the full account number then press [ENTER] . The account number must be between 8-19 digits.	EBT SALE 5555
5.	Input the amount of the Return then press [ENTER] * If the original transaction includes a tip amount then the total amount should be entered as the return amount.	EBT RETURN AMOUNT 0.00
4.	This is a feature of the <u>Invoice Mode</u> . When prompted, enter the invoice No. then press [ENTER].	ENTER INVOICE #:



5.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:
6.	Input the PIN on the Keypad then press [ENTER].	AMT \$2.00 Enter PIN: ****
8.	The terminal contacts the Host Processor for an ap receipt.	proval and prints one
9.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key
10.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
11.	Stop.	



Sample of Debit Return receipt

Note

Please review the following samples of Debit card return receipts.

1-800-5 Merchar 123 MA ANYTOWN, WWW.P.	nt Name IN ST. NY 11111 AX.US	Mer 123 ANYTO WW	00-555-1234 chant Name 3 MAIN ST. WN, NY 11111 WW.PAX.US C O P Y
02/03/2011	11:11:19		
Debit Re:	fund	02/03/2011	11:11:19
Food Star	mps	Debit B	Refund
1000 bea	mps	Food St	
		FOOd St	camps
Transaction #	8		
Account:	***********6789	Transaction #	8
Entry:	Swiped	Account:	************
-	-		0,00
Amount:	\$119.00	Entry:	Swiped
		Amount:	\$119.00
Reference No:	342199994321		
Auth.Code:	123456	Reference No:	342199994321
Response:	Approved	Auth.Code:	123456
Response.	Approved		
		Response:	Approved
CARDHOLI	DER NAME	CUS	TOMER COPY
MERCHANT COPY		THANK YOU!	
THANK YOU!		Please visit us	
Please visit us			ain soon!
		Ag	
Again	soon!		



4.3.3 **EBT Balance Inquiry**

Note

Balance Inquiry transaction is used for inquiring balance of EBT cards.

Example: X wants to check the amount of the fund in his EBT card. So Е he goes to Y's shop to ask Y to do a EBT Sale. Y takes the EBT card and does a EBT Sale transaction on S90 POS terminal. X gets the receipt and knows the balance amount of his EBT card

X-EBT card holder; Y-Merchant of shop

Step	Αςτιον	DISPLAY
1.	From the Idle prompt use the [SHORTCUT] button until EBT is displayed, then press [UP/DOWN] or [SHORTCUT] button until BALANCE displays.	INPUT ACCOUNT EBT BALACNCE
2.	Swipe the EBT card or key in the account number m	anually.
3.	If the security for <u>Card Manual Entry</u> is on, the terminal will prompt for the manager password. When prompted, enter the password and then press [ENTER].	ENTER PASSWORD:
4.	Manually keying the full account number then press [ENTER]. The account number must be between 8-19 digits.	EBT SALE 5555
5.	Press [1] for Food Stamp <u>OR</u> Press [2] for Cash Benefit	Select EBT Type: 1. FoodStamp 2. CashBenefit
6.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:
7.	Input the PIN on the Keypad then press [ENTER].	AMT \$0.00 Enter PIN: ****



8.	8. The terminal will contact the Host Processor for an approval and print one receipt.	
9.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL] .	TEAR SLIP> Press any Key
10.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
11.	Stop.	



Sample of EBT Balance Inquiry receipt

Note

Please review the following sample of an EBT Balance Inquiry receipt.

1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US		
02/03/2011 11:11:19 EBT Balance:		
Account: *********6789 Entry: Swiped		
Response:APPROVEDFood Stamps Balance:119.00Cash Benefit Balance:118.00		
MERCHANT COPY THANK YOU! Please visit us Again soon!		



4.4 Gift Transaction

4.4.1 Gift Sale

Note

- Gift Cards are cards that are sponsored by individual Merchants. They allow the customer to purchase items or services using the card as payment.
- Example: X is a member of Y's shop. X goes to Y's shop to buy some Е apples. After X finishes his shopping, he goes to Y to pay for the apples. X delivers his gift card to Y, and Y processes a Gift Sale transaction on the S90 POS terminal. When the transaction is complete, Y returns the gift card to X. X takes the card and apples, then goes home.
 - X-Gift card holder; Y-Merchant of shop

STEP	Αстіон	DISPLAY
1.	From the idle prompt press the [SHORTCUT] button to scroll through the list of available EDC types to select the GIFT prompt.	INPUT ACCOUNT GIFT SALE
2.	Swipe the GIFT card, or manually enter the account enter the security code.	number, if required,
2.1	If the security for <u>Card Manual Entry</u> is on, the terminal will prompt for the manager password. When prompted, enter the password and then press [ENTER].	ENTER PASSWORD:
2.2	Manually keying the full account number then press [ENTER] . The account number must be between 13-16 digits.	GIFT SALE 5555
3.	Select Type. Press [1] for Sale. <u>OR</u> Press [2] for NoNSFSale.	Select Type: 1. Sale 2. NoNSFSale

58



4.	Input the dollar amount of the transaction then press [ENTER] .	GIFT SALE AMOUNT 0.00
5.	This is a feature of the <u>Invoice Mode</u> . When prompted, enter the invoice No. then press [ENTER].	ENTER INVOICE #:
6.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:
7.	This is a feature of the <u>Tip Option</u> . Input the amount for tip on the Keypad then press [ENTER].	Enter TIP1: AMOUNT 0.00
8.	The terminal contacts the Host Processor for an app receipt.	roval and prints one
9.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key
10.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
11.	Stop.	



1

\$120.00

000000 Approved

231.00

Sample of GIFT sale receipt

Note

Please review the following sample GIFT receipts. Notice the differences between the Merchant's copy and the Customer's copy.

1-800-55 Merchan 123 MAI ANYTOWN, 1 WWW.PA	Name N ST. NY 11111	1-800-55 Merchant 123 MAI ANYTOWN, N WWW.PA	Name NST. NY 11111 X.US
02/03/2011	11:11:19	COE	
Gift Sa	le:	02/03/2011 Gift Sa	
Transaction # Account: * Entry:	Swiped	Transaction # Account: *' Entry:	1
Amount:	\$120.00	Amount:	\$120.0
Auth. Code: Response: Gift Balance:	000000 Approved 231.00	Auth. Code: Response: Gift Balance:	000000 Approved 231.0
MERCHAN THANK Please v Again s	YOU! isit us	CUSTOMEF THANK Please vi Again s	R COPY YOU! .sit us



4.4.2 **Gift Return**

Note

A Gift RETURN is the reversal of an approved and settled transaction.

Example: X is member of Y's shop. X bought some apples from Y's Е shop in the previous day. But he found that the apples are not so good. So he went ot Y's shop to return the apples and wanted Y to return his money. Y should do a Gift Return to return money to X's gift card account. X deliver his gift card to Y. Y process a Gift Return transaction. Then, X gives the apples back to Y and Y gives the gift card to X.

X-Gift card holder; Y-Merchant of shop •

STEP	Αстіон	DISPLAY
1.	From the Idle prompt use the [SHORTCUT] button until DEBIT is displayed, then press [UP/DOWN] or [SHORTCUT] button until RETURN is displayed.	
2.	Swipe the gift card or key in the account number m	anually.
3.	Input the amount of the Return then press [ENTER] * If the original transaction includes a tip amount then the total amount should be entered as the return amount.	GIFT RETURN AMOUNT 0.00
4.	This is a feature of the <u>Invoice Mode</u> . When prompted, enter the invoice No. then press [ENTER].	ENTER INVOICE #:
5.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:
6.	The terminal contacts the Host Processor for an approval and prints one receipt.	



7.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key
8.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
9.	Stop.	



Sample of Gift Return receipt

Note

Please review the following samples of Gift card return receipts.

1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US C O P Y02/03/201111:11:19 Gift RefundTransaction # Account: **********6789 Entry: Amount:8 Account: ************************************				
Gift Refund02/03/201111:11:19Transaction #8Account:*********************************	Merchant Name 123 MAIN ST. ANYTOWN, NY 11111		Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US	
Gift Refund02/03/201111:11:19Transaction #8Account:*********************************	02/02/2011	11.11.10		
Transaction #8Account:*********************************				
Transaction #8Account:*********************************	Gift Refu	ind	02/03/2011	11:11:19
Transaction #8Account:*********************************			Gift Refund	
Account:***************6789Entry:SwipedAmount:\$119.00Auth.Code:123456Response:ApprovedGift Balance:231.00CARDHOLDER NAMECUSTOMER COPYMERCHANT COPYTHANK YOU!Please visit us				zana
Entry:SwipedAmount:\$119.00Auth.Code:123456Response:ApprovedGift Balance:231.00CARDHOLDER NAMECUSTOMER COPYMERCHANT COPYTHANK YOU!Please visit us	Transaction #	8		
Entry:SwipedAmount:\$119.00Auth.Code:123456Response:ApprovedGift Balance:231.00CARDHOLDER NAMECUSTOMER COPYMERCHANT COPYTHANK YOU!Please visit us	Account: *	*****	Transaction #	8
Amount:\$119.00Auth.Code:123456Response:ApprovedGift Balance:231.00CARDHOLDER NAMECUSTOMER COPYMERCHANT COPYTHANK YOU!Please visit us				-
Auth.Code:123456Response:ApprovedGift Balance:231.00CARDHOLDER NAMECUSTOMER COPY THANK YOU!MERCHANT COPY THANK YOU!Please visit us	Entry:	-	Account:	************6/89
Auth.Code:123456Response:ApprovedGift Balance:231.00CARDHOLDER NAMECUSTOMER COPY THANK YOU!MERCHANT COPY THANK YOU!Please visit us	Amount:	\$119.00	Entry:	Swiped
Auth.Code:123456Response:ApprovedGift Balance:231.00CARDHOLDER NAMECUSTOMER COPY THANK YOU!MERCHANT COPY THANK YOU!Please visit us	12.00 0110 0	+	7	¢110 ⁻ 00
Response:Approved Gift Balance:Auth.Code:123456 Response:CARDHOLDER NAMEGift Balance:231.00MERCHANT COPY THANK YOU! Please visit usCUSTOMER COPY THANK YOU!Please visit usAgain soon!			Amount:	Ş119.00
Response:Approved Gift Balance:Auth.Code:123456 Response:CARDHOLDER NAMEGift Balance:231.00MERCHANT COPY THANK YOU! Please visit usCUSTOMER COPY THANK YOU!Please visit usAgain soon!	Auth.Code:	123456		
Gift Balance: 231.00 CARDHOLDER NAME MERCHANT COPY THANK YOU! Please visit us MERCHANT copy CUSTOMER COPY THANK YOU! Please visit us Approved Gift Balance: 231.00		Approved	Auth Codo:	123456
Gift Balance: 231.00 CARDHOLDER NAME MERCHANT COPY THANK YOU! Please visit us Again soon!	-			
CARDHOLDER NAME MERCHANT COPY THANK YOU! Please visit us Again soon!	Gift Balance:	231.00	Response:	Approved
CUSTOMER COPYMERCHANT COPYTHANK YOU!THANK YOU!Please visit usAgain soon!			Gift Balance:	231.00
	MERCHANT COPY THANK YOU! Please visit us		THA	ANK YOU! e visit us



4.4.3 **Gift Add Value**

Note

Use the Add Value function to add credit to the available balance of an active Gift Card.

Example: X is member of Y's shop. X finds that his gift card account Е need to add some money. So he goes to Y's shop and asks Y to add value to his gift card. X gives money and the gift card to Y. Y takes the gift card and does Gift Add Value on S90 POS terminal.

X-Gift card holder; Y-Merchant of shop

STEP	Αстіон	DISPLAY	
1.	From the Idle prompt use the [SHORTCUT] button until GIFT is displayed, then press [UP/DOWN] or [SHORTCUT] button until ADD is displayed.	INPUT ACCOUNT GIFT ADD	
2.	Swipe the gift card or key in the account number manually.		
3.	Input the dollar amount of the transaction then press [ENTER]	GIFT ADD AMOUNT 0.00	
4.	This is a feature of the <u>Invoice Mode</u> . When prompted, enter the invoice No. then press [ENTER].	ENTER INVOICE #:	
5.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:	
6.	The terminal will contact the Host Processor for an approval and print one receipt.		
7.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key	



8.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
9.	Stop.	



Sample of Gift Add Value receipt

Note

Please review the following samples of Gift Add Value receipts.

Merch 123 M ANYTOWN WWW.	555-1234 ant Name IAIN ST. , NY 11111 PAX.US	Merch 123 M ANYTOWN WWW.	-555-1234 ant Name MAIN ST. , NY 11111 .PAX.US O P Y
	11:11:19		
Gift Add	Value	02/03/2011	
		Gift Add	Value
Transaction #	8		
"	************	Transaction #	8
	0,00		***********6789
Entry:	Swiped		0,05
Amount:	\$119.00	Entry:	Swiped
		Amount:	\$119.00
Auth.Code:	123456		
Response:	Approved	Auth.Code:	123456
-			
Gift Balance:	231.00	Response:	Approved
		Gift Balance:	231.00
CARDHOLDER NAME MERCHANT COPY THANK YOU! Please visit us Again soon!		THAN Please	MER COPY NK YOU! visit us n soon!

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not beduplicated, published, or disclosed without PAX prior written permission.66



4.4.4 Gift Issue

Ĩ	<i>Note</i> Use the Issue function to issue a gift card.
E	Example: X is member of Y's shop. Y will issue a gift card to X. Y does Gift Issue transaction on S90 and then give the issued card to X.

X-Gift card holder; Y-Merchant of shop ۲

STEP	Αстіон	DISPLAY
•	From the Idle prompt use the [SHORTCUT] button until GIFT is displayed, then press [UP/DOWN] or [SHORTCUT] button until ISSUE is displayed.	INPUT ACCOUNT GIFT ISSUE
•	Swipe the gift card or key in the account number ma	nually.
•	Input the dollar amount of the transaction then press [ENTER]	GIFT ISSUE AMOUNT 0.00
•	This is a feature of the <u>Invoice Mode</u> . When prompted, enter the invoice No. then press [ENTER].	ENTER INVOICE #:
•	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:
•	The terminal will contact the Host Processor for an a receipt.	pproval and print one
•	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key



•	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
•	Stop.	



1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US СОРҮ

CUSTOMER COPY THANK YOU! Please visit us Again soon!

11:11:19

**********6789

8

Swiped \$119.00

123456

119.00

Approved

Sample of Gift Issue receipt

Note

Please review the following samples of Gift Issue receipts.

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be duplicated, published, or disclosed without PAX prior written permission. 69



4.4.5 Gift Void

Note

To do a Gift Void is to nullify an approved Gift transaction, including Gift Sale, Gift Return, Gift Add Value and Gift Issue.

Example: X is member of Y's shop. X has made a Gift Sale, or a Gift Return, or a Gift Add Value or a Gift Issue transaction, but he wants to void it. So Y does a Gift Void Transaction for X on the S90 POS terminal.

• X-Gift card holder; Y-Merchant of shop

Step	Αстіон	DISPLAY
1.	From the Idle prompt use the [SHORTCUT] button until GIFT is displayed, then press [UP/DOWN] or [SHORTCUT] button until DEACT is displayed.	INPUT ACCOUNT GIFT VOID
2.	Swipe the gift card or key in the account number man	nually.
3.	Input the transaction # to be voided.	Enter Trans #:
4.	The terminal searches the database for a Sale transaction that matches the criteria. Once found, confirm the transaction and press [ENTER]. If the terminal does not find the transaction, it displays "TRANS NOT FOUND!" and backs to idle screen.	
5.	View the transaction on the display to verify it is the correct transaction then Press [ENTER] .	#0001 SALE AMT: 2.00 **********4996
6.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be duplicated, published, or disclosed without PAX prior written permission. 70



7.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key
8.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
9.	Stop.	



Sample of Gift Void receipt

Note

Please review the following samples of Gift Void Sale receipts.

Mercha 123 MA ANYTOWN,	555-1234 nt Name AIN ST. NY 11111 PAX.US	Merch 123 M ANYTOWN WWW	-555-1234 aant Name MAIN ST. J, NY 11111 .PAX.US O P Y
02/03/2011 Gift Void		02/03/2011 Gift Voic	11:11:19
Record # Account: Entry:	6 *****6789 Swiped	Record # Account: Entry:	6 ****************6789 Swiped
Amount:	\$119.00	Amount:	\$119.00
Auth.Code: Response: Gift Balance:	123456 Voided 119.00	Auth.Code: Response: Gift Balance:	123456 Voided 119.00
CARDHOLDER NAME MERCHANT COPY THANK YOU! Please visit us Again soon!		THAI Please	MER COPY NK YOU! : visit us n soon!



4.4.6 Gift Balance Inquiry

Note

Balance Inquiry transaction is used for inquiring balance of Gift cards.

Example: X is member of Y's shop. One day X wants view the balance on his gift card account. X asks Y to do Gift Balance inquiry. Y takes the card and does Gift Balance on the S90 POS terminal. X gets the recipets and know the balance on his card.

• X-Gift card holder; Y-Merchant of shop

Step	Αстіон	DISPLAY
1.	From the Idle prompt use the [SHORTCUT] button until GIFT is displayed, then press [UP/DOWN] or [SHORTCUT] button until BALANCE displays.	INPUT ACCOUNT GIFT BALACNCE
2.	Swipe the gift card or key in the account number ma	nually.
3.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:
4.	The terminal will contact the Host Processor for an approval and print one receipt.	
5.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key
6.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
7.	Stop.	



Sample of Gift Balance Inquiry receipt

Note

Please review the following sample of a Gift Balance Inquiry receipt.

1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US		
02/03/2011 11:11:19 GIFT Balance		
Account: Entry:	************6789 Swiped	
Response: Balance:	Approved \$119.00	
MERCHANT COPY THANK YOU! Please visit us Again soon!		



4.5 Cash Transaction

4.5.1 Cash Sale

Note

Your POS Terminal supports the ability to record cash sales for record keeping purposes. To do so, the Cash EDC mode must be enabled. Cash transactions are for record keeping purposes only. No Host Processor is involved. Cash Transactions will be totaled and listed on the Batch Report.

Example: X goes to Y's shop to buy a cellphone. After X finishes his Е shopping, he goes to Y to pay for the cellphone in cash. X delivers his cash to Y, and Y processes a Cash Sale transaction on the S90 POS terminal. X takes the cellphone, then goes home.

X-Cash holder; Y-Merchant of shop •

STEP	Αςτιον	DISPLAY
1.	From the idle prompt press the [SHORTCUT] button to scroll through the list of available EDC types to select the CASH prompt is displayed.	INPUT AMOUNT CASH SALE
2.	Press [ENTER] and input the dollar amount of the transaction then press [ENTER] .	CASH SALE AMOUNT 0.00
3.	This is a feature of the <u>Invoice Mode</u> . When prompted, enter the invoice No. then press [ENTER].	ENTER INVOICE #:
4.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:
5.	This is a feature of the <u>Tip Option</u> . Input the amount for tip on the Keypad then press [ENTER].	Enter TIP1: AMOUNT 0.00
6.	Receipt will print.	•


NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be



7.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key
8.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
9.	Stop.	



Sample of Cash sale receipt

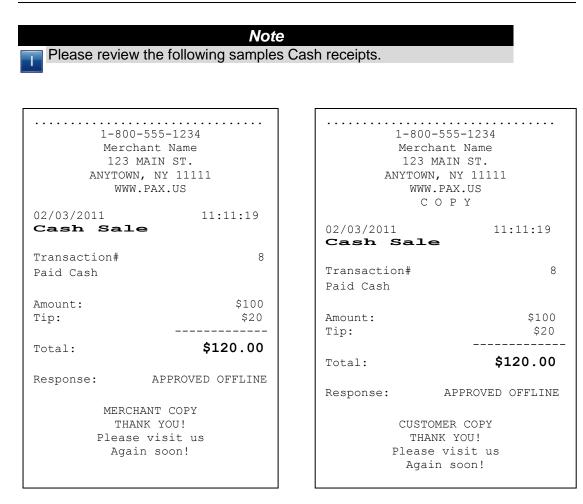



4.5.2 Cash Return

Note

- Your POS Terminal supports the ability to record cash return for record keeping purposes. To do so, the Cash EDC mode must be enabled. Cash transactions are for record keeping purposes only. No Host Processor is involved. Cash Transactions will be totaled and listed on the Batch Report.
- Example: X bought some apples from Y's shop. But he found that apples are not good. So he went ot Y's shop to return the apples and wanted Y to return his money. Y process a Cash Return transaction. Then, X gives the apples back to Y and Y gives the money back to X.
 X-Cash; Y-Merchant of shop

Step	Αςτιον	DISPLAY
1.	From the idle prompt press the [SHORTCUT] button to scroll through the list of available EDC types to select the CASH prompt is displayed.	INPUT AMOUNT CASH RETURN
2.	Press [ENTER] and input the dollar amount of the transaction then press [ENTER] .	CASH RETURN AMOUNT 0.00
3.	This is a feature of the <u>Invoice Mode</u> . When prompted, enter the invoice No. then press [ENTER].	ENTER INVOICE #:
4.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:
5.	This is a feature of the <u>Tip Option</u> . Input the amount for tip on the Keypad then press [ENTER].	Enter TIPI: AMOUNT 0.00
6.	Receipt will print.	·

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not beduplicated, published, or disclosed without PAX prior written permission.78



7.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key
8.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
9.	Stop.	



Sample of Cash Return receipt

Note Please review the following samples Cash Return receipts. 1-800-555-1234 1-800-555-1234 Merchant Name Merchant Name 123 MAIN ST. 123 MAIN ST. ANYTOWN, NY 11111 ANYTOWN, NY 11111 WWW.PAX.US WWW.PAX.US СОРҮ 02/03/2011 11:11:19 Cash Refund 02/03/2011 11:11:19 Cash Refund Transaction# 1 Transaction# 1 Paid Cash Paid Cash Amount: \$100 Amount: \$100 Response: APPROVED OFFLINE APPROVED OFFLINE Response: MERCHANT COPY CUSTOMER COPY THANK YOU! THANK YOU! Please visit us Again soon! Please visit us Again soon!



4.5.3 Cash Void Sale

Note

- To void a sale is to nullify an approved transaction, one that has already been authorized but not settled. However, if the transaction has already been settled, a RETURN must be processed. A VOID does not remove the hold on the customer's open-to-buy.
- **Example:** X bought a cellphone from Y's shop in the moring. But he found that cellphone does not work well. So he went to Y's shop to return the cellphone and wanted Y to return his money in the afternoon. He should do a Cash Void Sale to void the previous transaction. Y process a Cash Void Sale transaction. Then, X gives the cellphone back to Y and Y give the cash back to X.
 - X-Cash holder; Y-Merchant of shop

Step	Αстіон	DISPLAY
1.	From the idle prompt press the [SHORTCUT] button to scroll through the list of available EDC types to select the CASH prompt. Use the [UP/DOWN] or [SHORTCUT] button until V/SALE displays.	INPUT ACCOUNT CASH V/SALE
1.1	If Void Sale is password protected, the terminal will prompt for the manager password. When prompted, enter the password and then press [ENTER] .	ENTER PASSWORD:
2.	Input the transaction # to be voided.	Enter Trans #:
3.	The terminal searches the database for a Sale transaction that matches the criteria. Once found, confirm the transaction and press [ENTER]. If the terminal does not find the transaction, it displays "TRANS NOT FOUND!" and backs to idle screen.	
4.	View the transaction on the display to verify it is the correct transaction then Press [ENTER]	#0001 SALE AMT: 2.00

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be duplicated, published, or disclosed without PAX prior written permission. 81



5.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:
6.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key
7.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
8.	Stop.	



Sample of Cash Void Sale receipt

Note

Please review the following samples of Cash void sale receipts.

1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US		1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US C O P Y	
02/03/2011 Cash Void		02/03/2011 Cash Vo :	11:11:19 id Sale
Transaction# Paid Cash	8	Transaction# Paid Cash	8
Amount: Tip:	\$100 \$20	Amount: Tip:	\$100 \$20
Total:	\$120.00	Total:	\$120.00
1		Response:	APPROVED OFFLINE
MERCHANT COPY THANK YOU! Please visit us Again soon!		T Plea	STOMER COPY HANK YOU! ase visit us gain soon!



4.5.4 **Cash Void Return**

Note

A RETURN transaction processed in error can be VOIDED if the RETURN has not been batched out. This will nullify the RETURN previously done in the same batch.

Example: X bought a cellphone from Y's shop in the previous day. But Е he found that cellphone does not work well. So he went to Y's shop to return the cellphone and wanted Y to return his money. He should do a Cash Return to return money to X. Y process a Cash Return transaction. But X changes his mind that he wants the cellphone. So X gives his cash to Y and Y does a Cash Void Return on S90 POS terminal. X takes cellphone, then goes home.

X-Credit card holder; Y-Merchant of shop

STEP	Αстіон	DISPLAY
1.	From the idle prompt press the [SHORTCUT] button to scroll through the list of available EDC types to select the CASH prompt. Use the [UP/DOWN] or [SHORTCUT] button until V/RTRN displays.	INPUT ACCOUNT CASH V/RTRN
1.1	If Void Return is password protected, the terminal will prompt for the manager password. When prompted, enter the password and then press [ENTER] .	ENTER PASSWORD:
2.	Input the transaction # to be voided.	Enter Trans #:
3.	The terminal searches the database for a Return transaction that matches the criteria. Once found, confirm the transaction and press [ENTER]. If the terminal does not find the transaction, it displays "TRANS NOT FOUND!" and backs to idle screen.	
4.	View the transaction on the display to verify it is the correct transaction then Press [ENTER]	#0001 RTRN AMT: 2.00

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be duplicated, published, or disclosed without PAX prior written permission.



5.	This is a feature of the <u>Clerk/Server ID Mode</u> . When prompted, enter the clerk/server ID then press [ENTER].	ENTER CLERK ID:
6.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key
7.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
8.	Stop.	



Sample of Cash Void Return receipt

Note

Please review the following samples of receipts for a void return.

	1
1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US	1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US C O P Y
02/03/2011 11:11:19 CASH Void Refund	02/03/2011 11:11:19 CASH Void Refund
Transaction # 3 Paid Cash	Transaction # 3 Paid Cash
Amount: \$119.00 Response: APPROVED OFFLINE	Amount: \$119.00
Response: APPROVED OFFLINE	Response: APPROVED OFFLINE
CARDHOLDER NAME MERCHANT COPY THANK YOU! Please visit us Again soon!	CUSTOMER COPY THANK YOU! Please visit us Again soon!



4.6 Commercial Cards

Note Depending upon the Credit Host processor and preloaded BIN range table, purchasing credit cards will prompt for additional information when processing.

STEP	ACTION	DISPLAY
1.	Be sure the terminal is at the Idle Prompt	INPUT CCOUNT CREDIT SALE
2.	Swipe the credit card, Or manually key in the account number and expirati	on date.
3.	Input the dollar amount of the transaction then [ENTER]	CREDIT SALE AMOUNT 0.00
4.	If the account number was manually entered, the terminal will ask if the card is present. Depending on the user's response the terminal will prompt for V-code and other AVS settings. Enter the information for all AVS and V-Code prompts.	
5.	Enter the Customer Code then press [ENTER] . <u>OR</u> Press [ENTER] to bypass.	Cust. Code ?
6.	Enter the Tax Amount then press [ENTER] . <u>OR</u> Press [ENTER] to bypass. Continue to next step if tax amount was entered or skip to Step #9 if tax amount was bypassed.	TAX AMOUNT: AMOUNT 0.00



7.	If the entered tax amount exceeds the user input amount the terminal will display the warning.	TAX EXCEED AMT.
8.	Enter the correct tax amount then press [ENTER]. OR Press [CANCEL] to cancel transaction OR Press [ENTER] to bypass.	TAX AMOUNT 0.00
9.	The terminal contacts the Host Processor for an appreceipt.	proval and prints one
10.	Press any key for the second receipt to be printed. If a second receipt is not wanted, press [CANCEL].	TEAR SLIP> Press any Key
11.	Press [ENTER] for no receipt. <u>OR</u> Press [CANCEL] to print the second receipt.	ARE YOU SURE? ENTR=YES, CANC=NO
12.	Stop.	



5. Function Option

Note

Your POS Terminal function options allow you to realize some function conveniently. You can manage the terminal to work best for your business. You can access your terminal's menu by pressing the **[FUNC]** button.

5.1 Report

Note The terminal will print the Default Report. For details of how to set Default Report. Please refer to 6.3 Reports

STEP	Αстіон	DISPLAY
1.	From the idle prompt press [FUNC] to access via the Function Menu.	INPUT ACCOUNT CREDIT SALE
2.	Use the $[\blacktriangle]$ & $[\blacktriangledown]$ keys to scroll through the options then press [ENTER] to select. <u><i>OR</i></u> Press [2] to print the default report.	FUNCTION MENU: I. Report 2. Batch 3. Review 4. Find
3.	Input the Password and press [ENTER].	ENTER PASSWORD:
4.	Terminal will print the Default Report.	
5.	Stop.	

5.2 Batch

5.2.1 Batch Close

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be duplicated, published, or disclosed without PAX prior written permission. 89



Note

The transactions in the terminal need to be closed or settled at the end of the business day, we call this settlement the BATCH PROCESS. Payment for the day's transactions will not be received unless the batch process is completed. A manual batch process must be performed unless the terminal capture type is Autobatch.

STEP	Αстіон	DISPLAY
1.	From the idle prompt press [FUNC] then [CLEAR] to access, or press [FUNC] to access via the Function Menu.	INPUT ACCOUNT CREDIT SALE
2.	Press [3] to batch to host.	FUNCTION MENU 1. Report 2. Batch 3. Review 4. Find
3.	Select Host. Press [1] for Current Host. <u>Note:</u> If you have multiple Hosts, they will all display.	SELECT HOST: 1. Your Host here 2. Your Other Host here
4.	 Press [1] to close the batch. <u>Note:</u> The selections in the Batch Menu will vary with the Host Processor. With some, there are a number of different choices but others start the batch process immediately. 	Batch Menu: I. Batch Close 2. Force Batch
5.	The terminal will contact the host processor and print a batch report.	
6.	Stop.	

Note

If a terminal is programmed for auto batch, the host will close the batch automatically each night at a specific time. The terminal will print a batch report. However, the database will only clear at the time of the first attempted sale in the new batch. If your terminal is programmed for auto batch, you may still have the option to batch manually. When Applicable, signature and check images will upload before batching.



Sample of Batch receipt

Note

Please review the following sample of a manual batch report. "Star *" - to transactions originated as store'n'forward on reports

1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US Batch Report 02/03/2011 11:11:19 _____ Term. Number: 1000934017 _____ EDC: CREDIT Trn Crd Tp Acct \$Amount *********************************
 1
 VIS
 SL
 1234
 70.00

 2
 VIS
 SL
 2345
 45.00

 3
 * M/C
 RT
 4567
 10.55

 4
 * VIS
 VS
 1234
 70.00
 ***** CREDIT Records: 4 CREDIT Total: 34.45 TOTAL OF TRANSACTIONS WITHOUT TIPS: 34.45 _____ EDC: DEBIT Trn Tp Acct \$Amount 1 SL 4321 22.50 1 DEBIT Records: DEBIT Total: 17.50 TOTAL OF TRANSACTIONS WIINOUT TIPS: Incl. Cash Back 17.50 5.00 ______ 5 Records: 56.95 Overall: End of Report



5.2.2 Force Batch

Note Not all hosts support force batch close, this feature can solve the problem when batch close failed because of the un-balance for host and local transactions amount and record.

STEP	Αстіон	DISPLAY
1.	From the idle prompt press [FUNC] then [CLEAR] to access, or press [FUNC] to access via the Function Menu.	INPUT ACCOUNT CREDIT SALE
2.	Press [3] to batch to host.	FUNCTION MENU I. Report 2. Batch 3. Review 4. Find
3.	Select Host.	SELECT HOST: I. Your Host Here 2. Your Other Host Here
4.	Press [2] to close the batch. <u>Note:</u> The selections in the Batch Menu will vary with the Host Processor. With some, there are a number of different choices but others start the batch process immediately.	Batch Menu: I. Batch Close 2. Force Batch
5.	The terminal will contact the host processor and print a batch report.	
6.	Stop.	



Sample of Batch receipt

Note

Please review the following sample of a force batch report. "Star *" - to transactions originated as store'n'forward on reports

1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US Batch Report		
02/03/2011	11:11:19	
Terminal Number:	1000934017	
EDC: Batch Number: Total Records =75 Overall =30080.00	ALL 1234	
End of Report		



5.3 Review

Note

By this function, the user can review all of the transacitons recorded on the POS terminal. Transations are separatedy by EDC type and the user can also view the total amount (not including loyalty)

Step	Αстіон	DISPLAY
1.	From the idle prompt press [FUNC] to access via the Function Menu.	INPUT ACCOUNT CREDIT SALE
2.	Use the $[\blacktriangle] \& [\lor]$ keys to scroll through the options then press [ENTER] to select. <u>OR</u> Press [4] to print the default report.	FUNCTION MENU: 1. Report 2. Batch 3. Review 4. Find
3.	Input the Password and press [ENTER].	ENTER PASSWORD:
4.	Scroll through the EDC Type options then press [ENTER] to select. <u>OR</u> Press the number corresponding with your selection.	Scroll Totals <> I.CREDIT 1000.00 2. DEBIT 100.00 3. EBT 100.00 4.GIFT 100.00
5.	View details of transactions. Use the [▲] & [▼] keys to scroll different transaction	#0001 SALE AMT: 1000.00 TIP: 10.00 ***********5454
6.	Press [CANCEL] to go back	
7.	Stop.	

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be duplicated, published, or disclosed without PAX prior written permission. 94



5.4 Find

Note

By this function, the user can try to find information of the transacitons recorded on the POS terminal. Transations can be traced by Last 4 Digits of card.

STEP	Αстіон	DISPLAY
1.	From the idle prompt press [FUNC] to access via the Function Menu.	INPUT ACCOUNT CREDIT SALE
2.	Use the [▲] & [▼] keys to scroll through the options then press [ENTER] to select. <u>OR</u> Press [5] to print the default report.	FUNCTION MENU: 1. Report 2. Batch 3. Review 4. Find
3.	Input the Password and press [ENTER].	ENTER PASSWORD:
4.	Input Last 4 Digits of the card the user wants to trace	Last 4 Digits
5.	View details of transactions. Use the [▲] & [▼] keys to scroll different transaction	#0001 SALE AMT: 1000.00 TIP: 10.00 ************5454
6.	Press [CANCEL] to go back.	
7.	Stop.	

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not beduplicated, published, or disclosed without PAX prior written permission.95



5.5 Counter Tip

Note

Counter Tip can be used in either a Retail or Restaurant location. When the tip is to be entered at the time of the transaction, a Counter Tip receipt can be printed and given the customer for them to enter the desired tip amount. The customer would enter the tip amount on the receipt and return the receipt along with their card to the cashier for processing. The Counter Tip function can be access via a Hot Key (must be programmed in the POS Terminal Management System before the terminal file is downloaded) or via the Function Menu.

STEP	Αстіон	DISPLAY
1.	From the idle prompt press [FUNC] then [6] to access Counter Tip via the Function Menu.	FUNCTION MENU 2. Batch 3. Review 4. Find 5. Counter Tip
2.	Enter the base amount of the transaction then press [ENTER].	Tip Receipt AMOUNT 0.00
3.	The Tip Receipt will print. Give this receipt to the customer to write the tip amount. The customer should give the receipt back to the cashier along with their credit/debit card.	
4.	Stop.	



Sample of Counter Tip receipt

1-800-555-1234 Merchant Name 123 MAIN ST. ANYTOWN, NY 11111 WWW.PAX.US		
02/03/2011 Sale:	11:11:19	
Bse Amount:	\$100.00	
Tip:	\$·	
Total Amt:	\$	
THANK YOU! Please visit us Again soon!		



5.6 Tip Adjust

5.6.1 Credit RESTAURANT Adjust Tip

Note

This transaction can be used to adjust the final amount of a transaction. It is supported by RESTAURANT ONLY.

These transactions can be adjusted for as many times as you want in current batch.

If transaction cannot be adjusted, "CANNOT ADJUST"/"ALREADY VOIDED" is displayed.

Step	ACTION	DISPLAY
1.	From the idle prompt press [FUNC] then [7] to access Tip/Tab Menu via the Function Menu.	FUNCTION MENU 3. Review 4. Find 5. Counter Tip 6. Tip Menu
2.	Select [1] Add Tips.	TIP MENU I. Add Tips
3.	Select type of finding transaction:	Tip Menu: 1. Scroll Untipped 2. By Invoice# 3. By Srvr/Clerk 4. By Trans.
4.	Scroll untipped: Use the [▲] & [▼] keys to scroll through the displayed transactions then press [ENTER] to select.	#0001 SALE AMT: 2.00 *********4996
	<u>OR.</u>	
	Enter the invoice No. then press [ENTER] to find the transaction.	ENTER INVOICE #:
	<u>OR,</u>	

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not beduplicated, published, or disclosed without PAX prior written permission.98



	Enter the clerk/server ID then press [ENTER] to find the transaction.	ENTER CLERK ID:
	<u>OR,</u>	
	Input the transaction # to be adjusted.	Enter Trans #:
	<u>OR,</u>	
	Select card type of scrolling transaction:	Select Card Type 1.Visa 2. MasterCard 3. AMEX 4. DCI-DISC
	<u>OR,</u>	
	Enter the corresponding digits then press [ENTER].	Last 4 Digits:
5.	View the transaction on the display to verify it is the correct transaction then Press [ENTER]	#0001 SALE AMT: 2.00 **********4996
6.	If original transaction is with tip, the terminal will prompt for the manager password. When prompted, enter the password and then press [ENTER].	ENTER PASSWORD:
7.	Current tip is displayed in the first line Input new tip Amount then press [ENTER] .	TIP1: 0.10 New Rate: 0.00



8.	This is a feature of the <u>Edit Confirm Option</u> . Press [ENTER] for accept tip. <u>OR</u> Press [CANCEL] to cancel transaction.	TIP I :0.20 ENTR=YES, CANC=NO
9.	Stop.	



5.7 Reprint

Note

This function allows you to print a Customer copy or a Merchant copy of the receipt for the last processed transaction or for any transaction.

E Example: The terminal ran out of paper as the Customer's receipt was printing. Replace the paper and print a copy of the Customer's receipt using the Receipt Copy function.

STEP	Αстіон	DISPLAY
1.	From the Reports Menu, press [5] to select Receipt Copy	REPORTS: 2. Current Report 3. History Report 4. Display Trans. 5. Receipt Copy
2.	Press [1] to print a copy of the Last Customer Receipt. <u>OR</u> Press [2] , choose the EDC type then enter the transaction number to print a copy of Any Receipt. If No last Receipt option is available, then "Any Receipt" option is selected automatically.	RECEIPT COPY: I. Last Cust. Rcpt 2. Any Receipt
3.	If Any Receipt was selected Select the EDC Type.	SELECT PMT TYPE: 1. CREDIT 2. DEBIT 3. EBT 4. GIFT
4.	Enter the transaction number then press [ENTER].	Enter Trans #:



5.	Choose Copy Type. Press [1] for Customer.	Choose Copy Type I. Customer 2. Merchant
	<u>OR</u>	
	Press [2] for Merchant.	

Receipt Copy, Continued

STEP	Αстіон	DISPLAY
6.	If the terminal does not find the transaction, it displays " TRANS NOT FOUND!" and backs to Step 2.	
7.	The requested receipt will print.	
8.	Stop.	



6. Menu Option

Note

Your POS Terminal menu options allow you to control your terminal settings without the inconvenience of reprogramming. You can manage the terminal to work best for your business. The menus are divided into main menu options, which have submenu options. You can access your terminal's menu by pressing the **[MENU]** button.

6.1 Accessing the Main Menu

STEP	ACTION	DISPLAY
1.	From the Idle Prompt press [MENU].	INPUT ACCOUNT CREDIT SALE
2.	 Use the [▲] & [▼] keys to scroll through the options then press [ENTER] to select. <u>OR</u> Press the number on the keypad that corresponds with your selection. 	MAIN MENU: 1. Reports 2. Merchant Settings 3. Operation Settings 4. Hosts Settings
3.	Press [CANCEL] to return to the Idle Prompt.	INPUT CCOUNT CREDIT SALE
4.	Stop.	



6.2 Main Menu Options

Note

The items available in the terminal's main menu are:

No.	NAME	DESCRIPTION	
1	Reports	Configure report settings and print various reports.	
2	Merchant Settings	Set security, authorization, receipt header and trailer, etc.	
3	Operation Settings	Set receipt printing options, settings, connected peripherals, etc.	
4	View or modify merchant and terminal IDs,Hosts Settingsauthorization and batch phone numbers, print EDReport.		
5	System Settings	tem Settings Time & Date, PIN Pad options, Encryption keys, Fraud Control, etc.	
6	Communications	Configure communication parameters and settings.	



6.3 Reports

The first menu option is the Report Menu. This generates eight different report options:

- Default Report
- Current Report
- □ History Report
- Display Trans
- Tip Report

DESCRIPTION D FileSys Report

Menu

REPORTYou will be prompted in the Current Report sub-menu to choose
a report type. When the setting is saved at the end of the Current
Report process, the Report Type specified is the type of report
printed for a Default Report and a Batch Report. Below is a list of
report types and their definitions.

REPORT	DEFINITION	
Condensed Report	This type of report will print the transaction number, card type, transaction type, last four digits of the account number, and the amount of the transaction.	
Short Report	This type of report will print the transaction type and the amount of the transaction.	
Journal Report	This type of report will print a full copy of each transaction.	
Totals Only	This type of report will print daily totals only.	



6.3.1 Default Report

Note				
T	This report lists the terminal's daily transactions in a format that is configured in the Current Report menu. Current Report is described on the next page.			

Example: I print out a current report every time there is a change in shifts. To print this report quickly and easily I set it as my default report.

STEP	ACTION	DISPLAY
1.	From the Main Menu press [ENTER]. <u>OR</u> Press [1] to access the Reports Menu.	MAIN MENU: 1. Reports 2. Merchant Settings 3. Operation Settings 4. Hosts Settings
2.	Input the Password and press [ENTER].	ENTER PASSWORD:
3.	From the Reports Menu press [ENTER] <u>OR</u> Press [1] to select Default Report	REPORTS: 1. Default Report 2. Current Report 3. History Report 4. Display Trans.
4.	Stop.	



6.3.2 Current Report

Note
This report lists the terminal's daily transactions in a format that can be customized. You can choose this report as your default report by saving it when the terminal asks: "Save as Default?" If yes, press ENTER, if no then press CANCEL.

Ε

Example: I want a one-time report of Void transactions only so I printed a current report selecting VOID as the transaction type. I did not want to save it as my default report so I pressed CANCEL when prompted.

STEP	ACTION	DISPLAY
1.	From the Reports menu, press [2] to select Current Report.	REPORTS: 1. Default Report 2. Current Report 3. History Report 4. Display Trans.
2.	se the [▲] & [▼] keys to scroll through the Report /pe options then press [ENTER] to select. <u>R</u> ress the number corresponding with your election. Clerk/Server mode is enabled, terminal prompts or specific clerk/server. Refer to Step 5.	



Current Report, Continued

STEP	Αстіон	DISPLAY
3.	Scroll through the EDC Type options then press [ENTER] to select. <u>OR</u> Press the number corresponding with your selection.	SELECT PMT TYPE: I. ALL 2. CREDIT 3. DEBIT 4. EBT
4.	Scroll through the Card Type options then press [ENTER] to select. <u>OR</u> Press the number corresponding with your selection.	ENTER CARD TYPE: 1. ALL 2. Visa 3. MasterCard 4. AMEX
5.	Scroll through the options then press [ENTER] to select. <u>OR</u> Press the number corresponding with your selection.	SELECT CLERK 1. ALL 2. Spec. Servr/Clerk
6.	If a specific clerk/server is selected, terminal prompts for clerk/server ID. Otherwise, skip to Step 5. Enter clerk/server ID then press [ENTER].	ENTER CLERK ID:
7.	If clerk/server mode is not enabled, By Clerk/Server# will not be a choice. Scroll through Sorting Options then press [ENTER] to select. <u>OR</u> Press the number corresponding with your selection.	SORT METHOD: 1. By Trans # 2. By Card Type (3. By Srvr/Clerk#)
8.	Transaction types include All, Sale, Forced, Return, Void Sale, Void return and Void Forced. Scroll through the Transaction Type options then press [ENTER] to select. <u>OR</u> Press the number corresponding with your selection.	SELECT TRAN. TYPE I. ALL 2. SALE 3. FORCED 4. RETURN



	То	THEN	Set Cur. Defaults
9.	Save this as your default report	Press [ENTER]	ENTR=YES, CANC=NO
	Keep your current default setting	Press [CANCEL]	
10.	Stop.		



Transaction types on Report

The Condensed Report will list the different transaction types with 2-letter designations. The following table explains the transaction designators:

DESIGNATOR	TRANSACTION TYPE	
SL	Sale	
RT	Return	
VE	Verify	
тк	Forced	
VS	Void Sale	
VR	Void Return	
VF	Void Forced	
OP	Open Tab	
ТВ	Closed Tab	
СТ	Continue Tab	



Sample of Report receipt

Note

Please review the examples below. The examples are Condensed, Short, Journal and Totals Only (next page) versions of the same information.

Current Report			
02/03/2011	11:11:19		
	000123456		
EDC:	CREDIT		
Batch Number: Trn Crd TpAcct ***********************************	**************************************		
CREDIT Total: ====================================	522.13 DEBIT \$ Amount		
**************************************	12.00 67.00 ******** 2 79.00 10.00		
Records: Overall: End of Report	11 601.13		

Current	Report
02/03/2011	11:11:19
Term. Number:	1000123456
EDC:	CREDIT
Batch Number:	1
Sale:	12.00
Sale:	45.65
Void Sale:	12.00
Sale:	122.78
Returned:	15.50
Sale:	88.20
Sale:	9.00
Verified:	300.00
Ticket Only:	272.00
CREDIT Records: CREDIT Total:	9 522.13
EDC:	DEBIT
Sale:	12.00
Sale: Cash Back: Total:	57.00 10.00 67.00
DEBIT Records: DEBIT TOTAL: Incl. Cash Back	2 79.00 10.00
Records: Overall:	11 601.13
End of Report	·

Condensed Report

Short Report

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be

 duplicated, published, or disclosed without PAX prior written permission.

 111



Sample of Report receipt, Continued

Note

Note that the example of the Condensed Report on this page lists Credit transactions for Visa cards only. The Current report can be customized to list specific EDC, card or transaction types only.

Current Report		
02/03/2011	11:11:19	
Term. Number:	1000123456	
EDC:	CREDIT	
Batch Number: Sale: Transaction # Trans. Date: Trans. Time: Entry: Account: Exp. Date: Response: Sale: Transaction # Trans. Date: Trans. Time: Entry: Account: Exp. Date: Response:	1 12.00 1 02/01/11 09:10:00 Swiped ************************************	
**** ****** Cash Records: Overall: End of Report	**************************************	

Current	 Report
02/03/2011	11:11:19
Term. Number:	1000123456
TOTALS ONLY	
EDC:	CREDIT
Batch Number:	1
CREDIT Records:	9
CREDIT Total:	522.13
=======================================	
EDC:	DEBIT
**************************************	*******************
DEBIT Records: DEBIT TOTAL:	79.00
Incl. Cash Back	10.00
=======================================	
Records:	11
Overall:	601.13
End of Report	

Totals Only Report

Journal Report

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be duplicated, published, or disclosed without PAX prior written permission.



Sample of Report receipt, Continued

Current Report				
02/03/				11:11:19
Term.	Number:			1000123456
EDC:				CREDIT
Card I Trn ****** 1 3	Crd ****** VIS VIS	* * * * SL VS	* * * * * 1111 1111	1 VISA \$ Amount ********* 12.00 12.00
4 8	VIS	VE	5678	122.78 300.00
CREDIT	Record: Total:		* * * * *	********** 4 122.78 =======
Record Overal				4 122.78
End of	Report			

Condensed Report for Visa Credit Transactions Only

Current	 Report
02/03/2011	11:11:19
Term. Number:	1000123456
Server:	ALICE
******************************** 1 SL 20 3 SL 17 5 SL 15 8 SL 30	D.00120.007.00105.505.0090.000.00200.00
<pre>*************************** CREDIT Records: CREDIT Total: Tip: Total Tips: Disnt. Tips: ====================================</pre>	**************************************
**************************************	330.00
6 SL	2.00 70.00 4.00 25.00 7.00 100.00 *************
CREDIT Total: Tip: Total Tips: Disnt. Tips:	525.00 87.00 87.00 85.50
Records: Overall:	8 1040.50
End of Report	

Condensed Report for Credit only sorted by Server ID in Restaurant

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be duplicated, published, or disclosed without PAX prior written permission.



6.3.3 History Report

Note
The history reports prints batch totals for the preceding 300 batches. If there are three different EDC types programmed into the terminal, each of the three creates its own batch information. This means that a History Report would be able to print information for the last 100 days.

Ε

Example: I want to balance my terminal against last month's statement. Print a History report starting with the first day of last month and ending with the last day. Select the Per Batch option for the individual batch totals and the overall total.

Step	Αстіон	DISPLAY
1.	From the Reports menu, press [3] to select History Report	REPORTS: 1. Default Report 2. Current Report 3. History Report 4. Display Trans.
2.	Using the numeric keypad input the batch date you would like the report to begin with then press [ENTER].	From Batch Date: MM/DD/YYYY
3.	Using the numeric keypad input the batch date you would like the report to end with then press [ENTER].	To Batch Date: MM/DD/YYYY
4.	Use the [▲] & [▼] keys to scroll through the EDC Type options then press [ENTER] to select. OR, Press the number corresponding with your selection.	SELECT PMT TYPE: I. ALL 2. CREDIT 3. DEBIT 4. EBT



History Report, Continued

Step	Αςτιον	DISPLAY	
5.	Scroll through the Card Type options then press [ENTER] to select. <u>OR</u> Press the number corresponding with your selection.	ENTER CARD TYPE: 1. ALL 2. Visa 3. MasterCard 4. AMEX	
	Transaction types include All, Totals Only, Sale, Forced, Verify, Return, Void Sale, Void return and Void Forced.	SELECT TRAN. TYPE	
6.	Scroll through the Transaction Type options then press [ENTER] to select. <u>OR</u> Press the number corresponding with your selection	I. ALL 2. TOTALS ONLY 3. SALE 4. FORCED	
7.	Stop.		



Sample of History receipt

Note

Note the Totals and Per Batch History Reports for the same time period.

History Report			
02/03/2011 Trans Type:		11:11:19 ALL	
02/01/11	to	02/14/11	
EDC: Overall: ******	429 ******	CREDIT 5823.50	
EDC: Overall: Incl. Cash Ba	-	DEBIT 2018.87 470.00	
End of Report			

Report
11:11:19 ALL
0 02/14/11
02/01/11 1
134.78 300.00 12.00 122.78
02/01/11 2
75.66 75.66 20.00
2018.87 470.00



6.3.4 Display Transactions

Note This function displays the daily transactions on the terminal's LCD display. Use the up and down arrow keys to scroll through the transactions. Use the left and right arrow keys to view additional information about the current transaction and to return to the previous screen. To VOID or print a receipt of the current transaction use the description below.

STEP	Αстіон	DISPLAY
1.	From the Reports menu, press [4] to select Display Transaction.	REPORTS: 1. Default Report 2. Current Report 3. History Report 4. Display Trans.
2.	The searching method includes Scroll All, By Invoice Number, By Clerk/Server ID, By Transaction Number, By Card Type and By Card Number. By Invoice Number and By Clerk/Server ID only appears when corresponding feature is enabled. Use the [▲] & [▼] keys to scroll through the view methods then press [ENTER]. <u>OR</u> Press the number corresponding with your selection.	Display Trans. I. Scroll All 2. By Trans. # 3. By Card Type 4. By Card Num.
3.	Scroll through the EDC Type options then press [ENTER] to select. <u>OR</u> Press the number corresponding with your selection.	SELECT PMT TYPE: 1. ALL 2. CREDIT 3. DEBIT 4. EBT



Display Transactions, Continued

Step	ACTION		DISPLAY
	lF		THEN
	You selected to scroll through all transaction	The first transaction will show on the display.	
	You selected to view by Invoice Number	You will be prompted to input the Invoice Number.	
4.			vill be prompted to input the Clerk/Server ID.
	You selected to view by Transaction #	You w	vill be prompted to input the Transaction #.
	You selected to view by Card Type	You will be	prompted to select a card type.
	If you selected to view by Card Number		e prompted to enter the last four digits of the card number.
5.	Stop.		



6.3.5 Tip Report

Note
The Tip Report can be printed for all servers or it can be printed for a specific server. This report lists all tips entered for each transaction and includes a blank line where cash tips can be entered and a signature line for the server to confirm.

STEP	Αстіон	DISPLAY
1.	From the Reports menu, press [6] to select Tip Report	REPORTS: 3. History Report 4. Display Trans. 5. Tip Report 6. FileSys Report
2.	If Clerk/Server mode is enabled, terminal prompts All or Specific clerk/server. Otherwise, skip to Step 4. Press [1] for all servers <u>OR</u> Press [2] for a specific server.	SELECT CLERK 1. ALL 2. Spec. Servr/Clerk
3.	If a specific clerk/server is selected, terminal prompts for clerk/server ID. Otherwise, skip to Step 4. Enter clerk/server ID then press [ENTER].	ENTER CLERK ID:
4.	 Use the [▲] & [▼] keys to scroll through the EDC Type options then press [ENTER] to select. <u>OR</u> Press the number corresponding with your selection 	SELECT PMT TYPE: I. ALL 2. CREDIT 3. DEBIT 4. EBT
5.	Scroll through the Card Type options then press [ENTER] to select. <u>OR</u> Press the number corresponding with your selection	ENTER CARD TYPE: 1. ALL 2. Visa 3. MasterCard 4. AMEX



Tip Report, Continued

STEP	Астіс	DISPLAY		
	То	THEN	Set Cur. Defaults	
6.	Save this as your default report	Press [ENTER]	ENTR=YES, CANC=NO	
	Keep your current default setting	Press [CANCEL]		
7.	The report will print.			
8.	Stop.			



Sample of Tip Report receipt

Note

Please review the following sample of Tip Report receipt.

TIP RE	PORT
02/03/2011	11:11:19
Term. Number:	1000731686
Clerk ID:	ALL
EDC:	CREDIT
Batch Number: TOTAL SALES: Tip: GRAND TOTAL:	4 200.50 40.00 240.50
Records: Overall:	3 240.50
CASH TIPS:	\$•
TIP OUTS:	\$·
End of Report	



6.3.6 File System Report

Note

The File System Report is available AS AN OPTIONAL feature of the application. This report will list the number of records (transactions) currently stored in the terminal for each EDC type. The report also lists how many more transactions of each EDC type the terminal can store if only that EDC type is processed.

STEP	ACTION	DISPLAY		
1.	From the Reports menu, press [7] to select File System Report	REPORTS: 3. History Report 4. Display Trans. 5. Tip Report 6. FileSys Report		
2.	The File System Report will be printed.			
3.	Stop.			

Sample of File System Report receipt

Note The values displayed in the sample reports are reflective of one POS Terminal model. Reports printed from other models will reflect the memory capacity of that model.

FII	LE SYST	EM REP	 ORT	No Transactions	======================================	SYST	'EM RE	PORT
02/03/20	11		11:11:19		02/03/2011			11:11:19
Free Spa	ce:		149504	Transactions	Free Space	:		1495040
EDC CREDIT DEBIT EBT CASH 				for each EDC Notice how transactions of one EDC affect the memory	EDC CREDIT DEBIT EBT CASH *Number o can be st			
				capacity of all EDC types.				



6.4 Merchant Settings

This menu contains eight different functions that can be changed manually, if necessary. They are:

- Authorizations
- Security Setting
- Edit Header
- Edit Trailer
- MENU Set Batch Time

DESCRIPTION

- Additional PromptsSet Cash EDC
- Clerk/Server Name



6.4.1 Authorizations

6.4.1.1 Trans. Types

- Note
 This function enables, disables or sets password protection for specific transaction types, such as Voids, Returns, Forced Sales, etc. For all EDC Types the Sale transaction cannot be disabled or password protected. Some transaction types are disabled by the Host and cannot be enabled.
- **Example:** As the Manager of the store, I don't want anyone to process a Void or Return but me. Set the Void and Return functions to Manager Only. The password will then be required to process those transactions. *Remember the password is either the default current date, MMDDYYYY, or the user specified 8-digit password.

STEP	Αстіон	DISPLAY		
1.	From the Main Menu press [2] to access Merchant Settings	MAIN MENU: 1. Reports 2. Merchant Settings 3. Operation Settings 4. Hosts Settings		
2.	Press [1] to access Authorization	MERCHANT PARAMS: 1. Authorizations 2. Security Settings 3. Edit Header 4. Edit Trailer		



Transaction Type, Continued

		_
STEP	ACTION	DISPLAY
3.	Input the Password and press [ENTER]	ENTER PASSWORD:
4.	Press [1] to edit authorization for Transaction Types	AUTHORIZATION 1. Trans. Types 2. Card Types 3. Debit Prompt
5.	 Use the [▲] & [▼] keys to scroll through the EDC Type options then press [ENTER] to select. <u>OR</u> Press the number corresponding with your selection. 	SELECT PMT TYPE: I. CREDIT 2. DEBIT 3. EBT 4. GIFT
6.	Scroll to select the Transaction Type then press [ENTER]. OR Press the number corresponding with your selection.	CREDIT I. FORCED (EN) 2. AUTH (EN) 3. RETURN (EN) 4. VOID/SALE (EN) Information in the parenthesis is the current setting EN – Always Enabled DIS – Disabled MGR – Password Protected
7.	Scroll to select Enable, Disable or Manager Only for the Transaction Type then press [ENTER]. <u>OR</u> Press the number corresponding with your selection.	CREDIT FORCED I. Disabled 2. Always Enabled 3. Pswd Protected
8.	Stop.	



6.4.1.2 **Card Types**

Note

This function allows the user to enable or disable specific card types, such as Visa, MasterCard and American Express.

Example: We are not set up to accept American Express cards but Е sometimes my cashier takes them by mistake, which is a problem. Disable the AMEX card type and the terminal will post an error as soon as the card is swiped.

STEP	ACTION	DISPLAY
1.	From the Merchant Settings menu, press [1] to access Authorizations	MERCHANT PARAMS: 1. Authorizations 2. Security Settings 3. Edit Header 4. Edit Trailer
2.	Input the Password and press [ENTER]	ENTER PASSWORD:
3.	Press [2] to edit authorization for Card Types	AUTHORIZATION I. Trans. Types 2. Card Types 3. Debit Prompt
4.	Use the [▲] & [▼] keys to select the Card Type then press [ENTER]. <u>OR,</u> Press the number corresponding with your selection	Choose Card Type 1. Visa + 2. MasterCard + 3. AMEX + 4. DCI-DISC +
5.	Scroll to select Enable or Disable for Card Type then press [ENTER]. <u>OR</u> Press the number corresponding with your selection.	Visa + I. Disabled 2. Always Enabled * A '+' indicates the card type is enabled and a '-'indicates disabled.
6.	Stop.	

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be duplicated, published, or disclosed without PAX prior written permission.



6.4.1.3 Debit Prompt

Note When this function is enabled the terminal will prompt the user to select CREDIT or DEBIT when a card is swiped. It will only prompt the user to make a selection when the payment type is CREDIT.

STEP	ACTION	DISPLAY
1.	From the Merchant Settings menu, press [1] to access Authorizations	MERCHANT PARAMS: 1. Authorizations 2. Security Settings 3. Edit Header 4. Edit Trailer
2.	Input the Password and press [ENTER]	ENTER PASSWORD:
3.	Press [3] to select Debit Prompt	AUTHORIZATION I. Trans. Types 2. Card Types 3. Debit Prompt
4.	Current setting is displayed in the first line. Press [1] to turn Debit Prompt OFF. <u>OR</u> Press [2] to turn Debit Prompt ON.	DEBIT PROMPT: I I. OFF 2. ON
5.	Stop.	



6.4.2 Security Settings

Security settings has four sub-menus. See the chart below option information.

- User Password
- Batch
- Menu

DESCRIPTION

- Secure Card
- Card Manual Entry

FUNCTION	OPTIONS
User Password	 Set the User defined password
Batch	Always EnabledPassword Protected (Manager Only)
Secure Card	 No Security Last 4 Digits – Manually enter last four digits of account number and to be compared with the last four digits swiped(Default setting) All Digits – Manually enter the complete account number and to be compared with the account number swiped Display Account – Account number swiped is displayed on screen and to be compared against the embossed account number by the user Last 4 Digits & Display Account – Manually enter last four digits of account number, to be compared with the last four digits swiped, and, Account number swiped is displayed on screen and to be compared against the embossed account number by the user All Digits & Display Account – Manually enter last four digits swiped, and, Account number swiped is displayed on screen and to be compared against the embossed account number by the user All Digits & Display Account – Manually enter the complete account number, to be compared with the account number swiped, and, Account number swiped is displayed on screen and to be compared against the embossed account number swiped, and, Account number swiped is displayed on screen and to be compared against the embossed account number swiped, and, Account number swiped is displayed on screen and to be compared against the embossed account number swiped, and, Account number swiped is displayed on screen and to be compared against the embossed account number swiped account number swiped is displayed on screen and to be compared against the embossed account number swiped, and account number swiped is displayed on screen and to be compared against the embossed account number swiped, and account number swiped is displayed on screen and to be compared against the embossed account number by the user
Card Manual Entry	 Disabled Always Enabled(Default setting) Password Protected

6.4.2.1 User Password

Note This function allows you to set a user specified password. The POS Terminal POS terminal password defaults to the current date (MMDDYYYY). This password changes daily.

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not beduplicated, published, or disclosed without PAX prior written permission.128



It is advised that this default password be changed upon receipt of the terminal. The new password should be a series of eight non-sequential numbers that can be easily remembered. Using birthdays or anniversaries is not advised as unauthorized persons can easily discover these passwords.

If the new User Password is forgotten, download the Parameters to re-establish the default password.

STEP	ACTION	DISPLAY	
1.	From the Merchant Settings menu press [2] for Security Settings.	MERCHANT PARAMS: 1. Authorizations 2. Security Settings 3. Edit Header 4. Edit Trailer	
2.	Press [1] for User Password.	SECURITY SWITCH: I. User Password 2. Batch 3. Secure Card	
3.	Press [ENTER] to change the password.	Change Password? ENTR=YES, CANC=NO	
4.	The password is anything other than the default password (MMDDYYYY), enter the OLD password then press [ENTER] .	Old Password:	
5.	Enter the NEW password then press [ENTER] . <u>Note:</u> The password must be one to sixteen digits in length.	ENTER PASSWORD: *****	
6.	Re-enter the NEW password then press [ENTER] .	REENTER PASSWORD *****	
7.	Stop.		



6.4.2.2 Batch

Note

Use this sub-menu to secure the Batch function.

Example: I want to make sure that no one closes the batch but me. Set the Batch function to be password protected.

Step	Αстіон	DISPLAY
1.	From the Merchant Settings menu, press [2] to access Security Settings.	MERCHANT PARAMS: 1. Authorizations 2. Security Settings 3. Edit Header 4. Edit Trailer
2.	Press [2] to secure the Batch function.	SECURITY SWITCH: 1. User Password 2. Batch 3. Secure Card
3.	Enter the password then press [ENTER] .	ENTER PASSWORD:
4.	Press [1] for Always Enabled. <u>OR</u> Press [2] for Password Protected.	Batch: I I. Always Enabled 2. Pswd Protected
5.	Stop.	





6.4.2.3 Security Card

Note

Use this sub-menu to verify that the account number swiped matches the number on the front of the card.

STEP	Αстіон	DISPLAY
1.	From the Merchant Settings menu, press [2] to access Security Settings.	MERCHANT PARAMS: 1. Authorizations 2. Security Settings 3. Edit Header 4. Edit Trailer
2.	Press [3] for Secure Card.	SECURITY SWITCH: 1. User Password 2. Batch 3. Secure Card
3.	The current setting is displayed in the first line. Scroll to select the option then press [ENTER] .	Secure Card: I I. No Security 2. Last 4 Digits 3. All Digits 4. Display Account
4.	Stop.	



6.4.2.4 Card Manual Entry

Note Use this sub-menu to enable, disable or password protect manual entry of a credit transaction.

Step	Action	DISPLAY
1.	From the Merchant Settings menu, press [2] to access Security Settings.	MERCHANT PARAMS: 1. Authorizations 2. Security Settings 3. Edit Header 4. Edit Trailer
2.	Press [4] for Card manual Entry.	SECURITY SWITCH: 2. Batch 3. Secure Card 4. Card Man. Entry
3.	Press [1] for all EDC types. <u>OR</u> Select the specific EDC type.	SELECT PMT TYPE: 1. ALL 2. CREDIT 3. EBT 4. CHECK
4.	Enter the password then press [ENTER].	ENTER PASSWORD:
5.	Scroll to select the option then press [ENTER].	Card Man. Entry:2 1. Disabled 2. Always Enabled 3. Pswd Protected
6.	Stop.	



6.4.3 Edit Header/Trailer

Note

These functions allow you to customize the receipt header and trailer. Both the header and trailer are five-lines with 32-characters per line.

STEP	ACTION	DISPLAY	
1.	From the Merchant Settings menu, press [3] to Edit the Receipt Header <u>OR, Press [4] to Edit the Receipt Trailer</u>	MERCHANT PARAMS: 1. Authorizations 2. Security Settings 3. Edit Header 4. Edit Trailer	
2.	Scroll to select the option then press [ENTER].	EDIT HEADER: 1. Header Text 1 2. Header Text 2 3. Header Text 3 4. Header Text 4	
	Press $ullet$ to move cursor to the right	HEADER TEXT I PAX TOWN	
3.	Press [FUNC] to swith Insert/Overwrite Mode		
	Press 1 to move cursor to the left		
4.	Input in the text that you want printed out on the receipt. (See instructions below)		
5. E	 To change the letters, first press the number key that has the letter engraved on the top then press the [ALPHA] key to cycle through the other characters also on that key <u>For example</u>: The #2 key on the keypad also has the letters A, B and C printed on it. When you first press this key, the display will show the number 2, by pressing the [ALPHA] key it will cause the display to change from a 2 to the letter A. Press [ALPHA] again and it becomes a B and finally C. Pressing another numeric key will advance the cursor on the display to the next position. Use the ♥ key to move the cursor to the right. 		
6.	Press [ENTER] to Save Changes <u>OR</u> Press [CANCEL] to Abort Changes		
7.	Stop.		

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be duplicated, published, or disclosed without PAX prior written permission. 134



6.4.4 Set Batch Time

Е

Example: The AutoBatch report is printing in the middle of the day. I accessed the Set Batch Time function and changed the time. Now the report prints after we have closed for the day.

STEP	Action		DISPLAY	
1.	From the Merchant Se the batch time.	the Merchant Settings menu, press [5] to set atch time.		MERCHANT PARAMS: 2. Security Settings 3. Edit Header 4. Edit Trailer 5. Set Batch Time
2.	Input the Password and press [ENTER]		ENTER PASSWORD:	
3.	Scroll to select the hos	croll to select the host then press [ENTER] .		SELECT HOST 1. Your Host 2. Your Other Host
	If AUTOBat	ch	Then	
4.	supported b		Proceed to #	5,
	not supporte	•	skip to #7	
5.	Select the auto batch r	node.		AUTO BATCH: I I. OFF 2. ON



6.	Input the desired time in military (24-hour) time and press [ENTER]	SET BATCH TIME: 05:30
7.	"Auto Batch" is not supported by Host.	NO AUTOBATCH
8.	Stop.	



6.4.5 Additional Prompts

This menu contains different functions that can be enabled or disabled. They are:

- Clerk/Server ID Mode
- MENU Invoice Mode

DESCRIPTION

- CashBack Prompt
- □ Table Mode(RESTAURANT)
- Guest No. Mode(RESTAURANT)
- 6.4.5.1 Clerk/Server ID Mode
- Note This feature prompts you to enter the server/clerk ID number and is implemented in both restaurant (server) and retail (clerk) applications. You can also designate up to one-hundred (100) server/clerk name—ID combinations starting from ID #1 up to ID #100. For Retail, this display name is "Clerk", and for Restaurant, display name is "Server".
- **E Example:** I would like the receipts to list the clerk who made the sale. Enable Clerk mode and enter all of the clerk's names starting with Clerk ID#1.

STEP	Αстіон	DISPLAY
1.	From the Merchant Settings menu, press [7] to set the Additional Prompts.	MERCHANT PARAMS: 4. Edit Trailer 5. Merchant Fee 6. Set Batch Time 7. Additional Prompts
2.	Input the Password and press [ENTER]	ENTER PASSWORD:
3.	The display represents a retail setup. Press [1] to select Clerk ID mode.	Additional Prmpt 1. Clerk ID Mode 2. Invoice Mode 3. Cashback Prompt 4. Table Mode



Clerk/Server ID Mode, Continued

STEP	P ACTION DISPLAY	
4.	The default setting is OFF. Press [1] to disable Clerk ID mode. <u>OR</u> Press [2] to enable Clerk ID Mode.	Clerk ID Mode: I I. OFF 2. ON
5.	Enter the first clerk number/name designation to be saved then press [ENTER]. (System defaults to clerk number 1).	ENTER CLERK ID:
6.	Enter the clerk name using the same method as editing the header information (maximum 19 characters). Press [ENTER] when name is complete.	ID #I Name:
7.	When all of the clerk names have been entered, press [CANCEL] to accept the entered names.	ID#32 Name:
8.	Stop.	



6.4.5.2 Invoice Mode

Note
Invoice mode can be disabled, enabled (terminal prompts for invoice number) or set to Auto. (A starting number is entered when enabled; the terminal then increments the number with each transaction.) The Invoice Mode sub-menu cannot be accessed if there are current transactions in the open batch. The message "BATCH OUT PLEASE" is displayed.
If there are failed Offline transactions, the message "MUST UPLOAD OR DELETE FAILED TRN" is displayed when the invoice mode feature is selected.

STEP	ACTION DISPLAY	
1.	From the Merchant Settings menu press [7] for Additional Prompts.	MERCHANT PARAMS: 5. Merchant Fee 6. Set Batch Time 7. Additional Prompts 8. Cash EDC Setup
2.	Input the Password and press [ENTER].	ENTER PASSWORD:
3.	If there is no transaction in the terminal database, press [2] for Invoice Mode.	Additional Prmpt I. Clerk ID Mode 2. Invoice Mode 3. Cashback Prompt 4. Table Mode
4.	Press [2] for Invoice Mode. If there are transactions in the database, they must be batched out before Invoice Mode can be accessed.	BATCH OUT PLEASE



Invoice Mode, Continued

Step	ACTION DISPLAY		
	The defaulting setting is OFF.		
	Press [1] to disable Invoice Mode		
	OR	Invoice Mode: I	
5.	Press [2] to enable Invoice Mode (terminal will prompt for invoice number when processing transaction).	I. OFF 2. ON 3. AUTO	
	<u>OR</u>		
	Press [3] for automatic numbering (terminal will increment invoice number with each transaction).		
6.	If Auto was selected, enter the starting invoice number then press [ENTER] .	ENTER INVOICE #:	
7.	Stop.		



6.4.5.3 CashBack Prompt

Note

CashBack Prompt can be disabled, enabled (terminal prompts for cashback amount).

STEP	P ACTION DISPLAY	
1.	From the Merchant Settings menu press [7] for Additional Prompts.	MERCHANT PARAMS: 5. Merchant Fee 6. Set Batch Time 7. Additional Prompts 8. Cash EDC Setup
2.	Input the Password and press [ENTER].	ENTER PASSWORD:
3.	If there is no transaction in the terminal database, press [4] for CashBack Prompt.	Additional Prmpt I. Clerk ID Mode 2. Invoice Mode 3. Cashback Prompt 4. Table Mode
4.	The defaulting setting is OFF. Press [1] to disable CashBack Prompt. <u>OR</u> Press [2] to enable CashBack Prompt.	CashBack Prmpt: I I. OFF 2. ON
5.	Stop.	



6.4.5.4 Table Mode

Note Table mode can be disabled, enabled (terminal prompts for table number). This option is only applicable for RESTANRANT.

STEP	ACTION DISPLAY	
6.	From the Merchant Settings menu press [7] for Additional Prompts.	MERCHANT PARAMS: 6. Set Batch Time 7. Additional Prompts 8. Cash EDC Setup 9. Clerk/Server Name
7.	Input the Password and press [ENTER].	ENTER PASSWORD:
8.	If there is no transaction in the terminal database, press [4] for Table Mode.	Additional Prmpt 1. Clerk ID Mode 2. Invoice Mode 3. Cashback Prompt 4. Table Mode
9.	The defaulting setting is OFF. Press [1] to disable Table Mode. <u>OR</u> Press [2] to enable Table Mode.	Table Mode: I 1. OFF 2. ON
10.	Stop.	·

142



6.4.5.5 *Guest No. Mode*

Note

Guest No. Mode can be disabled, enabled (terminal prompts for guest number). This option is only applicable for RESTAURANT.

STEP	P ACTION DISPLAY	
11.	From the Merchant Settings menu press [7] for Additional Prompts.	MERCHANT PARAMS: 6. Set Batch Time 7. Additional Prompts 8. Cash EDC Setup 9. Clerk/Server Name
12.	Input the Password and press [ENTER].	ENTER PASSWORD:
13.	If there is no transaction in the terminal database, press [5] for Guest No. Mode	Additional Prmpt 2. Invoice Mode 3. Cashback Prompt 4. Table Mode 5. Guest No. Mode
14.	The defaulting setting is OFF. Press [1] to disable Guest No. Mode. <u>OR</u> Press [2] to enable Guest No. Mode.	Guest No. Mode: I I. OFF 2. ON
15.	Stop.	



6.4.6 Set Cash EDC

Note
Your POS Terminal allows you to record cash sales in your reporting. To do so, the Cash EDC mode must be enabled. Cash EDC is for record keeping only. Cash transactions are totaled and listed on reports.

Example: I'm taking my POS Terminal to a craft show this weekend. Is there any way I can use the terminal to keep track of my cash transactions. Yes, Enable Cash EDC and change the payment mode to Cash for every cash sale. This will help you to keep track and give you a receipt with your business information for the customer.

STEP	Αстіон	DISPLAY	
1.	From the Merchant Settings menu, press [8] to Set Cash EDC	MERCHANT PARAMS 6. Set Batch Time 7. Additional Prompts 8. Cash EDC Setup 9. Clerk/Server Name	
2.	Input the Password and press [ENTER]	ENTER PASSWORD:	
3.	Without Cash is the default setting. Press [1] to Set EDC With Cash <u>OR</u> Press [2] to Set EDC Without Cash	CASH EDC SET: 1. WITH CASH 2. WITHOUT CASH	
4.	Stop.		



6.4.7 Clerk/Server Name

Note

Change the clerk and server name.

STEP	ACTION	DISPLAY
1.	From the Merchant Settings menu, press [9] to access Clerk/Server Name	MERCHANT PARAMS: 6. Set Batch Time 7. Additional Prompts 8. Cash EDC Setup 9. Clerk/Server Name
2.	Input the Password and Press [ENTER]	ENTER PASSWORD:
3.	Clear the previous ones or not.	CLEAR CURRENT? ENTER=YES,CANC=NO
4.	Enter the new Clerk ID then press [ENTER].	ENTER CLERK ID:
5.	Stop.	



Operation Settings 6.5

This Menu has nine options that can be enabled or disabled, manually through the terminal.

They are:

- □ No-Paper Mode
- Buzzer Setup
- Operation Mode
- Battery Saver
- Disclaimer Setup

Menu

- DESCRIPTION □ Print Setup
 - **Receipt Print**

□ Halo Setup

Peripherals



6.5.1 No Paper Mode

Note
This function enables or disables the printer or sets NPM to automatic. When disabled, the terminal will not print a receipt for any transaction and reports are not accessible. When set to AUTO, the terminal automatically puts itself in NPM when it runs out of paper. When NPM is enabled, the idle screen is flashing NPM instead of arrow.

E

0.64 cmExample #1: I need to process a few Forced transactions and I don't need receipts for them so I will put the terminal in No Paper Mode. This way I will not waste any paper.

Example #2: The screen is flashing NPM. This means that the terminal is in No Paper Mode. I will verify that there is paper and disable NPM.

STEP	Αстіон	DISPLAY
1.	From the Operation Settings menu, press [1] to access No Paper mode.	OPER. SETTINGS: 1. No-Paper Mode 2. Buzzer Setup 3. Operation Mode 4. Battery Saver
2.	Input the Password and press [ENTER]	ENTER PASSWORD:
3.	Use the [▲] & [▼] keys to your selection and then press [ENTER]. <u>OR,</u> Press the number corresponding with your selection.	NoPaper Mode: 3 I. OFF 2. ON 3. AUTO
4.	Press [ENTER] to complete <u>OR</u> Press [CANCEL] to abort	ARE YOU SURE? ENTR=YES, CANC=NO
5.	Stop.	



6.5.2 Buzzer Setup

	Note				
s	This feature enables and disables the terminal's built-in buzzer, which sounds a tone when specific functions are performed or buttons pressed.				

Example: I would like to know when the Menu button is pressed so I enabled the Buzzer function. The terminal now beeps whenever the Menu button is pressed.

STEP	Αςτιον	DISPLAY
1.	From the Operation Settings menu, press [2] for Buzzer Setup.	OPER. SETTINGS: I. No-Paper Mode 2. Buzzer Setup 3. Operation Mode 4. Battery Saver
2.	Default setting is ON. Press [1] to disable the buzzer. <u>OR</u> Press [2] to enable the buzzer.	Buzzer Setting: 2 I. OFF 2. ON
3.	Stop.	



6.5.3 **Operation Mode**

	Note
1	This feature sets the terminal to one of two modes: Normal Mode , which is used for real transactions and Demo Mode , which is used for
	training.
	After working in Demo Mode, make sure to return to Normal Mode in
	order to perform real transactions.

E Exa Ter

Example: I have a new employee that needs to be trained on the POS Terminal. I'll put the terminal in Demo Mode. That way the new employee can be trained without interfering with business.

Step	Αстіон	DISPLAY
1.	From the Operation Settings menu, press [3] for Operation Mode.	OPER. SETTINGS: 1. No-Paper Mode 2. Buzzer Setup 3. Operation Mode 4. Battery Saver
2.	Input the Password and press [ENTER]	ENTER PASSWORD:
3.	The defaulting setting is Normal Mode. Use the [▲] & [▼] keys to make your selection and then press [ENTER]. OR, Press the number corresponding with your selection	Operation Mode: I I. Normal Mode 2. Demo Mode
4.	Press [ENTER] to accept the change. OR Press [CANCEL] to cancel.	ARE YOU SURE? ENTR=YES, CANC=NO
5.	Stop.	



6.5.4 Battery Saver

Note
This function is for wireless terminals and for models equipped with back-up batteries, or else "NOT AVAILABLE" is displayed
Example: I want my wireless terminal to turn off if not used for three

Example: I want my wireless terminal to turn off if not used for three minutes. I enabled the Battery Saver function with an idle time of 180 seconds.

POS TERMINAL MODEL	OPTION	DESCRIPTION
Wireless & Back-up Battery	OFF	Battery Saver is OFF
Wireless & Back-up Battery	Auto Off Only	Terminal is off (wireless modem stays on)
Wireless	Radio & Auto Off	Terminal and modem are off

STEP	Αстіон	DISPLAY
1.	From the Operation Settings menu, press [4] for Battery Saver.	OPER. SETTINGS: 1. No-Paper Mode 2. Buzzer Setup 3. Operation Mode 4. Battery Saver
2.	The default setting is Auto Off Only. The current setting is displayed in the first line. Use the $[\blacktriangle] \& [\lor]$ keys to make your selection and then press [ENTER]. <u>OR</u> , Press the number corresponding with your selection.	BATT SAVER: I 1. OFF 2. Auto Off Only 3. Radio+Auto Off
3.	Press [ENTER] to accept the change. <u>OR</u> Press [CANCEL] to cancel and back to Operation Settings menu.	ARE YOU SURE? ENTR=YES, CANC=NO
4.	Enter the idle time in seconds then press [ENTER].	IDLE TIME: [sec]
5.	Stop.	

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not beduplicated, published, or disclosed without PAX prior written permission.150



6.5.5 Disclaimer Setup

Note

This function prints the following disclaimer at the bottom of every credit card transaction.

E Disclaimer:

1

"I AGREE TO PAY ABOVE TOTAL AMOUNT ACCORDING TO CARD ISSUER AGREEMENT (MERCHANT AGREEMENT IF CREDIT VOUCHER)."

STEP	Αстіон	DISPLAY
1.	From the Operation Settings menu, press [5] for Print Disclaimer.	OPER. SETTINGS: 2. Buzzer Setup 3. Operation Mode 4. Battery Saver 5. Disclaimer Setup
2.	The default setting is ON. Scroll to make your selection and then press [ENTER]. <u>OR</u> Press the number corresponding with your selection.	Prt Dscl. Mode:2 1. OFF 2. ON
3.	Stop.	



6.5.6 Halo Setup

	Note
1	The Set Halo option sets an amount limit that cannot be exceeded. This option can be set for all types of sales, all types of returns, and cash back on debit transactions.

Example: Store policy is not to allow a Cash Back amount on a debit Е sale to exceed \$20. If I set the cash back Halo of that amount, my new counter people will not be able to give back an amount greater than \$20 in error.

STEP	Αстіон	DISPLAY
1.	From the Operation Settings menu, press [6] to Set Halo values.	OPER. SETTINGS: 3. Operation Mode 4. Battery Saver 5. Disclaimer Setup 6. Halo Setup
2.	Input the Password and press [ENTER]	ENTER PASSWORD:
3.	The default setting is OFF. Press the number corresponding with your selection. If the Halo was disabled, continue with step 5.	HALO For Sale: I I. OFF 2. ON
4.	The current HALO is displayed in the first line. Input the new maximum amount for a sale then press [ENTER].	HALO for Sale: 0.00 New Rate: 0.00
5.	The default setting is OFF. Use the [▲] & [▼] keys to find your selection and then press [ENTER] . <u>OR</u> Press the number corresponding with your selection. If the Halo was disabled, continue with step 7.	HALO For Return: I I. OFF 2. ON

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be duplicated, published, or disclosed without PAX prior written permission.



6.	The current HALO is displayed in the first line. Input the new maximum amount for a return then press [ENTER].	HALO for Return: 0.00 New Rate: 0.00
7.	The default setting is OFF. Use the $[\blacktriangle] \& [\lor]$ keys to find your selection and then press [ENTER]. <u>OR</u> Press the number corresponding with your selection.	Cash-Back HALO:I I. OFF 2. ON
8.	The current HALO is displayed in the first line. Input the new maximum amount for cash back then press [ENTER].	Cash-Back HALO: 0.00 New Rate: 0.00
9.	Stop.	



6.5.7 Print Setup

	Note
1	This function prints a setup report. The report lists the settings of all the terminal options.

Example #1: How do I know what my Fraud Control options are set to? Print a Setup Report.

Example #2: I just changed the address in the receipt header. I want to see what it looks like when printed so I will print a Setup Report.

STEP	Αстіон	DISPLAY
1.	From the Operation Settings menu, press [7] to print a Setup Report.	OPER. SETTINGS: 4. Battery Saver 5. Disclaimer Setup 6. Halo Setup 7. Print Setup
2.	Input the Password and press [ENTER].	ENTER PASSWORD:
3.	The terminal prints out the setup report.	
4.	Stop.	




Sample of Print Setup receipt

Note Please review the following sample of Print Setup receipt. 02/03/2011 11:11:19 _____ US POS CORE+ File name: USPOSCORE Appl. version: 01.00.007 Appl. vendor: PAX Technology, Inc This area reflects the Application currently loaded in the terminal. Description: Apriva Direct Interface ... (varies according to app) _____ Graphic Logo/Header: Individual Merchant Header, Trailer and 1-800-555-1234 Merchant Name Comment Line information is listed in this 123 MAIN ST. ANYTOWN, NY 11111 area. WWW.PAX.US Trailer: THANK YOU Please visit us Again soon! Comment Line: ------VISA + MasterCard + A plus (+) indicates the Credit Card is AMEX + Diners supported. A minus (-) indicates the card is CarteBlanch -Disc/NOVUS + not supported. EnRoute + JCB + Extended + This area of the Set Up Report lists the transaction Transaction types CREDIT types that are supported by the different EDC Hosts. Chgd TransType Host Mrch SALE FORCED VERIFY + -_ If the character in the **Host** column is a plus (+), the _ _ + Host supports that type of transaction. If the + _ _ RETURN + _ character is a minus (-), the transaction type is not VOID/SALE + VOID/RTRN + + М supported. VOID/RTRN + _ VOID/FRCD + _ _ If the character in the Chngd (Changed) column is a Transaction types DEBIT plus (+), a change in the setting has been made. TransType Host Mrch Chgd SALE + -_ FORCED _ If the character in the Mrch (Merchant) column is a VERIFY -_ _ minus (-) and the Chngd character is also a minus, RETURN + _ _ VOID/SALE _ _ _ the Host setting is in effect. If the Mrch character is a VOID/RTRN -minus and the Chngd character is a plus, the VOID/FRCD _ _ transaction type has been disabled by the Merchant.

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of FAA programs. It may not be duplicated, published, or disclosed without PAX prior written permission.




Sample of Print Setup receipt, Continued

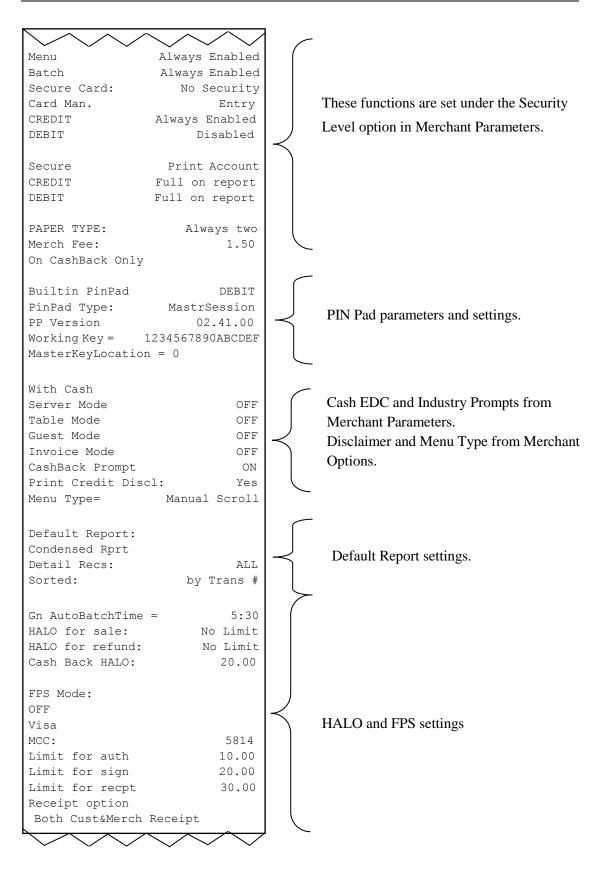

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not beduplicated, published, or disclosed without PAX prior written permission.156



Sample of Print Setup receipt, Continued

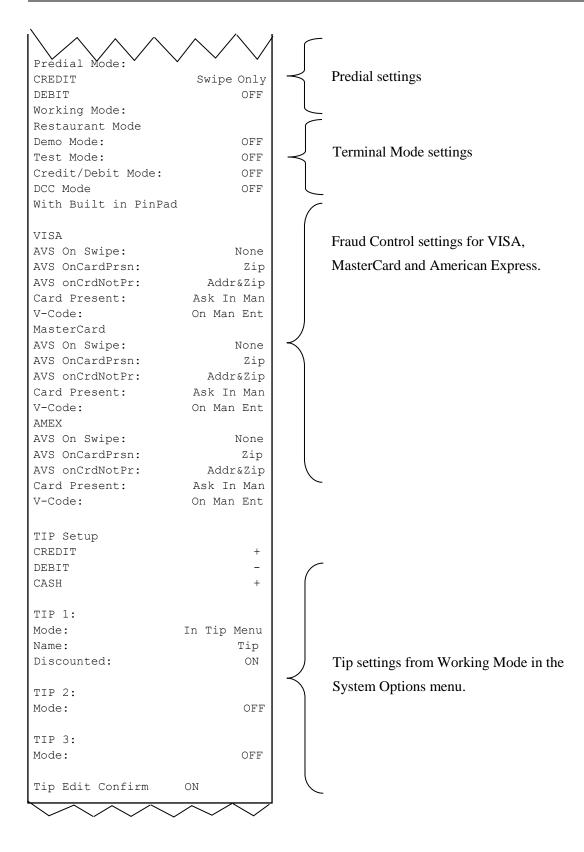

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be duplicated, published, or disclosed without PAX prior written permission. 157



6.5.8 Receipt Print

	Note
T	This function sets preprint and customer copy options.

E **Example #1:** I don't want the customer copy? Receipt Print Setup. **Example #2:** I want to disable preprint. Receipt Print Setup.

STEP	ACTION			DISPLAY
1.		From the Operation Settings menu, press [8] to print a Setup Report.		OPER. SETTINGS: 5. Disclaimer Setup 6. Halo Setup 7. Print Setup 8. Receipt Print
2.	Input the	Password and press [ENTEF	?] .	ENTER PASSWORD:
3.	Select fur	nctions.		RECEIPT PRINT 1. Customer Copy 2. Preprint
		lf	Then	·
4.		Customer Copy is selected	Proceed to # skip to #8.	5 #6, then
		Preprint is selected	skip to #7.	
5.	[ENTER] <u>OR</u>	ough the EDC Type options to select. number corresponding with	·	SELECT PMT TYPE: 1. ALL 2. CREDIT 3. DEBIT 4. EBT



6.	The defaulting setting is ON. Press [1] to disable Customer Copy <u>OR</u> Press [2] to enable Customer Copy.	Customer Copy I. OFF 2. ON
7.	The defaulting setting is ON. Press [1] to disable PrePrint. <u>OR</u> Press [2] to enable PrePrint.	PrePrint:2 1. OFF 2. ON
8.	Stop.	



6.5.9 Peripherals

Note This function allows the user to select a external devices, i.e, card reader.

STEP	ACTION	DISPLAY
1.	From the Operation Settings menu, use the [▼] key to scroll to 10. Peripherals then press [ENTER]	OPER. SETTINGS: 7. Print Setup 8. Receipt Print 9. Store&Forward 10. Peripherals
2.	Input the Password and press [ENTER].	ENTER PASSWORD:
3.	Press [1] to select external card reader.	PERIPHERALS: I. Ext. CardRdr
4.	The defaulting setting is OFF. Press [1] to disable External Card Reader. <u>OR</u> Press [2] to enable External Card Reader.	Ext. CardRdr: I I. OFF 2. ON
5.	Stop.	



6.6 Host Settings

This menu allows you to view/edit the Host Parameter, and Phones, prints an EDC Setup Report, view the Protocol versions and set the Auto Dial parameters.

MENU DESCRIPTION MENU DESCRIPTION MENU MENUS MEN



6.6.1 Host Paramerters

N	Ote

This function is used for editing host parameters.

STEP	Αстіон	DISPLAY
1.	Input the Password and press [ENTER].	ENTER PASSWORD:
2.	From the Hosts Settings menu press [1] to enter Host parameters.	HOST PARAMS: 1. Host Parameters 2. Host Phones 3. Print EDC Setup 4. Host URL Params
3.	Scroll to select the host then press [ENTER].	SELECT HOST 1. Your Host 2. Your Other Host
4.	Use the [▲] & [▼] keys to find your selection and then press [ENTER]. Or Press the number corresponding with your selection.	HOST PARAMS: I. Merchant ID 2. Bank ID 3. Terminal Type
5.	Input the Merchant ID if [1] is selected in Step 4.	Merchant ID
6.	Input the Bank ID if [2] is selected in Step 4.	Bank ID 000000
7.	Input the Bank ID if [3] is selected in Step 4.	Terminal Type MER
8.	Stop.	



6.6.2 Host Phones

_	
A.	a ta
11	• 1 (=

This function is used for editing host parameters.

STEP	Αстіон	DISPLAY
1.	Input the Password and press [ENTER].	ENTER PASSWORD:
2.	From the Hosts Settings menu press [2] to enter host phones.	HOST PARAMS: 1. Host Parameters 2. Host Phones 3. Print EDC Setup 4. Host URL Params
3.	Scroll to select the host then press [ENTER].	SELECT HOST I. Your Host 2. Your Other Host
4.	Use the [▲] & [▼] keys to find your selection and then press [ENTER]. Or Press the number corresponding with your selection.	PHONE TYPE: 1. Auth. Phones 2. Batch Phones
5.	Use the [▲] & [▼] keys to find your selection and then press [ENTER]. Or Press the number corresponding with your selection.	EDIT PHONE: 1. Phone #1 2. Phone #2 3. Phone #3
6.	Use the [▲] & [▼] keys to find your selection and then press [ENTER]. Or Press the number corresponding with your selection.	PHONE SETTINGS: 1. Number 2. Baud Rate



6.6.2.1 Phone Number

1	_		_	
		ľ	1	

Note This function sets the phone number.

STEP	ACTION	DISPLAY
1.	Press [1] .	PHONE SETTINGS: 1. Number 2. Baud Rate
2.	Input the phone number and press [ENTER]	Phone Number: 123456
3.	Stop.	



6.6.2.2 Baud Rate

1		

Note This function sets the baud rate.

STEP	ACTION	DISPLAY
1.	Press [2] .	PHONE SETTINGS: 1. Number 2. Baud Rate
2.	Use the [▲] & [▼] keys to find your selection and then press [ENTER] . Or Press the number corresponding with your selection.	Baud Rate:2400 1. 300 2. 1200 3. 2400 4. 4800
3.	Stop.	•

Е



6.6.3 Print EDC Setup

Note	
A report listing every EDC Host with its ca parameters, authorization and batch phone n settings is printed with the Print EDC Setup funct	

Example: I need to see what the Capture types of all of the EDC Hosts are to know if manual batching is required.

STEP	Αстіон	DISPLAY
1.	When prompted, input the Password and press [ENTER].	ENTER PASSWORD:
2.	From the Hosts Settings menu press [3] to print an EDC Setup Report.	HOST PARAMS: I. Host Parameters 2. Host Phones 3. Print EDC Setup 4. Host URL Params
3.	The terminal prints EDC Setup.	Printing
4.	Stop.	



Sample of Print EDC Setup Report

Note

Please review the following samples of receipts.

			$\sim \sim \sim \sim$
02/03/2011	11:11:19	Host Name	21.4B CHEC
		HOST BASE AUTOBATCH	
EDC Setup		Client_Number	12345
======================================	1000731686	Auth. Phones:	10005555400
Serial Number:		Phone1:	1800555432
		Baud Rate:	1200, 7
Host Name	14.6D CREDIT	Phone2:	1800555543
HOST NAME	14.0D CREDII	Baud Rate:	1200, 7
TERMINAL BASE		Phone 3:	1800555654
Merchant Number:	123456	Baud Rate:	1200, 7
_	123456	# of tries:	
Terminal_ID:	123456		
Auth. Phones:		Host Name HOST BASE MANUAL	4.41A EB
Phone1:	18005551234	Merchant Number:	12345
Baud Rate:	1200, 7E	Terminal ID:	1234
Phone2:	18005552345	BIN Number:	1234
Baud Rate:	1200, 7E		
Phone 3:	18005553456	Auth. Phones:	
Baud Rate:	1200, 7E	Phone1:	1800555111
# of tries:	1	Baud Rate:	1200, 7
		Phone2:	1800555222
Batch Phones:		Baud Rate:	1200, 7
Phonel:	18005551234	Phone 3:	1800555333
Baud Rate:	1200, 7E	Baud Rate:	1200, 7
Phone2:	18005552345	# of tries:	1200, 7
Baud Rate:	1200, 7E	# OI CILES.	
Phone 3:	18005553456	Batch Phones:	
Baud Rate:	1200, 7E	Phone1:	1800555444
# of tries:	1	Baud Rate:	1200, 7
		Phone2:	1800555555
Host Name	14.6D DEBIT	Baud Rate:	1200, 7
		Phone 3:	1800555666
HOST BASE AUTOBATCH		Baud Rate:	1200, 7
Params Same as CREDIT			1200, /
		# of tries:	
Auth. Phones: Phonel:	18005554567		
Baud Rate:	1200, 7E	AutoDial Settings:	
Phone2:	18005555678	CREDIT	ON
Phonez: Baud Rate:		AutoDial Begins:	03:00
	1200, 7E	AutoDial Ends:	04:00
Phone 3:	18005556789	Interval:	
Baud Rate:	1200, 7E	Retries:	1
# of tries	1		
DBT BATCH THROUGH CRE	DIT	DEBIT:	OFF
		CHECK:	OFF
\times / \vee \times / \vee	· · · · · /	EBT	ON
\vee \vee "		AutoDial Begins:	22:00
	the AutoDatel II 1	2	
Notice	the AutoBatch Hosts do	O AutoDial Ends:	23:00
	e the AutoBatch Hosts do t have AutoDial settings	0 AutoDial Ends: Interval:	

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not beduplicated, published, or disclosed without PAX prior written permission.167



6.6.4 Host URL Params

Note

This function is used for IP address and Port editing manually in the terminal.

STEP	ACTION	DISPLAY
1.	Input the Password and press [ENTER].	ENTER PASSWORD:
2.	From the Hosts Settings menu press [4] to enter connection settings.	HOST PARAMS: 1. Host Parameters 2. Host Phones 3. Print EDC Setup 4. Host URL Params
3.	Scroll to select the host then press [ENTER].	SELECT HOST I. Your Host 2. Your Other Host
4.	Use the [▲] & [▼] keys to find your selection and then press [ENTER]. Or Press the number corresponding with your selection.	PHONE TYPE: I. Auth. URLs 2. Batch URLs
5.	Use the [▲] & [▼] keys to find your selection and then press [ENTER]. Or Press the number corresponding with your selection.	EDIT URL: I. Host URL #I 2. Host URL #2
6.	Use the [▲] & [▼] keys to find your selection and then press [ENTER]. Or Press the number corresponding with your selection.	URL SETTINGS: I. URL 2. Port
7.	Input the desired URL address or port number then press [ENTER].	Host URL:
8.	Stop.	

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be duplicated, published, or disclosed without PAX prior written permission. 168



6.6.5 AutoDial Setup

Note The AutoDial function is the automatic execution of the manual batch process. If the terminal capture type is Host Manual or Terminal Capture, the AutoDial feature will automatically perform the manual batch function. AutoDial is not applicable if the terminal capture type is Autobatch.

EEE

Example: Since I don't always have time to batch the terminal at the end of the business day, I set the AutoDial time to automatically batch out an hour after the store closes.

STEP	Αстіон	DISPLAY
1.	Input the Password and press [ENTER].	ENTER PASSWORD:
2.	From the Hosts Settings menu press [5] to enter connection settings.	HOST PARAMS: 2. Host Phones 3. Print EDC Setup 4. Host URL Params 5. AutoDial Setup
3.	Scroll to select the host then press [ENTER].	SELECT HOST 1. Your Host 2. Your Other Host
4.	Use the [▲] & [▼] keys to find your selection and then press [ENTER]. Or Press the number corresponding with your selection.	AUTODIAL SETUP: 2 1. OFF 2. ON
5.	If [1] is selected in step 4, enter the start time and then press [ENTER] .	START AD AT: HH:MM
6.	Enter the stop time then press [ENTER] . Stop time is usually one hour after start time.	STOP AD AT: HH:MM

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be duplicated, published, or disclosed without PAX prior written permission. 169



7.	Enter the AutoDial time interval then press [ENTER]. The interval is usually 5 minutes.	AD INTERVAL:
8.	Stop.	



6.7 System Settings

This menu consists of different functions that can be changed manually.

- □ Date/Time Setup
- Batch Number
- U Working Mode
- Pre-Dial Call

Menu Description

- DatabasePIN Pad Settings
- □ Keys Injection
- App Management



6.7.1 Date/Time Setup

Note All POS Terminals include an internal clock that keeps the time and date. The clock keeps time in a 24-hour or military format. This function sets the internal clock.

Step	ACTION	DISPLAY
1.	From the Main Menu press [5] to access System Settings	MAIN MENU: 2. Merchant Settings 3. Operation Settings 4. Hosts Settings 5. System Settings
2.	Press [ENTER]	SYSTEM OPTIONS: 1. Date/ Time Setup 2. Batch Number 3. Working Mode 4. Pre-Dial Call
3.	Verify the current Date and/or Time is incorrect. Input the correct date using MM/DD/YY format. Input the correct hour and minutes using Military (24-hour) Format.	07/31/06 MM/DD/YY 10:02:49 HH:MM:SS
4.	Verify the time is now correct and press [CANCEL] <u>OR</u> Press [ENTER] to save the modified time.	
5.	Stop	



6.7.2 Batch Number

Note

This menu option allows the batch number to be changed. Not all Host processors use batch numbers so care should be taken when accessing this function. Verify the current or last closed batch number with the Host Processor before changing.

STEP	ACTION	DISPLAY
1.	From the System Settings menu press [2] to set batch number.	SYSTEM OPTIONS: 1. Date/ Time Setup 2. Batch Number 3. Working Mode 4. Pre-Dial Call
2.	Input the Password and press [ENTER]	ENTER PASSWORD:
3.	Select the EDC host.	SELECT HOST: 1. Your Host 2. Your Other Host
4.	Terminal displays the current batch No. Input the New Batch # and press [ENTER]	New Batch No:
5.	Press [ENTER] to complete <u>OR</u> Press [CANCEL] to cancel	ARE YOU SURE? ENTR=YES, CANC=NO
6.	Stop.	



6.7.3 Working Mode

This sub-menu has three options:

□ Tip Options Menu DESCRIPTION

□ Fraud Control Local Dup Check



6.7.3.1 Tip Options

Note These features (listed below) provide the user with multiple Tip options.

The following sub menu options can be found in the Tip Options menu.

EDC Tip
🖵 Tip 1
🗖 Tip 2
🖵 Tip 3
Edit Confirm
Print TIP Setup



6.7.3.1.1 EDC Tip

Note EDC Tip allows the user to enable/disable the active tips for individual EDC types.

STEP	Αстіон	DISPLAY
1.	From the System Settings menu, press [3] for Working Mode.	SYSTEM OPTIONS: 1. Date/ Time Setup 2. Batch Number 3. Working Mode 4. Pre-Dial Call
2.	Press [ENTER]	WORKING MODE: 1. Tip Options 2. Fraud Control 3. Comment Opt.
3.	Input the Password and press [ENTER]	ENTER PASSWORD:
4.	Press [ENTER] for EDC Tips.	TIP OPTIONS: 1. EDC Tip 2. Tip 1: (OFF) 3. Tip 2: (OFF) 4. Tip 3: (OFF)
5.	Select the EDC type.	SELECT PMT TYPE: I. CREDIT 2. DEBIT 3. EBT 4. GIFT
6.	Current setting is displayed in the first line. Press [1] to disable tips for the selected EDC type. OR Press [2] to enable tips for the selected EDC type.	EDC Tip: 2 1. OFF 2. ON
7.	Stop.	

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not beduplicated, published, or disclosed without PAX prior written permission.176



6.7.3.1.2 Tip1-Tip3

	Note										
This	function action, as	allows	you	to	include	up	to	three	tips	with	each
calcu	late the ti	p or tota	l amo	ount	and ente	ering	gao	default	amo	unt for	each
	or Retail, actions are						e tra	insactio	on. Ti	he foll	owing

Example: The first tip is enabled but the receipt lists it as Tip with no default amount and the Merchant wants it listed as Processing with a default charge of \$10. The tip name can be changed and a default amount set in the Tip Options in Working Mode.

STEP	Αстіон	DISPLAY
1.	From the Tip Options menu use the [▲] & [▼] to select the tip you wish to edit then press [ENTER]. <u>OR</u> Press the number corresponding with your selection.	TIP OPTIONS: 1. EDC Tip 2. Tip 1: (OFF) 3. Tip 2: (OFF) 4. Tip 3: (OFF) * The current Tip status is displayed in parenthesis.
2.	Press [1] to disable the tip or [2] to enable the tip.	Tip I (OFF) I. OFF 2. ON
	After turning a tip option ON you will then be prompted to Edit the Tip name.	
	To change the letters, first presses the number key with the letter engraved on top then press the [ALPHA] key to cycle through the other characters on that key.	TIP I Name: I N Tip
	<u>For example</u> : The #2 key on the keypad also has the letters A , B and C printed on it. When you first press this key, the display will show the number 2 , by pressing the [ALPHA] key it will cause the display to change from 2 to the letter A . Continue pressing the [ALPHA] key for the required letter.	
	Modify the tip name then press [ENTER].	



3.	Press [1] to have the terminal calculate the Transaction Total after the Tip amount is entered. <u>OR</u> Press [2] to have the terminal calculate the Tip amount after the Transaction Total is entered.	TIP Entry Method I. Calculate Total 2. Calculate Tip
4.	If in Step 3 Calculate Total is selected, enter the default tip amount then press [ENTER] . <u>OR</u> Press [ENTER] to bypass. <u>Note:</u> Current rate is displayed in the first line. The defaule tip amount will automatically be added to all transactions.	Tip: 0.00 New Rate: 0.00
5.	Stop.	



6.7.3.1.3 Edit Confirm

Note Enabling Edit Confirm will cause the terminal to prompt the user to press [ENTER] to accept the tip amount or press [CANCEL] to prompt for a new tip amount. Edit confirm is supported in Restaurant only.

STEP	ACTION	DISPLAY
1.	From the Tip Options menu press [5] for Edit Confirm.	TIP OPTIONS: 2. Tip 1: (OFF) 3. Tip 2: (OFF) 4. Tip 3: (OFF) 5. Edit Confirm
2.	The current setting is displayed in the first line. Press [1] to disable Edit Confirm. <u>OR</u> Press [2] to enable Edit Confirm.	Edit Confirm: 2 I. OFF 2. ON
3.	Stop.	



6.7.3.1.4 Print Tip Setup

Th	Note is function prints a report listing the terminal's tip configura	ation.
Step	Action	DISPLAY
1.	From the Tip Options menu press [7] to print the Tip Setup report.	TIP OPTIONS: 4. Tip 3: (OFF) 5. Tab Option 6. Edit Confirm 7. Print TIP Setup
2.	Stop.	



Sample of Tip Setup Report

TIP Setup:	
CREDIT	+
DEBIT	-
CHECK	-
EBT	-
CASH	+
TIP 1:	
Mode:	In Transaction
Name:	Tip
Entry:	Calculate Total
TIP 2:	
Mode:	In Transaction
Name:	Delivery
Preset Amount:	5.00
Tip 3:	
Mode:	OFF
	011
Tip Edit Confirm	OFF



6.7.3.2 Fraud Control Option

Note

These features (listed below) provide the user with multiple options when setting the parameters for individual card types.

The following sub menu options can be found in the Fraud Control menu.

AVS On Swipe
AVS On Card Present
AVS on Card Not Present
Card Present
V-Code

Menu
DESCRIPTION

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not beduplicated, published, or disclosed without PAX prior written permission.182



6.7.3.2.1 AVS On Swipe

011101212	me on on po			
		Note		
AVS On S individual	Swipe enables Credit Card type	AVS prompts es or for all care	on all swiped d types.	transactions for

Example: The Merchant does not want any AVS prompts when the card is swiped. The AVS On Swipe setting will be changed to None. This will disable the AVS prompts on swiped transactions.

OPTION	DEFINITION
None	There will be no AVS prompts(default)
Address	AVS will prompt for address only
Zip	AVS will prompt for zip code only
Address & Zip	AVS will prompt for address and zip code

STEP	ACTION	DISPLAY
1.	From the Main Menu, press [5] for System Settings	MAIN MENU: 2. Merchant Settings 3. Operation Settings 4. Hosts Settings 5. System Settings
2.	Press [3] for Working Mode.	SYSTEM OPTIONS: 1. Date/ Time Setup 2. Batch Number 3. Working Mode 4. Pre-Dial Call



AVS On Swipe, Continued

STEP	ACTION	DISPLAY
3.	Press [2] for Fraud Control.	WORKING MODE: 1. Tip Options 2. Fraud Control 3. Comment Opt.
4.	Input the Password and press [ENTER].	ENTER PASSWORD:
5.	Press [1] to set the AVS On Swipe.	Fraud Control 1. AVS On Swipe 2. AVS On CardPrsnt 3. AVS OnCardNotPrsnt 4. Card Present
6.	Select the card type you wish to modify or press [1] for all card types.	Select Card Type I. ALL 2. Visa 3. MasterCard 4. AMEX
7.	Press the number that corresponds to the desired AVS Prompt.	AVS On Swipe 1. None 2. Address 3. Zip 4. Address & Zip
8.	Stop.	



6.7.3.2.2 AVS On Card Present

Note

AVS On Card Present is a feature that enables AVS prompts on all manual transactions where the card is present for individual Credit Card types or for all card types.

OPTION	DEFINITION	
None	There will be no AVS prompts(default)	
Address	AVS will prompt for address only	
Zip	AVS will prompt for zip code only	
Address & Zip AVS will prompt for address and zip code		

STEP	Αстіон	DISPLAY
1.	From the Fraud Control menu press [2] to set AVS On Card Present.	Fraud Control I. AVS On Swipe 2. AVS On CardPrsnt 3. AVS OnCardNotPrsnt 4. Card Present
2.	Select the card type you wish to modify or press [1] for all card types.	Select Card Type I. ALL 2. Visa 3. MasterCard 4. AMEX
3.	Press the number that corresponds to the desired AVS Prompt.	AVS On CardPr I. None 2. Address 3. Zip 4. Address&Zip
4.	Stop.	



6.7.3.2.3 AVS On Card Not Present

Note

AVS On Card Not Present is a feature that enables AVS prompts on all manual transactions where the card is **not** present for individual Credit Card types or for all card types.

Example: For added security, the AVS feature that prompts for Address and Zip on all manual entries where the card is not present should be enabled.

OPTION DEFINITION		
None	There will be no AVS prompts(default)	
Address AVS will prompt for address only		
Zip	AVS will prompt for zip code only	
Address & Zip AVS will prompt for address and zip code		

STEP	ACTION	DISPLAY
1.	From the Fraud Control menu press [3] to set AVS On Card Not Present.	Fraud Control 1. AVS On Swipe 2. AVS On CardPrsnt 3. AVS OnCardNotPrsnt 4. Card Present
2.	Select the card type you wish to modify or press [1] for all card types.	Select Card Type 1. ALL 2. Visa 3. MasterCard 4. AMEX
3.	Press the number that corresponds to the desired AVS Prompt.	AVS On CardNPr 1. None 2. Address 3. Zip 4. Address&Zip
4.	Stop.	



6.7.3.2.4 Card Present

Note On manual transactions, different data is required depending upon the card being present. This feature sets the option to assume the card is or is not present or to ask if the card is present.

Example: To be assured that the AVS prompts are always displayed, I will set the Card Present option to **No, If manual**.

OPTION	DEFINITION
No, If manual	It is assumed that the card is NOT present on all manual entry transactions.
Always Yes	It is assumed that the card is always present. (default)
Ask, If manual	The terminal will ask if the card is present on all manual entry transactions.

STEP	ACTION	DISPLAY
1.	From the Fraud Control menu press [4] to set the Card Present options.	Fraud Control 1. AVS On Swipe 2. AVS On CardPrsnt 3. AVS OnCardNotPrsnt 4. Card Present
2.	Select the card type you wish to modify or press [1] for all card types.	Select Card Type 1. ALL 2. Visa 3. MasterCard 4. AMEX
3.	Press the number that corresponds to the desired Card Present option.	Card Present I. No, if manual 2. Always Yes 3. Ask, if manual
4.	Stop.	



6.7.3.2.5 V-Code

Note

This feature enables the user to determine how to set up the CVV, CVC and CID security feature for individual card types or for all card types.

OPTION	DEFINITION	
Off	Will not prompt for Code(default)	
On if Manual	Will prompt for Code on manual entry transactions	
On if Manual, Card not Present	Will prompt for Code if card is not present	
On Always	Will always prompt for Code	

STEP	Αстіон	DISPLAY
1.	From the Fraud Control menu press [5] for V-Code.	Fraud Control 2. AVS On CardPrsnt 3. AVS OnCardNotPrsnt 4. Card Present 5. V-Code
2.	Select the card type you wish to modify or press [1] for all card types.	Select Card Type I. ALL 2. Visa 3. MasterCard 4. AMEX
3.	Press the number that corresponds to the desired CVV Mode.	V-Code 1. OFF 2. On if manual 3. OnlfMan.CrdNotPrsnt 4. On always
4.	Stop.	



6.7.3.3 Local Dup Check

Note

This feature will notify the user when there are duplicated transactions of same amount and same account number.

STEP	Αстіон	DISPLAY
1.	From the Main Menu, press [5] for System Settings	MAIN MENU: 2. Merchant Settings 3. Operation Settings 4. Hosts Settings 5. System Settings
2.	Press [3] for Working Mode.	SYSTEM OPTIONS: 1. Date/ Time Setup 2. Batch Number 3. Working Mode 4. Pre-Dial Call
3.	Press [3] for Local Dup Check.	WORKING MODE: 1. Tip Options 2. Fraud Control 3. Local Dup Check
4.	Input the password and then press [ENTER].	ENTER PASSWORD:
	The default setting is OFF.	Dup Check : I
5.	Press [1] to disable Dup Check.	1. OFF 2. ON
	<u>OR</u>	
	Press [2] to enable Dup Check.	
6.	STOP.	



6.7.4 Pre-Dial Call

Note

This feature provides the user options of whether to enable the Pre-Dial Call function or not. If it is enabled, terminal will make a pre-dial call to the host.

STEP	ACTION	DISPLAY
1.	From the System Settings menu, press [5] for Pre-Dial Call.	SYSTEM OPTIONS: 1. Date/ Time Setup 2. Batch Number 3. Working Mode 4. Pre-Dial Call
2.	Scroll through the EDC Type options then press [ENTER] to select. <u>OR</u> Press the number corresponding with your selection.	SELECT PMT TYPE: 1. ALL 2. CREDIT 3. DEBIT 4. EBT
3.	Use the [▲] & [▼] keys to find your selection and then press [ENTER]. Or Press the number corresponding with your selection.	PreDial Call I. Predial OFF 2. Predial ON 3. Predial on SWIPE
4.	Stop.	



6.7.5 Database

This sub-menu has three options:

	Void
Menu	Post Auth
DECONDENON	Clear Database
DESCRIPTION	Clear Reversal

6.7.5.1 Void

					No	te						
Î	The trans	Void sactior	sub-menu າ.	under	Edit	Database	is	an	easy	way	to	void

E Example: I need to void transactions 1 through 14. This can be done quickly by using the Edit Database function. If it is not necessary to have a Void Receipt for all of the transactions, put the terminal in No Paper Mode. Remember to disable NPM after all of the transactions have been voided.

STEP	ACTION	DISPLAY
1.	From the System Settings menu, press [6] for Edit Database.	SYSTEM OPTIONS: 2. Batch Number 3. Working Mode 4. Pre-Dial Call 5. Database
2.	Input the Password and Press [ENTER]	ENTER PASSWORD:
3.	Press [1] for void transactions	EDIT DATABASE: 1. Void 2. Post Auth 3. Clear Database 4. Clear Reversal
4.	Select an EDC Type	SELECT PMT TYPE: I. CREDIT 2. GIFT 3. Cash



5.	Input the transaction # to be voided.	Enter Trans #:
6.	View the transaction on the display to verify it is the correct transaction then Press [ENTER]	#0001 SALE AMT: 2.00 ***********4996
7.	Press [ENTER] to complete <u>OR</u> Press [CANCEL] to cancel.	Void #0001? ENTR=YES, CANC=NO
8.	Stop.	



6.7.5.2 Post Auth

	Note
Ì	The Post Auth Transaction sub-menu under Edit Database is an easy way for completion transactions.

E Example: I need to complete transactions 1 through 14. This can be done quickly by using the Edit Database function. If it is not necessary to have a Completion Receipt for all of the transactions, put the terminal in No Paper Mode. Remember to disable NPM after all of the transactions have been completed.

STEP	Αстіон	DISPLAY			
1.	From the System Settings menu, press [6] for Edit Database.	SYSTEM OPTIONS: 3. Working Mode 4. Test Mode 5. Pre-Dial Call 6. Database			
2.	Input the Password and Press [ENTER].	ENTER PASSWORD:			
3.	Press [2] for Post Auth transactions.	EDIT DATABASE: 1. Void 2. Post Auth 3. Clear Database 4. Clear Reversal			
4.	Input the transaction # to be completed.	Enter Trans #:			
5.	View the transaction on the display to verify it is the correct transaction then Press [ENTER]	#0001 AUTH AMT: 52.00 ***********4996			
6.	Terminal goes to the normal steps for Post Auth transaction.				
7.	Stop.				

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not beduplicated, published, or disclosed without PAX prior written permission.193



6.7.5.3 Clear Database

Note It is possible the clear the database for each EDC type individually or all 1 of them together. Before clearing the database, make sure there are receipts with the full account number for all of the transactions. If necessary, run a Journal Report.

STEP	ACTION	DISPLAY
1.	From the System Settings menu, press [6] for Edit Database.	SYSTEM OPTIONS: 3. Working Mode 4. Test Mode 5. Pre-Dial Call 6. Database
2.	Input the Password and press [ENTER]	ENTER PASSWORD:
3.	Press [3] for Clear Database	EDIT DATABASE: 1. Void 2. Post Auth 3. Clear Database 4. Clear Reversal
4.	Press [ENTER] to continue <u>OR</u> Press [CANCEL] to cancel	ARE YOU SURE? ENTR=YES, CANC=NO
5.	Select EDC type you wish to clear the database for then press [ENTER]. <u>OR</u> Press [ENTER] to clear all databases.	SELECT PMT TYPE: 1. ALL 2. CREDIT 3. DEBIT 4. EBT
6.	A short report listing the cleared databases is printed	ł.
7.	Stop.	



6.7.6.4 Clear Reversal

Note

If an authorization request is sent to host, but there is no response received, the terminal will try to reverse that transaction to avoid mistake. But sometimes it may happen that the reversal can never success, this will result in that no more transaction can be processed. To avoid this situation, you can clear the reversal flag in this menu, so that the terminal will not try the reversal anymore.

Note that the original transaction may already be approved in host, so the total transactions may not match while Batch Close.

Step	ACTION	DISPLAY
1.	From the System Settings menu, press [5] for Edit Database.	SYSTEM OPTIONS: 3. Working Mode 4. Test Mode 5. Pre-Dial Call 6. Database
2.	Input the Password and press [ENTER]	ENTER PASSWORD:
3.	Press [4] for Clear Reversal	EDIT DATABASE: I. Void 2. Post Auth 3. Clear Database 4. Clear Reversal
4.	Press [ENTER] to continue <u>OR</u> Press [CANCEL] to cancel	ARE YOU SURE? ENTR=YES, CANC=NO
5.	Stop.	



6.7.6 Pin Pad Settings

Use this function to modify the Key Pinpad Settings.

STEP	ACTION	DISPLAY
1.	From the System Settings menu, press [7] to Select the Key Location.	SYSTEM OPTIONS: 3. Working Mode 4. Pre-Dial Call 5. Database 6. Pin Pad Settings
2.	Input the Password and press [ENTER]	ENTER PASSWORD:
3.	Press [1] to select the Internal PIN pad.	PIN Pad Type: I I. Internal PIN pad
4.	Stop.	



6.7.7 Keys Injection

Use this function to enter the Key Load sub application.

STEP	ACTION	DISPLAY
1.	From the System Settings menu, press [8] to Select the Keys Injection.	SYSTEM OPTIONS: 4. Pre-Dial Call 5. Database 6. Pin Pad Settings 7. Keys Injection
2.	Input the Password and press [ENTER]	ENTER PASSWORD:
3.	 Press [1] or [2] to enter the function: [1] for start Key Injection process, proceed to step #4, then skip to step #7. [2] for set baud rate, skip to step #5. 	KEY INJECT 1. Start 2. Set Baudrate
4.	Session Started	KEY INJECT Receiving
5.	Use the [▲] & [▼] keys to find your selection and then press [ENTER] . Or Press the number corresponding with your selection.	BaudRate 1200 1. Set to 1200 2. Set to 2400 3. Set to 4800 4. Set to 9600
6.	After setup the baud rate then start session to comm	unication.
7.	Stop.	



6.7.8 Application Management

	- 4	
v	• 111	

Use this function to enter the App Load sub application.

STEP	Action	DISPLAY
8.	From the System Settings menu, press [9] to Select the AppManagement.	SYSTEM OPTIONS: 5. Database 6. Pin Pad Settings 7. Keys Injection 8. App Management
9.	Input the Password and press [ENTER]	ENTER PASSWORD:
10.	Use the [▲] & [▼] keys to find your selection and then press [ENTER] . Or Press the number corresponding with your selection.	APP LOAD 1. Activate 2. App Update 3. Configuration 4. Terminal SN
11.	Stop.	



6.7.8.1 Activate

1

Note Use this function to activate the App Load.

STEP	ACTION	DISPLAY
1.	From the System Settings menu, press [9] to Select the App Management.	SYSTEM OPTIONS: 6. Database 7. Pin Pad Settings 8. Keys Injection 9. App Management
2.	Input the Password and press [ENTER]	ENTER PASSWORD:
3.	Press [1] to activate App Load.	APP LOAD 1. Activate 2. App Update 3. Configuration 4. Terminal SN
4.	Press [1] for activate online and POS terminal connects to the LCS server to communicate. Then POS terminal displays communication messages, "Activated" or error messages.	ACTIVATE I. Online
5.	Stop.	



6.7.8.2 App Update

Note Use this function to download applications, parameters, signatures, certifications from ADS and download advertisements from ADD.

STEP	Αстіон	DISPLAY
1.	From the System Settings menu, press [9] to Select the App Management.	SYSTEM OPTIONS: 6. Database 7. Pin Pad Settings 8. Keys Injection 9. App Management
2.	Input the Password and press [ENTER]	ENTER PASSWORD:
3.	Press [2] for App Update.	APP LOAD I. Activate 2. App Update 3. Configuration 4. Terminal SN
4.	If Terminal prompt "Please do batch close at first" so do batch close first then back to this menu. If there is no this prompt, skip to Step 5.	APP UPDATE Please do batch close at first
5.	Terminal displays " Checking " while checking if there are available applications on the ADS.	Checking
6.	If there is no available download, the Terminal displays " No Available DownLD ".	No Available DownLD.



7.	If there are available, the Terminal automatic starts the download process; and displays " Downloading " with the download progress percentage. After finish downloading, the terminal displays " Success " and lists the downloaded applications.
8.	Stop.



6.7.8.3 Configuration

Note Use this function to configure the communication parameters of the App Load application, and Phone Setting is the function that allows user to set phone number to link to the BroadPOS Terminal Server.

STEP	ACTION	DISPLAY
1.	From the System Settings menu, press [9] to Select the App Management.	SYSTEM OPTIONS: 6. Database 7. Pin Pad Settings 8. Keys Injection 9. App Management
2.	Input the Password and press [ENTER]	ENTER PASSWORD:
3.	Press [3] for Configuration.	APP LOAD 1. Activate 2. App Update 3. Configuration 4. Terminal SN
4.	Press [1] to set Server URL and skip to Step 5. Press [2] to set Server Port and skip to Step 6. Press [3] for Phone Settings. Please refer to <u>Host</u> <u>Phones</u> .	CONFIGURATIONS 1. Server URL 2. Server Port 3. Phone Setting
5.	Set Server URL and press [ENTER].	SERVER URL
6.	Set Server Port and press [ENTER].	SERVER PORT
7.	Stop.	

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not beduplicated, published, or disclosed without PAX prior written permission.202



6.7.8.4 Terminal SN

Note

This function displays the SN and other information of the terminal.

STEP	ACTION	DISPLAY
1.	From the System Settings menu, press [9] to Select the App Management.	SYSTEM OPTIONS: 6. Database 7. Pin Pad Settings 8. Keys Injection 9. App Management
2.	Input the Password and press [ENTER]	ENTER PASSWORD:
3.	Press [4] for Terminal SN.	APP LOAD I. Activate 2. App Update 3. Configuration 4. Terminal SN
4.	Screen displays the SN and other information of the terminal.	
5.	Stop.	



6.7.8.5 App Info

Note

This function displays the App Info of each application.

STEP	ACTION	DISPLAY
1.	From the System Settings menu, press [9] to Select the App Management.	SYSTEM OPTIONS: 6. Database 7. Pin Pad Settings 8. Keys Injection 9. App Management
2.	Input the Password and press [ENTER]	ENTER PASSWORD:
3.	Press [5] for App Info.	APP LOAD 2. App Update 3. Configuration 4. Terminal SN 5. App Info
4.	Screen displays the App Info of each application. Press [ENTER] to go forward.	
5.	Stop.	



6.7 Communications

This Menu has following sub-menus pertaining to communication. These parameters affect communications during authorization and batching only. The following features are part of the Communication Menu:

- □ Main Communication
- Backup Comm
- Maximum Tries
- Connect Timeout

Menu Description

- Receive TimeoutDial Parameters
- U Wireless Parameters(for Terminal with Wireless Module)
- □ WiFi Parameters(for Terminal with WiFi Module)

6.7.1 Main Communication

Note Use this feature to set the main method of communication. If a method of communication not supported by the terminal is selected, the error message "NOT AVAILABLE" is displayed.

STEP	ACTION	DISPLAY
1.	From the Communication Options menu press [1] for Main Communication.	COMM. OPTIONS: 1. Main Communication 2. Backup Comm. 3. Maximum Tries 4. Connect Timeout
2.	Use the [▲] & [▼] keys to select the primary communication type. <u>Note:</u> For S90 WiFi, the first option is WiFi not	Main Comm.: I 1. Wireless 2. Dial
3.	Wireless. Stop	



6.7.2 Backup Communication

Note

Use this feature to set the backup method of communication. If a method of communication not supported by the terminal is selected, the error message "**NOT AVAILABLE**" is displayed.

STEP	Астіон	DISPLAY
1.	From the Communication Options menu press [2] for Backup Communication.	COMM. OPTIONS: 1. Main Communication 2. Backup Comm. 3. Maximum Tries 4. Connect Timeout
2.	 Default setting is [2]None. Use the [▲] & [▼] keys to select the primary communication type. <u>Note:</u> If in Main Communication menu Wireless is selected, then in this menu the first option is Dial. 	Backup Comm:2 1. Wireless 2. None
3.	Stop	



6.7.3 Maximum Tries

Note

Use this feature to set the maximum tries for communication.

STEP	ACTION	DISPLAY
1.	From the Communication Options menu press [3] for Maximum Tries.	COMM. OPTIONS: 1. Main Communication 2. Backup Comm. 3. Maximum Tries 4. Connect Timeout
2.	Terminal displays the current tries setting. Input the New tries # and press [ENTER]	Max Tries
3.	Stop	·



6.7.4 Connect Timeout

Note

Use this feature to set the timeout for connection.

STEP	ACTION	DISPLAY
4.	From the Communication Options menu press [4] for Connect Timeout.	COMM. OPTIONS: 1. Main Communication 2. Backup Comm. 3. Maximum Tries 4. Connect Timeout
5.	Terminal displays the current timeout setting. Input the New timeout and press [ENTER]	Connect Timeout 300
6.	Stop	



6.7.5 Receive Timeout

Note

Use this feature to set the timeout for receiving messages from host.

STEP	Αстіон	DISPLAY
7.	From the Communication Options menu press [5] for Receive Timeout.	COMM. OPTIONS: 2. Backup Comm. 3. Maximum Tries 4. Connect Timeout 5. Receive Timeout
8.	Terminal displays the current timeout setting. Input the New timeout and press [ENTER]	Receive Timeout 450
9.	Stop	



6.7.6 Dial Parameters


Note

All of the parameters that can be set for phone line communication are sub-menus under the Dial Parameters menu.

STEP	Αстіон	DISPLAY
1.	From the Communication Options menu press [6] for Dial Parameters.	Comm. Options 4. Connect Timeout 5. Receive Timeout 6. Dial Parameters 7. Wireless Parameters
	Press [1] to enter the Dial Type menu.	Dial Params:
2.	<u>OR</u>	I. Dial Type 2. Dialing Prefix
	Press [2] for Dialing Prefix.	
	If in Step 2, [1] Dial Type is selected, the Dial Type menu will be displayed.	Dial Type: I
3.	Use the [▲] & [▼] keys to find your selection and then press [ENTER]. Or Press the number corresponding with your selection.	2. Pulse
4.	If in Step 2, [2] Dialing Prefix is selected, enter the Dialing Prefix.	Dialing Prefix:
5.	Stop	I



6.8.7 Wireless Parameters

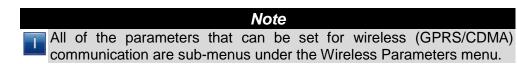

6.8.7.1 APN

Note This menu sets the APN for Wireless Connection.						
STEP	ACTION	DISPLAY				
1.	From the Communication Options menu press [8] for Wireless Parameters.	Comm. Options 4. Connect Timeout 5. Receive Timeout 6. LAN Parameters 7. Wireless Parameters				
2.	Use the [▲] & [▼] keys or Press [1] to enter the APN menu.	Wireless Params: 1. APN 2. User Name 3. Password 4. Provision				
3.	Input the desired value then press [ENTER].	APN:				
4.	Stop					



6.8.7.2 User Name

Note This menu sets the username for Wireless Connection.						
STEP	ACTION	DISPLAY				
1.	From the Communication Options menu press [8] for Wireless Parameters.	Comm. Options 4. Connect Timeout 5. Receive Timeout 6. LAN Parameters 7. Wireless Parameters				
2.	Use the [▲] & [▼] keys or Press [2] to enter the User Name menu.	Wireless Params: 1. APN 2. User Name 3. Password 4. Provision				
3.	Input the desired value then press [ENTER].	User Name:				
4.	Stop					



6.8.7.3 Password

Note							
This menu sets the password for Wireless Connection.							
STEP	ACTION	DISPLAY					
1.	From the Communication Options menu press [8] for Wireless Parameters.	Comm. Options 4. Connect Timeout 5. Receive Timeout 6. LAN Parameters 7. Wireless Parameters					
2.	Use the [▲] & [▼] keys or Press [3] to enter the Password menu.	Wireless Params: I. APN 2. User Name 3. Password 4. Provision					
3.	Input the desired value then press [ENTER].	Password:					
4.	Stop						



6.8.7.4 Provision

Note This step is used to initially gain access to the CDMA network.								
STEP	ACTION	DISPLAY						
1.	From the Communication Options menu press [8] for Wireless Parameters.	Comm. Options 4. Connect Timeout 5. Receive Timeout 6. LAN Parameters 7. Wireless Parameters						
2.	Use the [▲] & [▼] keys or Press [4] to enter the Provision menu.	Wireless Params: 1. APN 2. User Name 3. Password 4. Provision						
3.	The screen will display Provisioning.							
4.	The Screen will display Programming completed successfully.							
5.	Stop							

214



6.8.8 WiFi Parameters

Note All of the parameters that can be set for WiFi communication are 1 sub-menus under the WiFi Parameters menu.

6.8.8.1 Security

Note							
This menu sets the username for WiFi Connection.							
ACTION	DISPLAY						
From the Communication Options menu press [7] for WiFi Parameters.	Comm. Options 4. Connect Timeout 5. Receive Timeout 6. Dial Parameters 7. WiFi Parameters						
Use the [▲] & [▼] keys or Press [1] to enter the Security menu.	WiFi Params: 1. Security 2. Password						
Use the [▲] & [▼] keys or Press number keys to set the security type.	Security Type: I I. WAP-TKIP 2. WAP2-AES						
Stop							
	is menu sets the username for WiFi Connection. ACTION From the Communication Options menu press [7] for WiFi Parameters. Use the [▲] & [▼] keys or Press [1] to enter the Security menu. Use the [▲] & [▼] keys or Press number keys to set the security type.						



6.8.8.2 Password

Note This menu sets the password for WiFi Connection.						
STEP	ACTION	DISPLAY				
6.	From the Communication Options menu press [7] for WiFi Parameters.	Comm. Options 4. Connect Timeout 5. Receive Timeout 6. Dial Parameters 7. WiFi Parameters				
7.	Use the [▲] & [▼] keys or Press [2] to enter the Password menu.	WiFi Params: 1. Security 2. Password				
8.	Input the desired value then press [ENTER].	Password:				
9.	Stop					



APPENDIX A - Receipts

A.1 Credit Card Receipts Template

		\rightarrow	Halving Line
Header Line #1		\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 1]
Header Line #2		\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 2]
Header Line #3		\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 3]
Header Line #4		\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 4]
Header Line #5		\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 5]
Host Logo		\rightarrow	Host logo which is from host (Only available when the host provides)
<demo modi<="" td=""><td>Ξ></td><td></td><td></td></demo>	Ξ>		
DO NOT CAS	SH	\rightarrow	Print this mark only when the POS terminal is in DEMO MODE
Terminal ID:	7777777	\rightarrow	The Terminal ID assigned by Host
04/09/2011	13:54:08	\rightarrow	Print the current date and time
Sale:		÷	Transaction Type. <u>Here are the definitions of legal transactions.</u>
Transaction #	24	\rightarrow	Transaction Number is incremental, do not print if it is a duplicated transaction.
Card Type:	MasterCard	\rightarrow	Card Type [Please refer to requirement specifications]
Account:	********5454	\rightarrow	Card Number.
Exp. Date:	1214	\rightarrow	Expiration Date
Entry:	Manual	\rightarrow	Entry. [Swiped Manual Contactless]
Server[132]:	Lily	\rightarrow	Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require.
Invoice #	31492	\rightarrow	Invoice # [Merchant Settings – Additional Prompts – Invoice Mode]
Table No.:	2	\rightarrow	Number of table Only supported in Restaurant Industry. [Merchant Settings – Additional Prompts – Table Mode]
No. of Guests:	5	\rightarrow	Number of Guests. Only supported in Restaurant Industry. [Merchant Settings – Additional Prompts – Guest No. Mode]
Amount:	200.00	\rightarrow	Base transaction amount
[TIP 1]:	1.00	\rightarrow	Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1". In Restaurant industry, Tip 1 is always on. When In Tip Menu is selected or In Transaction is bypassed, it will display "\$,_" for the cardholder to write tip amount. When Auto Percent is selected, it will display high amount percent, low amount and "\$,"
		\rightarrow	Halving line
Total:	201.00	\rightarrow	Base amount and tip In Transaction. It is a reference for the merchant to calculate the total amount.
[TIP 2]:	\$,	÷	Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2". In Restaurant industry, When In Tip Menu is selected or In Transaction is bypassed, it will display "\$," for the cardholder to write tip amount. When Auto Percent is selected, it will display high amount percent, low amount and "\$,"
	2.00	\rightarrow	Low amount percent for tip
Tip Amt: 1%	I		

Items in blue are conditionally optional. If not given, these items should not be printed.



[TIP 3]: \$,	>	Amount of tip 3, if enabled. Tip name should be printed to replace "Tip 3". In Restaurant industry, When In Tip Menu is selected or In Transaction is bypassed, it will display "\$," for the cardholder to write tip amount. When Auto Percent is selected, it will display high amount percent, low amount and "\$,"
Total: \$,	<i>→</i>	Total amount of the above tip and amount. In Restaurant industry, When In Tip Menu and Auto Percent is selected or In Transaction is bypassed, it will display "\$, " for the cardholder to write total amount.
Ref. Number 88888888	\rightarrow	Reference Number (do not print if null)
Auth. Code: 000000		
	\rightarrow	Approval Code. If no auth code, the value will be null.
AVS Response: 0	\rightarrow	Available for Sale, Return and Auth transaction.
AVS Code AVS	\rightarrow	Print the AVS code message from the host
Message:		
CVD Response: P	\rightarrow	Available for Sale, Return and Auth transaction.
CVD Message CVD	\rightarrow	Print the CVD message from the host
Response: APPROVED OFFLINE	\rightarrow	Print "APPROVED OFFLINE" in demo mode
Detailed Information	\rightarrow	Print the detailed information from the host
Merchant Receipt Data	\rightarrow	Print the merchant receipt data from the host
APP DUPE ! I AGREE TO PAY ABOVE TOTAL	<i>→</i>	Print this line if it is a duplicated transaction.
AMOUNT ACCORDING TO CARD ISSUER AGREEMENT (MERCHANT AGREEMENT IF CREDIT VOUCHER)	<i>→</i>	Disclaimer [Operation Settings - Disclaimer]
x	<i>→</i>	Signature Line
SIGNATURE	\rightarrow	Print "SIGNATURE" in Manual Entry, Print Cardholder name in Swiped Entry
IMPRINT CARD	\rightarrow	Only print this line in manual entry and card is present
MERCHANT COPY		
Trailer Line #1	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 1]
Trailer Line #2	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 2]
Trailer Line #3	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 3]
Trailer Line #4	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 4]
Trailer Line #5		Editable. [Merchant Settings – Edit Trailer – Trailer Text 5]
		Halving Line
	\rightarrow	Halving Line
Header Line #1		Editable. [Merchant Settings – Edit Header – Header Text 1]
Header Line #2		Editable. [Merchant Settings – Edit Header – Header Text 2]
Header Line #3	<i>→</i>	Editable. [Merchant Settings – Edit Header – Header Text 3]
Header Line #4	→	Editable. [Merchant Settings –Edit Header – Header Text 4]
Header Line #5	\rightarrow	Editable. [Merchant Settings –Edit Header – Header Text 5]



Troubleshooting			See 199.8
Host Logo			Host Logo which is from host (Only available when the host provides)
COPY			Print "COPY" on customer receipt
<demo mode=""></demo>			
DO NOT CA	ASH	\rightarrow	Print this mark only when the POS terminal is in DEMO MODE
Terminal ID:	7777777	\rightarrow	The Terminal ID assigned by Host
04/09/2011	13:54:08	\rightarrow	Print the current date and time
Sale:		\rightarrow	Transaction Type. <u>Here are the definitions of legal transactions.</u>
Transaction #	24	\rightarrow	Transaction Number is incremental, do not print if it is a duplicated transaction.
Card Type:	MasterCard	\rightarrow	Card Type
Account:	*********5454	\rightarrow	Card Number
Entry:	Manual	\rightarrow	Entry. [Swiped Manual Contactless]
Sonvor[122]:	Lily		Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans
Server[132]:	Lity	\rightarrow	don't require.
Invoice #	31492	\rightarrow	Invoice # [Merchant Settings – Additional Prompts – Invoice Mode]
Table No.:	2	\rightarrow	Number of table Only supported in Restaurant Industry. [Merchant Settings – Additional
			Prompts – Table Mode]
No. of Guests:	5	\rightarrow	Number of Guests. Only supported in Restaurant Industry. [Merchant Settings – Additional Prompts – Guest No. Mode]
Amount:	200.00	\rightarrow	Base transaction amount
			Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1". In Restaurant
[TIP 1]:	1.00		industry, Tip 1 is always on. When In Tip Menu is selected or In Transaction is bypassed, it
tur il.	1.00 →	7	will display "\$" for the cardholder to write tip amount. When Auto Percent is
			selected, it will display high amount percent, low amount and "\$,_"
		\rightarrow	Halving line
Total:	201.00	\rightarrow	Base amount and tip In Transaction. It is a reference for the merchant to calculate the total
			amount.
			Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2". In Restaurant
	^		industry, When In Tip Menu is selected or In Transaction is bypassed, it will display
[TIP 2]:	۵ <u></u>	\rightarrow	"\$," for the cardholder to write tip amount. When Auto Percent is selected, it will
			display high amount percent, low amount and "\$"
Tip Amt: 1%	2.00	\rightarrow	Low amount percent for tip
Tip Amt: 90%	180.00	\rightarrow	High amount percent for tip
			Amount of tip 3, if enabled. Tip name should be printed to replace "Tip 3". In Restaurant
[TIP 3]:	\$,	\rightarrow	industry, When In Tip Menu is selected or In Transaction is bypassed, it will display "\$,_" for the cardholder to write tip amount. When Auto Percent is selected, it will
			display high amount percent, low amount and "\$"
			Total amount of the above tip and amount. In Restaurant industry, When In Tip Menu and
Total:	\$,	\rightarrow	Auto Percent is selected or In Transaction is bypassed, it will display "\$, " for the
			cardholder to write total amount.
Ref. Number	88888888	\rightarrow	Reference Number (do not print if null)
Auth. Code:	000000	\rightarrow	Approval Code
	I		



0	\rightarrow	Available for Sale, Return and Auth transaction.
0.10		irrandore jor bare, nerara and fillit transaction.
AVS	\rightarrow	Print the AVS code message from the host
Р	\rightarrow	Available for Sale, Return and Auth transaction.
CVD	\rightarrow	Print the CVD message from the host
PROVED OFFLINE	\rightarrow	Print "APPROVED OFFLINE" in demo mode
mation	\rightarrow	Print the detailed information from the host
eipt Data	\rightarrow	Print the customer receipt data from the host
PE	\rightarrow	Print this line if it is a duplicated transaction.
COPY		
e #1	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 1]
e #2	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 2]
e #3	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 3]
e #4	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 4]
e #5	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 5]
ASL PAREL	÷	Advertisement 1
<u>191</u>	÷	Advertisement 2
ifestyle	<i>→</i>	Advertisement 3 Halving Line
	CVD PROVED OFFLINE mation ipt Data PE COPY #1 #2 #3 #4 #5 COPY #1 #2 #3 #4 #5 COPY	CVD>PROVED OFFLINE>mation>ipt Data>PE>cOPY>#1>#2>#3>#4>#5>Image: Composition of the second of t



A.2 Debit Card Receipts Template


		\rightarrow	Halving Line
Header Line #1			Editable. [Merchant Settings – Edit Header – Header Text 1]
Header Line #2			Editable. [Merchant Settings – Edit Header – Header Text 2]
Header Line #3			Editable. [Merchant Settings – Edit Header – Header Text 3]
	Header Line #4	\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 4]
	Header Line #5	\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 5]
	Host Logo	\rightarrow	Host Logo which is from broad pos server.
<[DEMO MODE>		
DC	O NOT CASH	\rightarrow	Print this mark only when the POS terminal is in DEMO MODE
Terminal ID:	7777777	÷	Terminal ID of the POS terminal, Terminal ID value should be blank if POS terminal is in Demo Mode.
04/09/2011	13:54:08	\rightarrow	Print the current date and time
DebitSale	:	\rightarrow	Legal Value: [Debit Sale/ Debit Refund]
Transaction #	24	\rightarrow	Transaction Number is incremental, do not print if it is a duplicated transaction.
Account:	*********4393	\rightarrow	Card Number,
Entry:	Swiped	\rightarrow	Entry. [Swiped]
Server[132]:	Lily	\rightarrow	Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require.
Invoice #	31492	\rightarrow	Invoice # [Merchant Settings – Additional Prompts –Invoice Mode]
Table No.:	2	\rightarrow	Number of table Only supported in Restaurant Industry. [Merchant Settings – Additional Prompts – Table Mode]
No. of Guests:	5	\rightarrow	Number of Guests. Only supported in Restaurant Industry. [Merchant Settings – Additional Prompts – Guest No. Mode]
Amount:	200.00	\rightarrow	Base transaction amount
[Tip 1]:	1.00	\rightarrow	Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1"
[Tip 2]:	2.00	\rightarrow	Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2"
[Tip 3]:	3.00	\rightarrow	Amount of tip 3, if enabled. Tip name should be printed to replace "Tip 3"
Cash Back:	20.00	\rightarrow	Cash Back amount [Merchant Settings – Additional Prompts – Cash Back Prompt]
Merchant Fee:	20.00	→	Merchant Fee [Merchant Settings – Merchant Fee]
Total:	246.00	÷	Total amount (Do not print if only one amount exists)
Ref. Number	88888888	\rightarrow	<i>Reference Number (do not print if null)</i>
Auth. Code:	000000	\rightarrow	Auth Code
Response:	APPROVED OFFLINE	→	Print "APPROVED OFFLINE" in demo mode
	VERBIAGE 1	\rightarrow	Message available only when host provides
VERBIAGE 2			
		→ 、	Message available only when host provides
VERBIAGE 3		\rightarrow	Message available only when host provides
APP DUPE			Print this line if it is a duplicated transaction.
MI	ERCHANT COPY		
l			

Items in blue & bold are conditionally optional. If not given, these items should not be printed.



Houoreshooting			
Trailer	Line #1	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 1]
Trailer	Line #2	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 2]
Trailer	Line #3	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 3]
	Line #4	→	Editable. [Merchant Settings – Edit Trailer – Trailer Text 5]
	Line #5		
Trailer	Line #0	→ 、	Editable. [Merchant Settings – Edit Trailer – Trailer Text 5]
		÷	Halving Line
		\rightarrow	Halving Line
Header	r Line #1	\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 1]
Header	r Line #2	\rightarrow	Editable. [Merchant Settings –Edit Header – Header Text 2]
Header Line #3		\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 3]
	r Line #4	\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 4]
	r Line #5	\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 5]
	Logo	\rightarrow	Host Logo which is from host (Only available when the host provides)
CC)PY	\rightarrow	Print "COPY" on customer receipt
<demo< td=""><td>MODE></td><td>\rightarrow</td><td>Print this mark only when the POS terminal is in DEMO MODE</td></demo<>	MODE>	\rightarrow	Print this mark only when the POS terminal is in DEMO MODE
DO NO	T CASH	7	Print this mark only when the POS terminal is in DEMO MODE
Terminal ID:	7777777	\rightarrow	Terminal ID of the POS terminal, Terminal ID value should be blank if POS terminal is in Demo Mode.
04/09/2011	13:54:08	\rightarrow	Print the current date and time
Debit Sale:		\rightarrow	Legal Value: [Debit Sale Debit Refund]
Transaction #	24	\rightarrow	Transaction Number is incremental, do not print if it is a duplicated transaction.
Account:	***********4393	\rightarrow	Card Number
Entry:	Swiped	→	Entry. [Swiped]
Server[132]:	Lily	\rightarrow	Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require.
Invoice #	31492	\rightarrow	Invoice # [Merchant Settings – Additional Prompts – Invoice Mode]
Amount:	200.00	÷	
[Tip 1]:	1.00		Base transaction amount
		→	Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1"
[Tip 2]:	2.00	\rightarrow	Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2"
[Tip 3]:		\rightarrow	
	3.00		Amount of tip 3, if enabled. Tip name should be printed to replace "Tip 3"
Cash Back:	20.00	\rightarrow	Amount of tip 3, if enabled. Itp name should be printed to replace "Itp 3" Cash Back amount [Merchant Settings – Additional Prompts – Cash Back Prompt]
Cash Back:	20.00	\rightarrow	Cash Back amount [Merchant Settings – Additional Prompts – Cash Back Prompt]
Cash Back: Merchant Fee:	20.00 20.00	\rightarrow	Cash Back amount [Merchant Settings – Additional Prompts – Cash Back Prompt] Merchant Fee [Merchant Settings – Merchant Fee]
Cash Back: Merchant Fee: Total:	20.00 20.00 246.00	\rightarrow \rightarrow	Cash Back amount [Merchant Settings – Additional Prompts – Cash Back Prompt] Merchant Fee [Merchant Settings – Merchant Fee] Total amount (Do not print if only one amount exists)
Cash Back: Merchant Fee: Total: Ref. Number	20.00 20.00 246.00 88888888	\rightarrow \rightarrow \rightarrow	Cash Back amount [Merchant Settings – Additional Prompts – Cash Back Prompt] Merchant Fee [Merchant Settings – Merchant Fee] Total amount (Do not print if only one amount exists) Reference Number (do not print if null)
Cash Back: Merchant Fee: Total: Ref. Number Auth. Code: Response:	20.00 20.00 246.00 88888888 000000	$\begin{array}{c} \rightarrow \\ \rightarrow \end{array}$	Cash Back amount [Merchant Settings – Additional Prompts – Cash Back Prompt] Merchant Fee [Merchant Settings – Merchant Fee] Total amount (Do not print if only one amount exists) Reference Number (do not print if null) Auth Code Print "APPROVED OFFLINE" in demo mode
Cash Back: Merchant Fee: Total: Ref. Number Auth. Code: Response: VERB	20.00 20.00 246.00 88888888 000000 APPROVED OFFLINE	$\begin{array}{c} \rightarrow \\ \rightarrow \end{array}$	Cash Back amount [Merchant Settings – Additional Prompts – Cash Back Prompt] Merchant Fee [Merchant Settings – Merchant Fee] Total amount (Do not print if only one amount exists) Reference Number (do not print if null) Auth Code Print "APPROVED OFFLINE" in demo mode Message available only when host provides
Cash Back: Merchant Fee: Total: Ref. Number Auth. Code: Response: VERB	20.00 20.00 246.00 88888888 000000 APPROVED OFFLINE IAGE 1 IAGE 2	$\begin{array}{c} \rightarrow \\ \rightarrow \end{array}$	Cash Back amount [Merchant Settings – Additional Prompts – Cash Back Prompt] Merchant Fee [Merchant Settings – Merchant Fee] Total amount (Do not print if only one amount exists) Reference Number (do not print if null) Auth Code Print "APPROVED OFFLINE" in demo mode Message available only when host provides Message available only when host provides
Cash Back: Merchant Fee: Total: Ref. Number Auth. Code: Response: VERB VERB	20.00 20.00 246.00 88888888 000000 APPROVED OFFLINE IAGE 1	$\begin{array}{c} \rightarrow \\ \rightarrow \end{array}$	Cash Back amount [Merchant Settings – Additional Prompts – Cash Back Prompt] Merchant Fee [Merchant Settings – Merchant Fee] Total amount (Do not print if only one amount exists) Reference Number (do not print if null) Auth Code Print "APPROVED OFFLINE" in demo mode Message available only when host provides



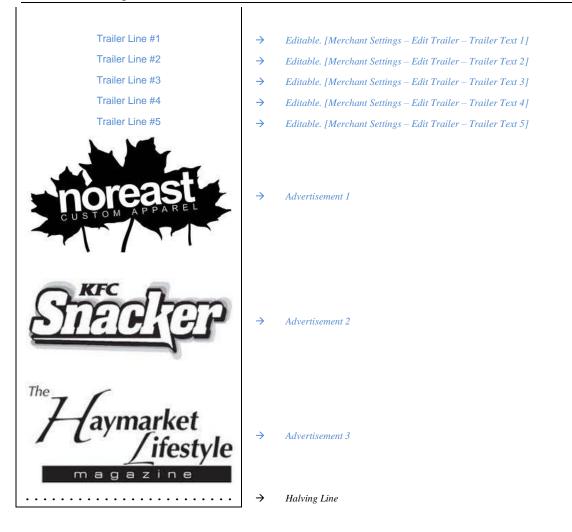



A.3 EBT Card Receipts Template

Header Line #1		\rightarrow	Halving Line
		\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 1]
Header Line #2		\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 1]
Header Line #3		\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 3]
Header Line #4		\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 4]
Header Line #5		\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 5]
Host Logo		\rightarrow	Host Logo which is from host (Only available when the host provides)
<demo mode=""></demo>	>		
DO NOT CASI	ł	\rightarrow	Print this mark only when the POS terminal is in DEMO MODE
Terminal ID:	7777777	÷	Terminal ID of the POS terminal, Terminal ID value should be blank if POS terminal is in Demo Mode.
04/09/2011	13:54:08	\rightarrow	Print the current date and time
EBT Sale:		\rightarrow	EDC Type, Transaction Type. <u>Here are the definitions of legal transactions</u> .
Food Stamps		\rightarrow	Account Type [Food Stamps / Cash Benefit / Voucher]
Transaction #	24	\rightarrow	Transaction Number is incremental (Do not print on balance receipt, do not print if it is a duplicated transaction)
Account: **	*********4393	\rightarrow	Card Number,
Entry:	Swiped	\rightarrow	Entry [Swiped Manual Contactless]
Server[132]:	Lily	\rightarrow	Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require.
Invoice #	31492	\rightarrow	Invoice # [Merchant Settings – Additional Prompts – Invoice Mode]
Voucher No.	1234567	\rightarrow	Voucher number. Only printed in voucher transaction
Amount:	200.00	\rightarrow	Base transaction amount, balance receipt doesn't have this field.
[Tip 1]:	1.00	\rightarrow	Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1"
[Tip 2]:	2.00	\rightarrow	Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2"
[Tip 3]:	3.00	\rightarrow	Amount of tip 3, if enabled. Tip name should be printed to replace "Tip 3"
Cash Back:	20.00	\rightarrow	Cash Back amount [Merchant Settings – Additional Prompts – Cash Back Prompt]
Merchant Fee:	20.00	÷	
	20.00	~	Merchant Fee [Merchant Settings – Merchant Fee]
Total:	246.00	\rightarrow	Total amount (Do not print if only one amount exists)
Ref. Number	88888888	\rightarrow	Reference Number (do not print if null)
Auth. Code:	000000	\rightarrow	Balance Inquiry should not print this line, void transactions should print the original auth
Decreases ADDC CL			code. If no auth code, the value will be null.
	ED OFFLINE	\rightarrow	Print "APPROVED OFFLINE" in demo mode
Food Stamps Balance:	32.00	\rightarrow	Print on inquiring EBT food stamps balance or both balance
Cash Benefit: Balance:	40.00	\rightarrow	Print on inquiring EBT cash benefit balance or both balance
VERBIAGE 1		\rightarrow	Message available only when host provides
VERBIAGE 2		\rightarrow	Message available only when host provides
VERBIAGE 3		\rightarrow	Message available only when host provides
APP DUPE		\rightarrow	Print this line if it is a duplicated transaction.

Items in blue & bold are conditionally optional. If not given, these items should not be printed.



MERC	HANT COPY		
÷			
	ler Line #1	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 1]
	ler Line #2	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 2]
Trail	ller Line #3	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 3]
Trail	ler Line #4	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 4]
Trailer Line #5		\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 5]
		\rightarrow	Halving Line
		\rightarrow	Halving Line
Header Line #1		\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 1]
Header Line #2		\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 2]
	der Line #3	\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 3]
	der Line #4	\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 4]
	der Line #5	\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 5]
	st Logo	\rightarrow	Host Logo which is from host (Only available when the host provides)
	COPY	\rightarrow	Print "COPY" on customer receipt
	IO MODE> IOT CASH	\rightarrow	Print this mark only when the POS terminal is in DEMO MODE
Terminal ID:	7777777	÷	Terminal ID of the POS terminal, Terminal ID value should be blank if POS terminal is in Demo Mode.
04/09/2011	13:54:08	\rightarrow	Print the current date and time
EBT Sale:		\rightarrow	EDC Type, Transaction Type. <u>Here are the definitions of legal transactions.</u>
Food Stamps		÷	Account Type [Food Stamps / Cash Benefit / Voucher]
Transaction #	24	\rightarrow	Transaction Number is incremental (Do not print on balance receipt, do not print if it is a duplicated transaction)
Account:	*********4393	\rightarrow	Card Number
Entry:	Swiped	\rightarrow	
			Entry [Swiped Manual Contactless]
Server[132]:	Lily	\rightarrow	Entry [Swiped Manual Contactless] Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require.
Server[132]: Invoice #	Lily 31492		
		→	Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require. Invoice # [Merchant Settings – Additional Prompts – Invoice Mode]
Invoice #	31492	\rightarrow \rightarrow \rightarrow	Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require. Invoice # [Merchant Settings – Additional Prompts – Invoice Mode] Base transaction amount, balance receipt doesn't have this field.
Invoice # Amount:	31492 200.00	$\begin{array}{c} \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \end{array}$	Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require. Invoice # [Merchant Settings – Additional Prompts – Invoice Mode] Base transaction amount, balance receipt doesn't have this field. Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1"
Invoice # Amount: [Tip 1]: [Tip 2]:	31492 200.00 1.00	$\begin{array}{c} \uparrow \\ \uparrow $	Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require. Invoice # [Merchant Settings – Additional Prompts – Invoice Mode] Base transaction amount, balance receipt doesn't have this field. Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1" Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2"
Invoice # Amount: [Tip 1]: [Tip 2]: [Tip 3]:	31492 200.00 1.00 2.00 3.00	$\begin{array}{c} \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\$	 Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require. Invoice # [Merchant Settings – Additional Prompts – Invoice Mode] Base transaction amount, balance receipt doesn't have this field. Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1" Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2" Amount of tip 3, if enabled. Tip name should be printed to replace "Tip 3"
Invoice # Amount: [Tip 1]: [Tip 2]: [Tip 3]: Cash Back:	31492 200.00 1.00 2.00 3.00 20.00	$\begin{array}{c} \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\$	 Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require. Invoice # [Merchant Settings – Additional Prompts – Invoice Mode] Base transaction amount, balance receipt doesn't have this field. Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1" Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2" Amount of tip 3, if enabled. Tip name should be printed to replace "Tip 3" Cash Back amount [Merchant Settings – Additional Prompts – Cash Back Prompt]
Invoice # Amount: [Tip 1]: [Tip 2]: [Tip 3]:	31492 200.00 1.00 2.00 3.00	$\begin{array}{c} \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\$	 Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require. Invoice # [Merchant Settings – Additional Prompts – Invoice Mode] Base transaction amount, balance receipt doesn't have this field. Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1" Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2" Amount of tip 3, if enabled. Tip name should be printed to replace "Tip 3"
Invoice # Amount: [Tip 1]: [Tip 2]: [Tip 3]: Cash Back:	31492 200.00 1.00 2.00 3.00 20.00	$\begin{array}{c} \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\$	 Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require. Invoice # [Merchant Settings – Additional Prompts – Invoice Mode] Base transaction amount, balance receipt doesn't have this field. Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1" Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2" Amount of tip 3, if enabled. Tip name should be printed to replace "Tip 3" Cash Back amount [Merchant Settings – Additional Prompts – Cash Back Prompt]
Invoice # Amount: [Tip 1]: [Tip 2]: [Tip 3]: Cash Back: Merchant Fee:	31492 200.00 1.00 2.00 3.00 20.00 20.00	$\begin{array}{c} \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\$	Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require. Invoice # [Merchant Settings – Additional Prompts – Invoice Mode] Base transaction amount, balance receipt doesn't have this field. Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1" Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2" Amount of tip 3, if enabled. Tip name should be printed to replace "Tip 3" Cash Back amount [Merchant Settings – Additional Prompts – Cash Back Prompt] Merchant Fee [Merchant Settings – Merchant Fee]
Invoice # Amount: [Tip 1]: [Tip 2]: [Tip 3]: Cash Back: Merchant Fee: Total: Ref. Number	31492 200.00 1.00 2.00 3.00 20.00 20.00 246.00	$\begin{array}{cccc} & & & \\ & & & & \\ & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & & \\ & $	 Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require. Invoice # [Merchant Settings – Additional Prompts – Invoice Mode] Base transaction amount, balance receipt doesn't have this field. Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1" Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2" Amount of tip 3, if enabled. Tip name should be printed to replace "Tip 3" Cash Back amount [Merchant Settings – Additional Prompts – Cash Back Prompt] Merchant Fee [Merchant Settings – Merchant Fee] Total amount (Do not print if only one amount exists)
Invoice # Amount: [Tip 1]: [Tip 2]: [Tip 3]: Cash Back: Merchant Fee: Total:	31492 200.00 1.00 2.00 3.00 20.00 20.00	$\begin{array}{c} \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\$	 Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require. Invoice # [Merchant Settings – Additional Prompts – Invoice Mode] Base transaction amount, balance receipt doesn't have this field. Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1" Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2" Amount of tip 3, if enabled. Tip name should be printed to replace "Tip 3" Cash Back amount [Merchant Settings – Additional Prompts – Cash Back Prompt] Merchant Fee [Merchant Settings – Merchant Fee] Total amount (Do not print if only one amount exists) Reference Number (do not print if null)



Food Stamps: 32.0 Cash Benefit: 40.0 VERBIAGE 1 VERBIAGE 2 VERBIAGE 3 APP DUPE CUSTOMER COPY Trailer Line #1 Trailer Line #2 Trailer Line #3		Print on inquiring EBT food stamps or both balance Print on inquiring EBT cash benefit or both balance Message available only when host provides Message available only when host provides Print this line if it is a duplicated transaction. Editable. [Merchant Settings – Edit Trailer – Trailer Text 1] Editable. [Merchant Settings – Edit Trailer – Trailer Text 2]
VERBIAGE 1 VERBIAGE 2 VERBIAGE 3 APP DUPE CUSTOMER COPY Trailer Line #1 Trailer Line #2	$\begin{array}{c} \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\$	Message available only when host provides Message available only when host provides Message available only when host provides Print this line if it is a duplicated transaction. Editable. [Merchant Settings – Edit Trailer – Trailer Text 1]
VERBIAGE 2 VERBIAGE 3 APP DUPE CUSTOMER COPY Trailer Line #1 Trailer Line #2	\rightarrow \rightarrow \rightarrow \rightarrow	Message available only when host provides Message available only when host provides Print this line if it is a duplicated transaction. Editable. [Merchant Settings – Edit Trailer – Trailer Text 1]
VERBIAGE 3 APP DUPE CUSTOMER COPY Trailer Line #1 Trailer Line #2	\rightarrow \rightarrow \rightarrow	Message available only when host provides Print this line if it is a duplicated transaction. Editable. [Merchant Settings – Edit Trailer – Trailer Text 1]
APP DUPE CUSTOMER COPY Trailer Line #1 Trailer Line #2	\rightarrow \rightarrow \rightarrow	Print this line if it is a duplicated transaction. Editable. [Merchant Settings – Edit Trailer – Trailer Text 1]
CUSTOMER COPY Trailer Line #1 Trailer Line #2	\rightarrow \rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 1]
Trailer Line #1 Trailer Line #2	\rightarrow	
Trailer Line #2	\rightarrow	
		Editable. [Merchant Settings – Edit Trailer – Trailer Text 2]
Trailer Line #3	\rightarrow	
		Editable. [Merchant Settings – Edit Trailer – Trailer Text 3]
Trailer Line #4	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 4]
Trailer Line #5	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 5]
CUSTOM APPAREL	<i>→</i>	Advertisement 1
Sieder	<i>→</i>	Advertisement 2
The Haymarket /ifestyle	÷	Advertisement 3
	. →	Halving Line



A.4 Gift Card Receipts Template

$ \begin{array}{c} \bullet \\ \bullet $	Halving Line Editable. [Merchant Settings –Edit Header – Header Text 1] Editable. [Merchant Settings –Edit Header – Header Text 2] Editable. [Merchant Settings –Edit Header – Header Text 3] Editable. [Merchant Settings –Edit Header – Header Text 4] Editable. [Merchant Settings –Edit Header – Header Text 5] Host Logo which is from host (Only available when the host provides) Print this mark only when the POS terminal is in DEMO MODE
$\begin{array}{c} \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \end{array}$	Editable. [Merchant Settings –Edit Header – Header Text 3] Editable. [Merchant Settings –Edit Header – Header Text 4] Editable. [Merchant Settings –Edit Header – Header Text 5] Host Logo which is from host (Only available when the host provides) Print this mark only when the POS terminal is in DEMO MODE
$\begin{array}{c} \\ \\ \\ \\ \\ \\ \\ \end{array}$	Editable. [Merchant Settings –Edit Header – Header Text 4] Editable. [Merchant Settings –Edit Header – Header Text 5] Host Logo which is from host (Only available when the host provides) Print this mark only when the POS terminal is in DEMO MODE
\rightarrow \rightarrow \rightarrow	Editable. [Merchant Settings –Edit Header – Header Text 5] Host Logo which is from host (Only available when the host provides) Print this mark only when the POS terminal is in DEMO MODE
\rightarrow	Host Logo which is from host (Only available when the host provides) Print this mark only when the POS terminal is in DEMO MODE
→	Print this mark only when the POS terminal is in DEMO MODE
\rightarrow	
	Terminal ID of the POS terminal, Terminal ID value should be blank if POS terminal is in Demo Mode.
\rightarrow	Print the current date and time
÷	EDC Type, Trans Type <u>Here are the definitions of legal transactions</u>
→	Transaction Number is incremental (Do not print on balance receipt, do not print if it is a duplicated transaction) Card Number,
\rightarrow	Replace/Merge transactions requires new card only. Issue Virtual requires full card number.
\rightarrow	Expiration Date
\rightarrow	Entry. [Swiped], [Manual]
\rightarrow	Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require.
\rightarrow	Invoice # [Merchant Settings – Additional Prompts – Invoice Mode]
\rightarrow	Base transaction amount, balance, deactivation receipt doesn't have this field.
\rightarrow	Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1"
\rightarrow	Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2"
\rightarrow	Amount of tip 3, if enabled. Tip name should be printed to replace "Tip 3"
→	Total amount (Do not print if only one amount exists)
\rightarrow	Reference Number (do not print if null)
\rightarrow	Only for Pre-Auth
\rightarrow	Approval Code
\rightarrow	Print "APPROVED OFFLINE" in demo mode
\rightarrow	Print on inquiring balance, issue, sale, void and deact without refund, and could be replaced by "Refund:" while do deact with refund.
\rightarrow	Print the detailed information from the host
→	Print the merchant receipt data from the host
\rightarrow	Print this line if it is a duplicated transaction.
	$ \begin{array}{cccccccccccccccccccccccccccccccccccc$

Items in blue & bold are conditionally optional. If not given, these items should not be printed.



Tra	iler Line #1	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 1]
Tra	iler Line #2	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 2]
Tra	iler Line #3	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 3]
Tra	iler Line #4	→	Editable. [Merchant Settings – Edit Trailer – Trailer Text 4]
	iler Line #5	÷	Editable. [Merchant Settings – Edit Trailer – Trailer Text 5]
		÷	Halving Line
		,	Indiving Line
		÷	Halving Line
Header Line #1		\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 1]
Header Line #2		÷	Editable. [Merchant Settings – Edit Header – Header Text 2]
Header Line #2 Header Line #3		\rightarrow	Editable. [Merchant Settings –Edit Header – Header Text 3]
Hea	der Line #4	\rightarrow	Editable. [Merchant Settings –Edit Header – Header Text 4]
Hea	ader Line #5	\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 5]
Но	ost Logo	\rightarrow	Host Logo which is from host (Only available when the host provides)
	COPY	\rightarrow	Print "COPY" on customer receipt
<dem< td=""><td>IO MODE></td><td></td><td></td></dem<>	IO MODE>		
DO N	JOT CASH	\rightarrow	Print this mark only when the POS terminal is in DEMO MODE
Merchant ID:	0	\rightarrow	The current merchant ID. Print it if multi merchant mode is on.
T . 115			Terminal ID of the POS terminal, Terminal ID value should be blank if POS terminal is in
Terminal ID:	7777777	\rightarrow	Demo Mode.
04/09/2011	13:54:08	\rightarrow	Print the current date and time
Gift Redemp	tion:	\rightarrow	EDC Type, Trans Types. <u>Here are the definitions of legal transactions</u>
Transaction #	24	\rightarrow	Transaction Number is incremental (Do not print on balance receipt, do not print if it is a duplicated transaction)
			Card Number,
			Curu Munder,
Account:	**********4393	\rightarrow	Replace/Merge transactions requires new card only
Account:	*********4393	\rightarrow	Replace/Merge transactions requires new card only. Issue Virtual requires full card number.
Account: Exp. Date:	*********4393 1214	\rightarrow	
			Issue Virtual requires full card number.
Exp. Date: Entry:	1214 Swiped	\rightarrow	Issue Virtual requires full card number. Expiration Date Entry. [Swiped]
Exp. Date:	1214	÷	Issue Virtual requires full card number. Expiration Date Entry. [Swiped]
Exp. Date: Entry:	1214 Swiped	\rightarrow	Issue Virtual requires full card number. Expiration Date Entry. [Swiped] Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans
Exp. Date: Entry: Server[132]:	1214 Swiped Lily	→→	Issue Virtual requires full card number. Expiration Date Entry. [Swiped] Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require.
Exp. Date: Entry: Server[132]: Invoice #	1214 Swiped Lily 31492	\rightarrow \rightarrow \rightarrow	Issue Virtual requires full card number. Expiration Date Entry. [Swiped] Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require. Invoice # [Merchant Settings – Additional Prompts – Invoice Mode]
Exp. Date: Entry: Server[132]: Invoice # Amount:	1214 Swiped Lily 31492 200.00	$\begin{array}{c} \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \end{array}$	Issue Virtual requires full card number. Expiration Date Entry. [Swiped] Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require. Invoice # [Merchant Settings – Additional Prompts – Invoice Mode] Base transaction amount, balance, deactivation receipt doesn't have this field.
Exp. Date: Entry: Server[132]: Invoice # Amount: [Tip 1]:	1214 Swiped Lily 31492 200.00 1.00	$\begin{array}{c} \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \end{array}$	Issue Virtual requires full card number. Expiration Date Entry. [Swiped] Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require. Invoice # [Merchant Settings – Additional Prompts – Invoice Mode] Base transaction amount, balance, deactivation receipt doesn't have this field. Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1" Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2"
Exp. Date: Entry: Server[132]: Invoice # Amount: [Tip 1]: [Tip 2]:	1214 Swiped Lily 31492 200.00 1.00 2.00	$\begin{array}{c} \rightarrow \\ \rightarrow \end{array}$	Issue Virtual requires full card number. Expiration Date Entry. [Swiped] Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require. Invoice # [Merchant Settings – Additional Prompts – Invoice Mode] Base transaction amount, balance, deactivation receipt doesn't have this field. Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1"
Exp. Date: Entry: Server[132]: Invoice # Amount: [Tip 1]: [Tip 2]: [Tip 3]:	1214 Swiped Lily 31492 200.00 1.00 2.00 3.00	$\begin{array}{c} \rightarrow \\ \rightarrow \end{array}$	Issue Virtual requires full card number. Expiration Date Entry. [Swiped] Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require. Invoice # [Merchant Settings – Additional Prompts – Invoice Mode] Base transaction amount, balance, deactivation receipt doesn't have this field. Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1" Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2"
Exp. Date: Entry: Server[132]: Invoice # Amount: [Tip 1]: [Tip 2]: [Tip 3]:	1214 Swiped Lily 31492 200.00 1.00 2.00 3.00	$\begin{array}{c} \rightarrow \\ \rightarrow \end{array}$	Issue Virtual requires full card number. Expiration Date Entry. [Swiped] Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require. Invoice # [Merchant Settings – Additional Prompts – Invoice Mode] Base transaction amount, balance, deactivation receipt doesn't have this field. Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1" Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2"
Exp. Date: Entry: Server[132]: Invoice # Amount: [Tip 1]: [Tip 2]: [Tip 3]: Cash Back:	1214 Swiped Lily 31492 200.00 1.00 2.00 3.00 20.00	$\begin{array}{c} \rightarrow \\ \bullet \\ \rightarrow \end{array}$	Issue Virtual requires full card number. Expiration Date Entry. [Swiped] Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require. Invoice # [Merchant Settings – Additional Prompts – Invoice Mode] Base transaction amount, balance, deactivation receipt doesn't have this field. Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1" Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2" Amount of tip 3, if enabled. Tip name should be printed to replace "Tip 3"
Exp. Date: Entry: Server[132]: Invoice # Amount: [Tip 1]: [Tip 2]: [Tip 3]: Cash Back: Total:	1214 Swiped Lily 31492 200.00 1.00 2.00 3.00 20.00	$\begin{array}{c} \rightarrow \\ \rightarrow \end{array}$	Issue Virtual requires full card number. Expiration Date Entry. [Swiped] Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require. Invoice # [Merchant Settings – Additional Prompts – Invoice Mode] Base transaction amount, balance, deactivation receipt doesn't have this field. Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1" Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2" Amount of tip 3, if enabled. Tip name should be printed to replace "Tip 3"
Exp. Date: Entry: Server[132]: Invoice # Amount: [Tip 1]: [Tip 2]: [Tip 3]: Cash Back: Total: Ref. Number	1214 Swiped Lily 31492 200.00 1.00 2.00 3.00 20.00 226.00	$\begin{array}{c} \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \end{array}$	Issue Virtual requires full card number. Expiration Date Entry. [Swiped] Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require. Invoice # [Merchant Settings – Additional Prompts – Invoice Mode] Base transaction amount, balance, deactivation receipt doesn't have this field. Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1" Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2" Amount of tip 3, if enabled. Tip name should be printed to replace "Tip 3" Total amount (Do not print if only one amount exists) Reference Number (do not print if null)



Balance: 20.00	\rightarrow	Print on inquiring balance, issue, sale, void and deact without refund, and could be replaced by "Refund:" while do deact with refund.
Detailed Information	\rightarrow	Print the detailed information from the host
Customer Receipt Data	\rightarrow	Print the customer receipt data from the host
APP DUPE		n salsti sever tita a
CUSTOMER COPY	\rightarrow	Print this line if it is a duplicated transaction.
COSTOMER COFT		
Trailer Line #1	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 1]
Trailer Line #2	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 2]
Trailer Line #3	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 3]
Trailer Line #4	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 4]
Trailer Line #5	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 5]
CUSTOM APPAREL	÷	Advertisement 1
Stedler	÷	Advertisement 2
The Haymarket Lifestyle	÷	Advertisement 3
••••••	\rightarrow	Halving Line



A.5 Cash Receipts Template

Cash Sale & Void Receipts Template

Items in blue & bold are condition	onally option	al. If no	ot given, these items should not be printed.
		\rightarrow	Halving Line
Header Line #1		\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 1]
Header Line #2		\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 2]
Header Line #3		\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 3]
Header Line #4		\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 4]
Header Line #5		\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 5]
Host Logo		\rightarrow	Host Logo which is from broad pos server.
<demo mode=""></demo>			Drive this mark subsuch as the DOS terminal is in DEMO MODE
DO NOT CASH		\rightarrow	Print this mark only when the POS terminal is in DEMO MODE
04/09/2011	13:54:08	\rightarrow	Print the current date and time
Cash Sale:		÷	Legal Value: [Cash Sale/Cash Void/Sale/Cash Void/Return]
Transaction #	24	\rightarrow	Transaction Number is incremental, do not print if it is a duplicated transaction.
Server[132]:	Lily	\rightarrow	Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require.
Invoice #	31492	\rightarrow	Invoice # [Merchant Settings – Additional Prompts –Invoice Mode]
Paid Cash		\rightarrow	The way of the payment is cash.
Amount:	200.00	\rightarrow	Base transaction amount
[Tip 1]:	1.00	\rightarrow	Amount of tip 1, if enabled. Tip name should be printed to replace "Tip 1"
[Tip 2]:	2.00	\rightarrow	Amount of tip 2, if enabled. Tip name should be printed to replace "Tip 2"
[Tip 3]:	3.00	\rightarrow	Amount of tip 3, if enabled. Tip name should be printed to replace "Tip 3"
Total:	206.00	→	Total amount (Do not print if only one amount exists)
MERCHANT COPY			
Trailer Line #1		\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 1]
Trailer Line #2		\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 2]
Trailer Line #3		\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 3]
Trailer Line #4		\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 4]
Trailer Line #5		\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 5]
		\rightarrow	Halving Line

(Cash Void receipt is the same, except transaction type is "Cash Void".)



Cash Return (Refund) Receipts Template

	→	Halving Line
Header Line #1	\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 1]
Header Line #2	\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 2]
Header Line #3	\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 3]
Header Line #4	\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 4]
Header Line #5	\rightarrow	Editable. [Merchant Settings – Edit Header – Header Text 5]
Host Logo	\rightarrow	Host Logo which is from broad pos server.
<demo mode=""></demo>		
DO NOT CASH	\rightarrow	Print this mark only when the POS terminal is in DEMO MODE
04/09/2011 13:54:	:08 →	Print the current date and time
Cash Refund:	÷	Transaction Type.
Transaction #	24 →	Transaction Number is incremental, do not print if it is a duplicated transaction.
Server[132]:	_ily	Server ID and name [Merchant Settings – Additional Prompts –Server ID Mode] Void trans don't require.
Invoice # 314	92 →	Invoice # [Merchant Settings – Additional Prompts –Invoice Mode]
Paid Cash	\rightarrow	The way of the payment is cash.
Amount: 200.	.00 >	Base transaction amount
MERCHANT COPY		
Trailer Line #1	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 1]
Trailer Line #2	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 2]
Trailer Line #3	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 3]
Trailer Line #4	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 4]
Trailer Line #5	\rightarrow	Editable. [Merchant Settings – Edit Trailer – Trailer Text 5]
	·· →	Halving Line

Items in blue & bold are conditionally optional. If not given, these items should not be printed.



APPENDIX B - Troubleshooting

Note

This section briefly describes how to troubleshoot some possible common problems that may arise during the normal operation of the POS Terminal POS terminal. Check the list below for a possible cause of the problem you are experiencing before requesting service for this unit. A few simple checks that you can perform yourself may solve your specific problem and restore proper operation. If you are still unable to solve this problem, contact your technical support help desk.

B.1 General Troubleshooting

Where is the Serial Number located?

There is a white label on the underside of the terminal; the serial number is under the bar code on this label.

The serial number begins with S/N and is composed of, followed by 8 digits.

The terminal seems to have no power.

- Check the connections of the AC electrical power adapter. The electrical plug should be fully plugged into the electrical wall outlet, and the power adapter's barrel connector is properly inserted into the connector labeled **PWR** on the terminal's rear connections panel.
- If the terminal is equipped with a back-up battery or is a wireless terminal, press and hold the ON/OFF key for three seconds.
- Try plugging a different device into the electrical wall outlet.
- If possible, try a different power adapter.
- If using a wireless terminal, allow the battery to charge 10 to 12 hours with the terminal on and the AC adapter plugged into an electrical wall outlet.
- The screen contrast might be too high or too low causing the terminal to appear to be powered off.



(D) PAX

General Troubleshooting, Continued

"App. Incompatible Data'll be lost!"

A new application has been loaded. This application is not compatible with the previous application's data (transaction) format.

If there are transactions still in the terminal those needs to be batched, the previous application should be re-loaded so that the transactions can be batched. If this is the case, reboot the terminal and press **MENU** to return to the monitor download menu. Re-load the old application and parameters and close the batch. Load the new application again.

If there are no open batches, press ENTER to complete the new load.

"Application: Error In Parameters!"

An error occurred while reading the protocol parameters. Re-load the terminal's parameters.

"EDC ERROR!"

Perform a file system Rebuild from Monitor Menu with the PC LOADER.

WARNING, a file system Rebuild erases all transaction data and restarts the application.

"PARAMETERS ERROR"

Phone card parameters are either missing or are corrupted. Re-load the terminal's parameters.

"Prm Err: From:"

An error occurred while reading the protocol parameters. Re-load the terminal's parameters.

"WRONG PRM BLOCK RELOAD PARAMS!"

Re-load the terminal's parameters.

"FILE OPEN ERROR"

Perform a file system Rebuild from Monitor Menu with the PC LOADER.

WARNING, a file system Rebuild erases all transaction data and restarts the application.



"Storage is Full Need to Batch"

Close the current batch.

• Press FUNC + MENU, select the Batch.

"User F/S wasn't created or incorrect. Call Center to create User F/S"

Perform a file system Rebuild from Monitor Menu with the PC LOADER. **WARNING**, a Database Reset erases all transaction data and restarts the application.

"TRANS TYPE DISABL FOR THIS CARD"

The card type (VISA for example) has been disabled.

"Not relevant in this application"

A menu selection not supported by the terminal type was accessed. I.e., Radio Parameters was selected in a landline only terminal.

"Invalid Date!"

A month greater than 12 or a date greater than the number of days in the month was entered in the date field.

"Invalid Time!"

• An hour greater than 24 was entered as the current time.

• A STOP Time was entered that is earlier than the START Time (AutoDial Setup for example).

Receipt Prints "CANCELLED"

The terminal displays a host response, or other error message, stating the reason the transaction was cancelled. Contact your technical support help desk for assistance.

Error message when printing Print Setup Report.

Press ENTER to continue printing the report.





General Troubleshooting, Continued

The terminal time reverts to 1/1/1995 or 1/1/2000 after being removed from power source.

The internal battery needs to be replaced. This requires repair by a certified repair center.

The eight-digit user password has been forgotten.

Reload the parameters from.

Screen display is too light / dark.

The screen contrast is too high or too low. Adjust the Contrast by rebooting the terminal and press **MENU** to the monitor menu

"Invalid Terminal ID" or "Invalid Merchant ID".

This is usually displayed when trying to authorize a transaction directly after a download. Verify all of the Parameters for the Host Processor. One or more of the parameters are most likely incorrect.

"Bad Credit Batch"

"Bad Credit Batch" or "Bad Debit Batch" is a system message that is displayed and printed when an EDC batch will not close. This is usually due to the Host and terminal being out of balance. This means that the terminal has a balance that is different from the balance that the Host has. This message should be followed by a Host Specific message. Contact the Host Processor for more information.

New Batch Opened.

Close the current Batch.

Need to Batch! More Offlines.

The maximum number of stored (offline) transactions has been reached. Upload and batch the current transactions.



General Troubleshooting, Continued

Wrong Auth No, Try Again. (Auth No must be 6 digits only.)

Verify then enter the correct authorization number.

Re-enter ZIP Code

ZIP code format was not correct, must be 5 or 9 digits long.

Incorrect ZIP, Try Again. (ZIP code must be 5 or 9 digits only.)

The incorrect number of digits was entered three times when the Zip code was requested. Try the transaction again; enter either 5 or 9 digits when the ZIP code is requested.

The terminal appears to be locked up; pressing the MENU key does nothing.

Terminal needs to be reset.

- Remove power source from terminal. (Unplug from current. If terminal has • battery option, power terminal off.)
- The terminal will be reset.

The display is a line of black boxes.

The terminal needs to be repaired.



B.2 Communication Errors

"NO LINE" appears on the display of a Land Line Terminal.

- Check that the telephone (RJ-11) connector is securely inserted into the connector labeled LINE on the terminal's rear connections panel and into the telephone wall outlet.
- The POS Terminal was designed to use a dedicated analog telephone line. It should not be connected to a splitter or to a rollover telephone system.
- An exchange prefix may be required. Make sure terminal has correct settings for an exchange prefix.
- Disconnect the terminal from the phone line and connect the phone line to a telephone. Verify that the phone has a dial tone.
- If a phone or fax machine is daisy-chained to the terminal, disconnect the second device.
- If a digital line, turn off the CHECK LINE and DIAL TONE CHECK functions in the Communications menu.

"NO LINE" appears on the display of a Wireless Terminal.

- If using a wireless terminal, make sure that you are receiving radio coverage in the area where you are located.
- Turn Battery Saver off (see Menu Option).
- Try processing a transaction on a landline.



B.3 Printer Troubleshooting

The printer does not function properly.

- Check that the correct type of thermal paper is loaded in the print paper compartment and that it has been properly fed to the printer (underhand). Replace if required.
- If the terminal is on battery power only, fully charge the battery or put the terminal on the power adapter.
- Verify that the paper is not jammed or damaged.
 - 1. Try ejecting the jammed paper with the FEED function (if applicable).

2. Slowly and carefully pull the paper backward through the feed mechanism.

- If printer continues working even though the paper has been used up, check that the 'end of paper' detector in the printer mechanism is not blocked by debris or a torn piece of paper.
- If the printer is printing but the characters are incorrect or off-center, reload the font library.
- If the paper does not feed into the printer mechanism:
 - 1. Make sure the leading edge is even and undamaged
 - 2. Cut the paper at a slight angle with the left edge feeding first.



B.4 GPRS Troubleshooting

"E: SIM" appears on the display at the start of processing a transaction.

There is no SIM card in the terminal.

"REGISTER" message not updated to next message while processing.

Invalid or Bad SIM card.

"*98* 1#" message is not updated with next message while processing.

- There is an error in the terminal setup in the POS Terminal Management system; the APN name is missing or incorrect.
- Heavy traffic could be peak voice transmission time. Try again later.

"OPENNG" message is not updated with next message while processing.

- Destination IP Address is incorrect.
- There is an error in the POS Terminal Management System. The SSL and/or HTTPS library files are missing.



B.5 Download Troubleshooting

"Out of Rx-TX" error at the start of an AutoLoad or Parameter Load.

The "Out of Rx-Tx" message displayed on the terminal is followed by an "Open Com Error" message. The TMS error is "Terminal ####### not found".

The incorrect Site ID was entered during the download setup process. The ID entered does not exist in the TMS database. Correct the Site ID and start the DL process again.

Warning

Care must be taken when entering the Site ID. If the ID entered belongs to an existing file but that file was created for a different Merchant, the file might still load into the terminal. Always verify the information loaded after a DL completes.

"NO LINE" or no connection when attempting a download.

- Check that the telephone (RJ-11) connector is securely inserted into the connector labeled LINE on the terminal's rear connections panel and into the telephone wall outlet.
- The POS Terminal was designed to use a dedicated telephone line. It should not be connected to a splitter or to a rollover telephone system.
- Verify the DL Phone Number.
- Verify that the VIA function is set to Modem.
- Verify the baud rate. If rate is correct, try a lower rate.
- An exchange prefix may be required. Make sure terminal has correct settings for an exchange prefix.
- Verify that the DIAL function is set correctly for the phone system.
- Try another phone connection.
- Connect a phone on the line currently connected to the terminal. Do you hear a dial tone? If not, there is a problem with either the cable or the phone jack.

APPENDIX C – Glossary

A

AVS: Address Verification System. Address Verification System (AVS) is a system used to verify the identity of the person claiming to own the credit card.

B

Batch: The collection of current transactions stored in the terminal's database.

С

CID: Card Identification Number **CVC:** Card Verification Code **CVV:** Card Verification Value

E

EBT: Electronic Benefit Transfer

Η

HALO: High Amount Lock Out - maximum amount limit on sales, returns, and cash back

Р

PIN: Personal Identification Number -4 to 16-digit confidential code used by cardholders to identify themselves as the proper users of a credit or debit card to the Host computer.

PIN Pad: A small terminal used for entering Personal Identification Numbers (PINs). PIN Pads can encrypt PINs before sending them to a terminal or other controller. Some PIN Pads are equipped with built-in magnetic stripe card readers or are built into the terminal.

Pre-Dial Call: allows user to enable/disable pre-dial for faster processing time POS: Pont of Service

POS Terminal: Point of Sale Terminal - a terminal used at the purchase location, which is usually at a merchant's locale where the customer pays for goods or services received. Information concerning the sale can be entered into the terminal and transmitted to a remote Host computer for verification and processing.

S

S90: terminal from PAX SMA: Speed Messaging Application

NOTE: This document is CONFIDENTIAL and must be used exclusively for the operation of PAX programs. It may not be 241 duplicated, published, or disclosed without PAX prior written permission.



() PAX



V

V-Code: A unique 3-4 digit value printed on the back (front for AmericanExpress) of a card to validate card information during the authorization process. CID – American Express and Discover Card. CVC – MasterCard; CVV – Visa.

